






# groove GV-WC06 Atlas Alarm Clock Radio with USB and Wireless Charging User Manual

[Home](#) » [groove](#) » groove GV-WC06 Atlas Alarm Clock Radio with USB and Wireless Charging User Manual



GV-WC06 Atlas



	<b>30 Day Right To Return</b>  We do not envisage any problems occurring with your Groov-e GV-WC06 Atlas. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with your proof of purchase for an exchange or refund.
	<b>12 Month Guarantee</b>  This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase, in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.
	<b>Contact Us</b> Reach out to us at <a href="mailto:info@groov-e.co.uk">info@groov-e.co.uk</a> or visit <a href="http://www.groov-e.co.uk">www.groov-e.co.uk</a>

**“Congratulations** on your purchase and **Thank You** for choosing the Groov-e GV-WC06 Atlas . Please read the user guide carefully before using”

#### Contents [ [hide](#) ]

- [1 Important Safety Information](#)
- [2 Overview](#)
- [3 Operating Instructions](#)
- [4 Operating Instructions](#)
- [5 Charging](#)
- [6 FEATURES](#)
- [7 SPECIFICATIONS](#)
- [8 Guarantee](#)
- [9 DECLARATION OF CONFORMANCE](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

## Important Safety Information

1. Keep the product and all its parts out of reach of small children.
2. Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat. No naked flame sources, such as lighted candles, should be placed on the product.
3. Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
4. Do NOT attempt to open the product. This product does not contain any user-serviceable parts. Unauthorized handling of the device may damage it and will void your warranty.

 
5. Disconnect your Radio from the mains power supply during thunderstorms.
6. Always check that you have completely switched off your Radio before you change or disconnect the power supply.
7. If the Radio will not be used for a long period of time, make sure that all of the batteries are removed from the battery compartment and the mains power is unplugged.
8. Never throw batteries in a fire or attempt to open the outer casing. Batteries should not be exposed to excessive heat such as sunshine, fire or the like. Dispose of old batteries carefully.
9. Batteries are harmful if swallowed, so keep away from young children.

Only use the power supply that came with the product. Using an unauthorized power supply will invalidate your guarantee and may irrecoverably damage the product.



**Caution:** Danger of explosion if batteries are incorrectly replaced

## Overview

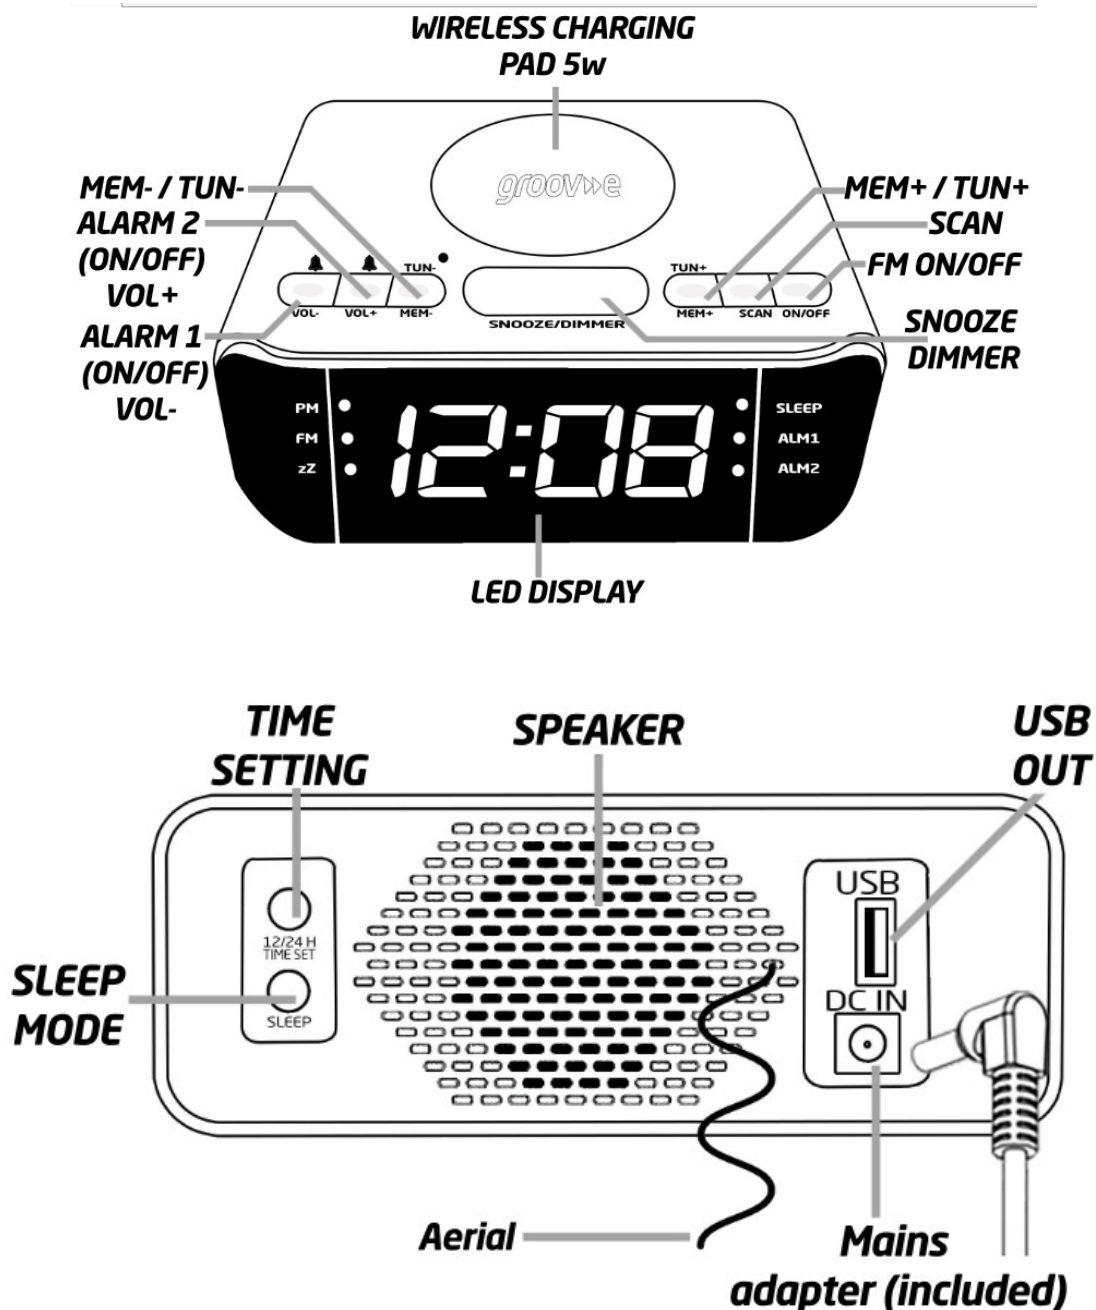

## Operating Instructions

### Power On/Off

#### To switch on:

 
Connect the adapter supplied to the “**DC IN**” charging port and plug in to your mains power outlet.

#### To Switch off:

Disconnect from the mains power outlet

### Time memory:

You can put 2 “AAA 1.5V” batteries into the bottom battery holder, this will may maintain power to the clocks time memory function should your power fail i.e. during a power cut.

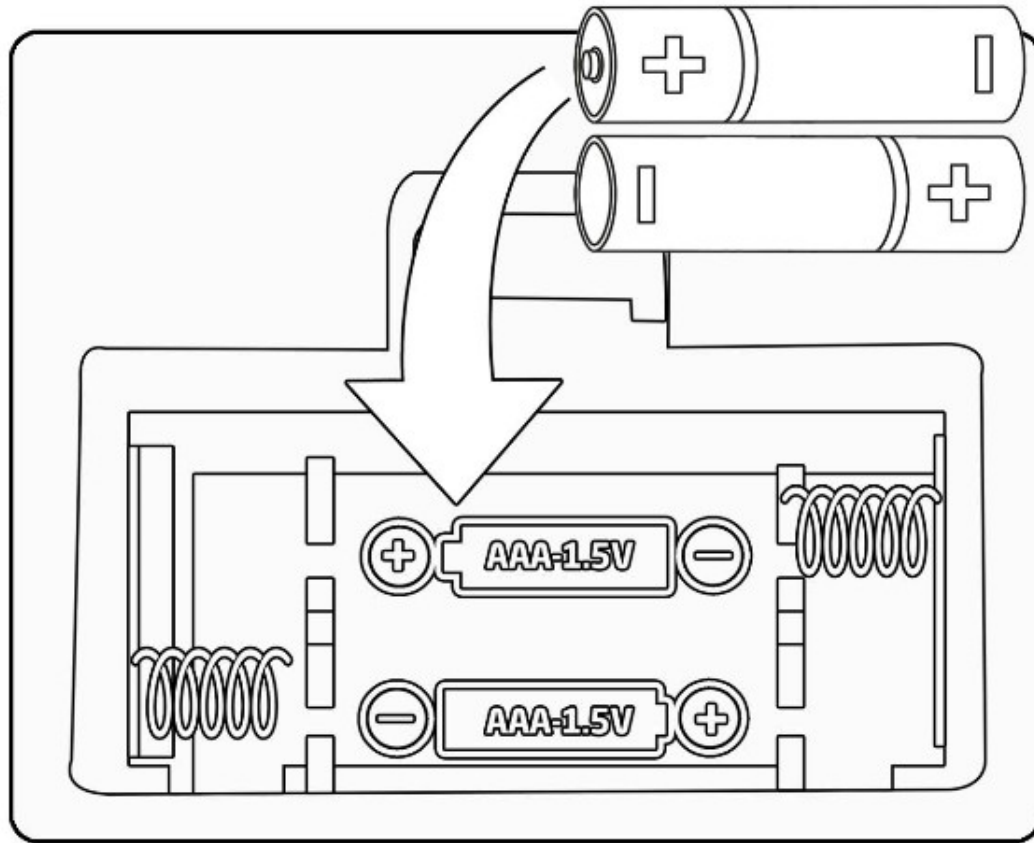

## Time Setting

In clock mode, long-press the “**Time Setting**” button and the hour number will begin to flash, short press the “**MEM-/TUN-**” or “**MEM+/TUN+**” button to adjust the hours then short press “Time Setting” button again and the minute numbers will begin to flash, short press the “**MEM-/TUN-**” or “**MEM+/TUN+**” button to adjust the minutes, short press the “Time Setting” button again to **save** the time settings and exit.

When first is switched on, the default time shows as “**12:08**” PM, short press the “**TTime SettTng**” button to switch between **12H/24H** time modes.

## Operating Instructions

### ALARM CLOCK SETTINGS

Ensure the radio function is switched off by long-pressing the **ON/OFF** button then when in clock mode, short press twice the “**Alarm Clock1**” button to turn on/off Alarm clock 1.

**When the Alarm 1 indicator lights**, long-press the “**Alarm Clock1**” button, the hour number will be flashing, short press “**MEM-/TUN-**” button or “**MEM+/TUN+**” button to adjust the hour.

Once you have finished setting the hour, Short press the “Alarm Clock1” button, and the minutes number will begin flashing, short press the “MEM-/TUN-” button or “MEM+/TUN+” button to adjust the minutes.

When you have finished setting the minutes, Short press the “Alarm Clock1” button, the panel display will show “BUZ”, you can short press the “MEM-/TUN-” button or “MEM+/TUN+” to select either “RAD” FM radio or “BUZ”

the default ring as the alarm tone. Please Note: When setting the Alarm to Radio it will default to the last station you were listening too before switching off the FM radio function.

Once you have finished setting the alarm tone, short press the “Alarm Clock1” button to enter the volume adjustment, short press the “MEM-/TUN-” button or “MEM+/TUN+” button to adjust the volume you require, short press the “Alarm Clock1” button to save all the settings and exit.

To stop the alarm clock1 when it rings, short press the “Alarm Clock1” button and it will stop and ring again the next day at the same time.

Alarm Clock 2 repeats the same settings as alarm clock 1.

### **SLEEP MODE**

In the FM radio mode, short press the “**Sleep Mode**” button to select 120mins / 90mins / 60mins / 45mins / 30mins / 15mins to turn off the FM Radio automatically or select “OFF” to turn off the Sleep mode.

### **SNOOZE/DIMMER FUNCTION**

#### **Snooze:**

Short press the “**Snooze/Dimmer**” button when the alarm rings, the alarm will stop, and ring again after 10 minutes.

#### **Dimmer:**

Short press the “**Snooze/Dimmer**” button to choose from 4 different levels of brightness of the display panel High/Medium/Low or Off.

### **FM RADIO**

 
1. Firstly position and fix the antenna aerial to receive the best possible FM
2. Long press the **ON/OFF** button to turn on the FM
3. ong press the **SCAN** button to search channels automatically, available channels will be saved in order of the preset positions until the auto search ends.

To move a discovered station to a favourite preset number:

1. Firstly scroll through the automatically saved preset stations by short pressing **MEM-/TUN-** button or **MEM+/TUN+**
2. Whilst listening to the station you wish to move long press the **TIME SETTING** button and the LED display will show a . flashing
3. Short press **MEM-/TUN-** button or **MEM+/TUN+** button to choose your favourite . Position number i.e. P01, then short press **TIME SETTING** button to save.
4. Then Short press **MEM-/TUN-** button or **MEM+/TUN+** button to select your last/next channel and repeat from instruction 2 and continue until you have saved your channels in your preferred order

### **Charging**

To enable wireless charging, ensure the product is plugged in using the Mains adapter supplied

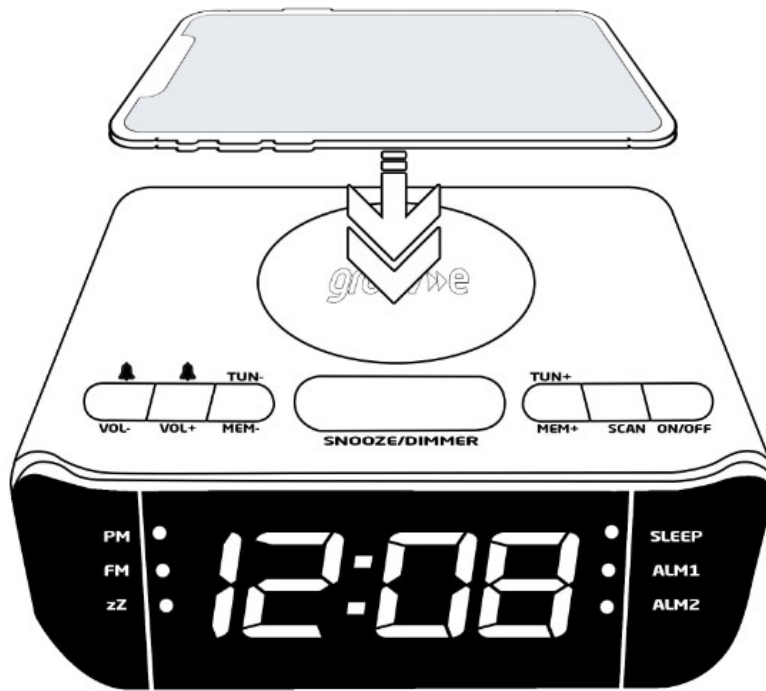

**Place** your wireless charging-enabled device on the charging pad. Your device will start charging. The indicator light will be a solid blue (if the blue light flashes its because it has detected a non-wireless charging device on the charging pad).

**Note:** Your device must have wireless charging capabilities to be able to use this function.

#### **USB OUTPUT**

The “USB Port” supports 5V/1A output charging

## **FEATURES**

- Digital alarm clock – wake up to radio or buzzer
- FM radio
- Up to 20 Preset stations
- Wireless charger 5W – charge your wireless-enabled device
- USB charging port 1A for charging devices (cable required)
- White LED display
- Dual alarm setting
- Dimmer – 4 settings
- Snooze function
- Sleep mode
- Mains Adapter (included)

## **SPECIFICATIONS**

**FM FFM Frequency Range : 87.5Mhz-108MHz**

**Wireless Output: 5W**

**DC Direct Power: DC 5.5V 2A**



Wireless  
Charging



USB Charging  
Port



FM  
Radio



Dual  
Alarm



 
LED  
Display



Display  
Dimmer

#### Environment Protection

Waste electrical products should not be disposed of with household waste.  
Please recycle where facilities exist.  
Check with your Local Authority or retailer for recycling advice.

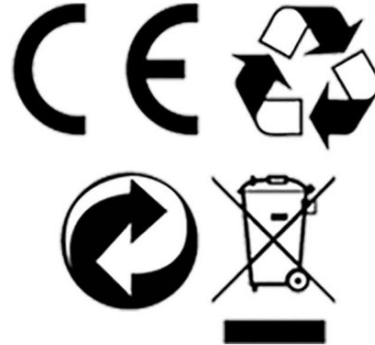

## Guarantee

### Subject

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, rechargeable batteries, user-removable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one-year warranty period.

1. Claims under this guarantee should be made through the authorized dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.
2. This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.
3. This Guarantee Excludes:
  - (i) All damage caused through accident, misuse, wear and tear, neglect, installation, and/or use in a manner inconsistent with technical and safety standards.
  - (ii) Alterations or adjustments made to equipment
  - (iii) Loss of data resulting from the malfunction of hard drive or another storage device
  - (iv) (iv) Damage caused to any third-party device as a result of using the product.
4. No liability under this guarantee shall be incurred: In respect of damage or loss occurring during transit to or from the purchase
5. Groov-e shall not be liable for consequential damage, loss, or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.
6. The cost of carriage to and from Groov-e shall be borne by the purchaser.
7. This guarantee is personal to the original purchaser and is not transferable.re

8. If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred

This guarantee is in addition to and does not in any way affect any statutory or another right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

## DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU, The complete declaration of conformity can be requested from us at:



Unit J  
Braintree Road  
Braintree Industrial Estate  
Ruislip  
Middlesex  
HA4 0EJ

[www.groov-e.co.uk](http://www.groov-e.co.uk)


Email: [info@groov-e.co.uk](mailto:info@groov-e.co.uk)

Telephone: 020 8839 0978

Register your purchase for an extended warranty

[www.groov-e.co.uk/warranty](http://www.groov-e.co.uk/warranty)

## Documents / Resources

 <p><b>groov-e</b> GV-WC06 Atlas</p> <p><b>User Manual</b></p> <p>Alarm Clock Radio with USB &amp; Wireless Charging</p> <p>groov-e.co.uk</p>	<p><a href="#">groov-e GV-WC06 Atlas Alarm Clock Radio with USB and Wireless Charging</a> [pdf] User Manual</p> <p>GV-WC06 Atlas, Alarm Clock Radio with USB and Wireless Charging</p>
--	--

## References

- [Groov-e](#)
- [Groov-e](#)
- [Warranty](#)