



Grothe PROTACT XXX Taster Push Button Installation Guide

[Home](#) » [GROTHE](#) » Grothe PROTACT XXX Taster Push Button Installation Guide 

Grothe PROTACT XXX Taster Push Button




Contents

- [1 Installation Instructions](#)
- [2 PUSH BUTTON](#)
- [3 CUSTOMER SUPPORT](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)


Installation Instructions

Wiring


1. Strip the wire (7 mm)

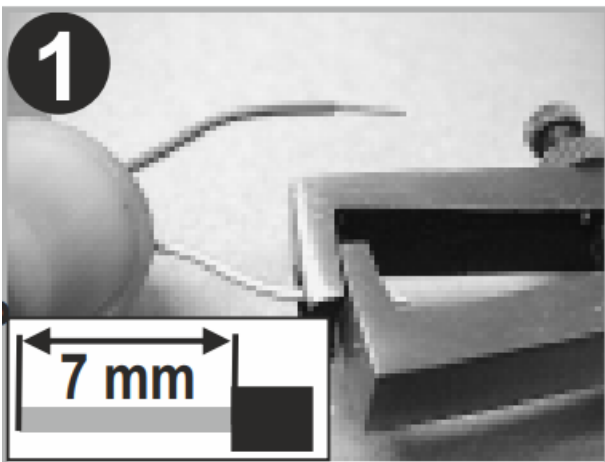

2. Insert wire into sealing

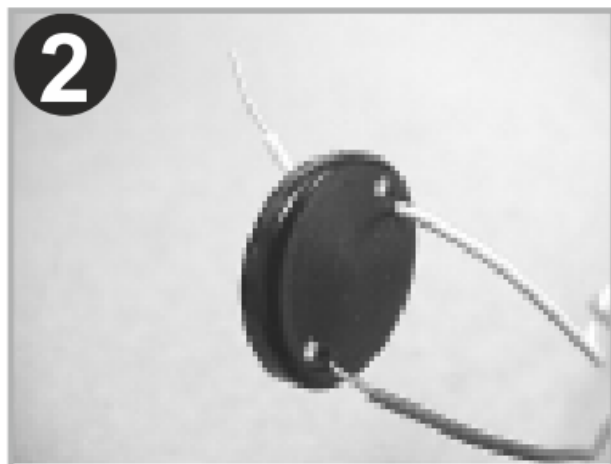


3. Connect wire

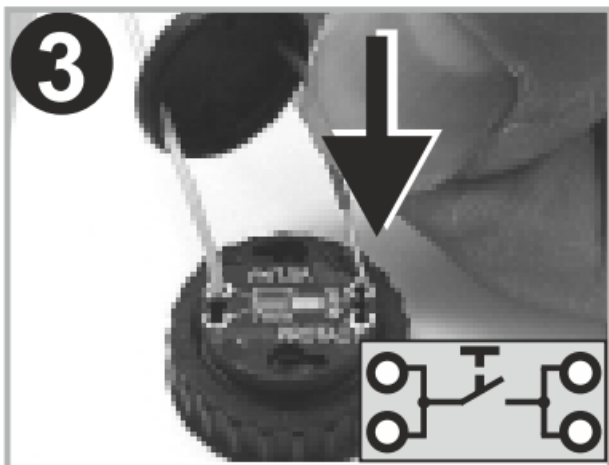


4. Fix the sealing



5. Combination of pushes

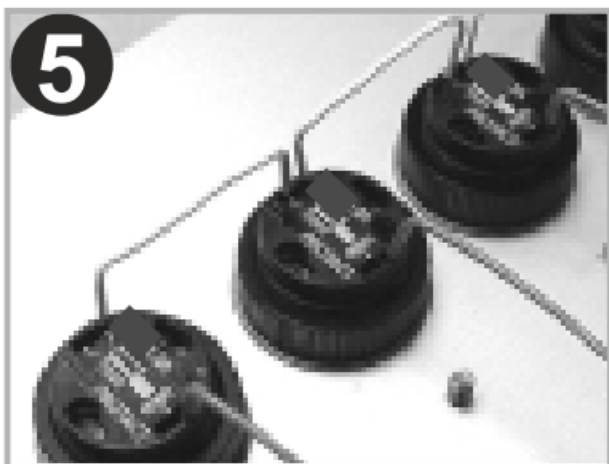


6. Unlocking (with spec. tool)

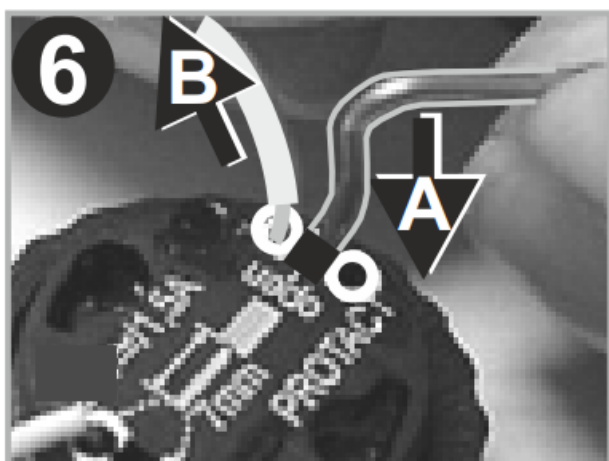



7. Connect wire (12V~/AC)

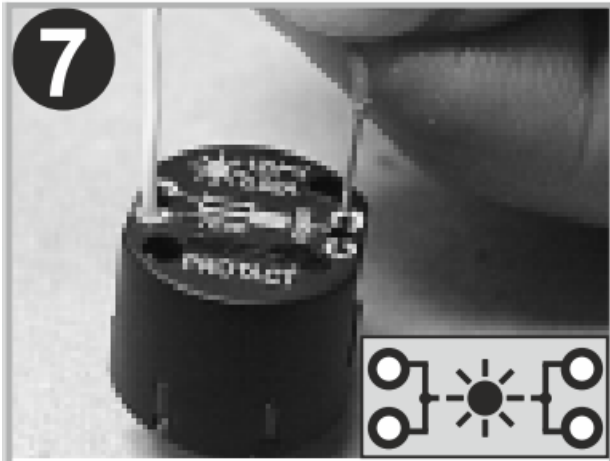



8. Fix the LED unit



9. LED push incl. wiring



PUSH BUTTON

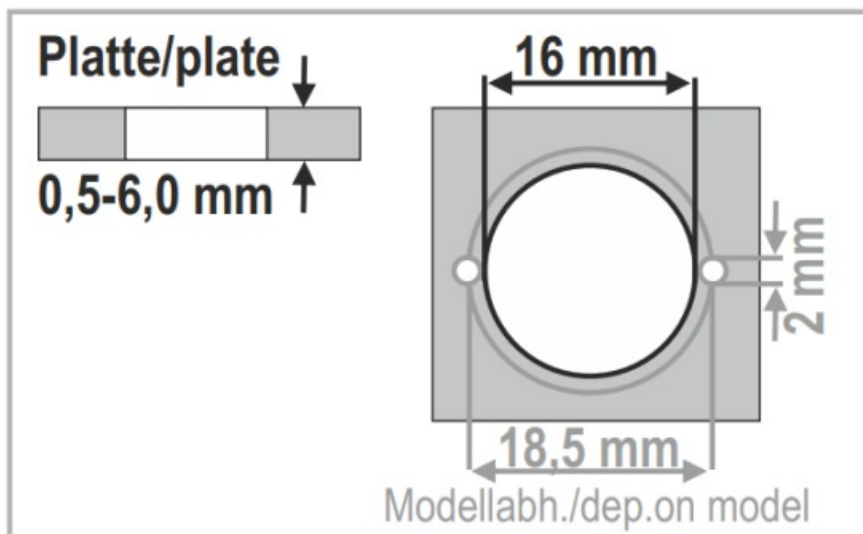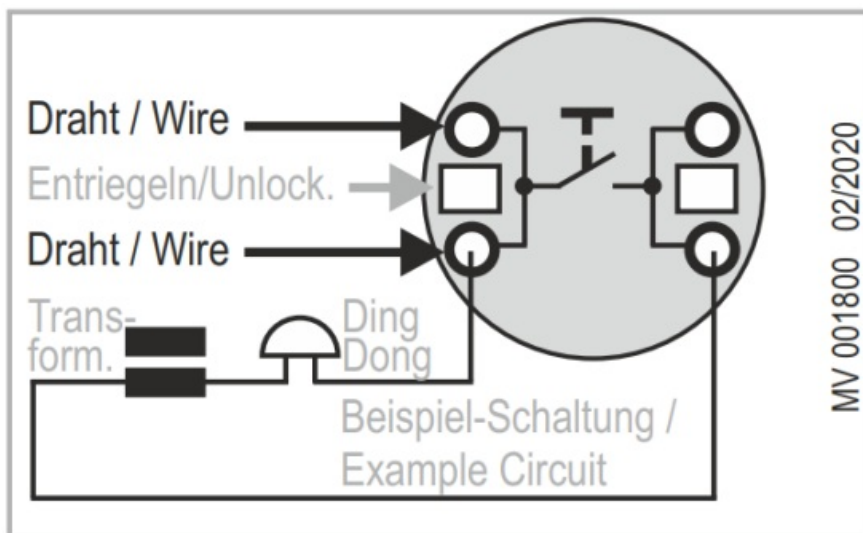

Techn. Dat.

- max. 12V=~/ (AC/DC)/1,5A (LED: 12V~/0,02A)
- Protect. low volt. only
- Wire rigid 0,6 – 0,8 mm
- Wire flex.: Photo 6.A: /Unlock
- -20°C...60°C / IP 54, /Op. force 5 N

CUSTOMER SUPPORT


GmbH

service@grothe.de

22 * D-53773

Tel.: (0 22 42) 88 90-0 * Fax: -36

Internet: www.grothe.de

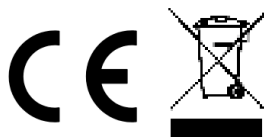



Documents / Resources



[Grothe PROTACT XXX Taster Push Button](#) [pdf] Installation Guide
PROTACT XXX Taster Push Button, PROTACT XXX, Taster Push Button, Push Button, Button

References

- [Startseite | Grothe](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.