



GROUPE SEB S4TFL235494 Blender Jug Instruction Manual

[Home](#) » [Groupe SEB](#) » GROUPE SEB S4TFL235494 Blender Jug Instruction Manual 

Contents

- [1 GROUPE SEB S4TFL235494 Blender Jug](#)
- [2 SAFETY INSTRUCTIONS FOR KITCHEN MACHINE](#)
- [3 EUROPEAN MARKETS ONLY](#)
- [4 Environment protection first!](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



GROUPE SEB S4TFL235494 Blender Jug



SAFETY INSTRUCTIONS FOR KITCHEN MACHINE

Please read the instructions for use carefully before using your appliance for the first time and retain them for future reference: the manufacturer cannot accept any liability for non-compliant appliance use.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Check that the power rating of your appliance corresponds to your electrical supply. Any incorrect connection invalidates the guarantee.
- This appliance has been designed for indoor and domestic use only, and at an altitude below 2000m.
- Refer to the instruction manual for initial and regular cleaning of parts in contact with food, and for cleaning and maintenance of your appliance.
- Use your appliance on a flat, clean and dry surface.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Do not use the appliance if it is not working properly or if it has been damaged. Contact an authorized service center (see list in the service booklet).
- Any maintenance other than routine cleaning and upkeep by customers must be carried out by an approved service center (see list in the service booklet).
- Do not immerse the appliance, the supply cable or the plugin water or any other liquid.

- The power cord must be kept out of the reach of children and must not be placed near or come into contact with the hot parts of the appliance, sources of heat or sharp corners.
- Do not pull on the power cord to unplug the appliance.
- Do not use the appliance if the power cord or plug is damaged. The power cord must be replaced by an authorised service centre (see the list in the service booklet) in order to avoid danger.
- For your own safety, use only accessories and spare parts designed for your appliance and sold in an approved service centre.
- Remember: you may injure yourself if you use the appliance incorrectly.
- The blades of the mixing bowls, the mincing head, the mini-chopper, the grinder, the drums, the vegetable-cutting discs, the metal knife (depending on the model) are very sharp: please ensure you handle these parts with extreme caution to avoid injury.
- You must remove the metal knife from its drive before you empty the bowl of its contents (depending on the model).
- All accessories that can be mounted in the upper part of the multifunctional head must be removed prior to operating the release button for this head.
- Never touch moving parts and always wait for the appliance to come to a complete stop before removing the accessories.
- Do not touch the beaters, the mixer, nor the kneader when the appliance is in operation.
- Do not allow long hair, scarves, ties etc. to dangle over the appliance during operation.
- Never push utensils (spoon, spatula, etc.) or your finger or any other object through the funnel of the lid, body and tray as well as the drum chamber (G1) (accessories depending on model). Always use the pusher provided to guide the food.
- Do not operate the blender jug without its lid.
- Only use one accessory at a time.
- Never fill the blender jug with a boiling liquid (above 80°C, 176°F).
- Do not use any of the accessories when the bowl is empty or mix solid ingredients only.
- Never remove the lid until the appliance has come to a complete stop.
- When using the mixing bowl, always put in the liquid ingredients before the solid ingredients.
- Do not use the accessories as containers (freezing, cooking, sterilisation, microwave, etc.)
- Never use this appliance with items other than food ingredients. In order to avoid overflowing, do not go over the maximum level of the bowl or the maximum quantity indicated in the user instructions.
- Do not use the appliance if the rotating sieve or the protecting cover of the juice extractor (according to model) is damaged or has a visible crack.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden build up of steam.
- This device is intended for use for domestic use only and is not intended for:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Refer to the instruction manual for the assembly and disassembly of the accessories on the appliance.

- Refer to the user instructions for speed control and time of use for each accessory.

EUROPEAN MARKETS ONLY

- For all accessories except whisk and graters: This device should not be used by children. Keep the appliance and its cord out of reach of children.
- Children shall not play with the appliance
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the device safely and understand the dangers.
- The beating, grating and reibekuchen accessories can be used by children aged 8 years and over if they have been given supervision or instruction on how to use the appliance in a safe way and if they understand the hazards involved. Cleaning and maintenance of the appliance must not be performed by children, unless they are 8 years of age or older and under the supervision of an adult.
- Keep the appliance and its cord out of the reach of children under the age of 8.

Environment protection first!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Documents / Resources

[illegible]