


**PRV Progressive
Distributors**



Gruetzner PRV Progressive Distributors User Manual

[Home](#) » [GRUETZNER](#) » Gruetzner PRV Progressive Distributors User Manual 

Contents

- [1 Gruetzner PRV Progressive Distributors](#)
- [2 General information about this manual](#)
- [3 Description of function](#)
- [4 Transport and storage](#)
- [5 Mounting](#)
- [6 Maintenance and disposal](#)
- [7 Released accessories](#)
- [8 Appendix](#)
- [9 Frequently Asked Questions](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



Gruetzner PRV Progressive Distributors



General information about this manual

This user manual contains all necessary information to use Gruetzner monitored distributors, hereinafter referred to as PRV, safely and as intended. In the event that supplementary sheets are attached to these instructions, the information and data contained there are valid and replace the corresponding information in this user manual. Any contradictory information contained in this user manual thus becomes invalid. If you have any questions regarding special applications, please contact Gruetzner GmbH (chapter I.II).

The actual and factual operator must ensure and guarantee that these instructions, including any supplementary sheets, have been read and understood by all persons responsible for the installation, operation or maintenance of PRV. Therefore, keep these instructions in a suitable place, ideally in an easily accessible place in the surrounding area of PRV.

Inform your colleagues who work in the local area of the machine about safety instructions so nobody gets hurt. This manual was written in German, all other language versions are translations of this manual.




Signal words

The following signal words are used in this manual to draw your attention to possible dangers, prohibitions and other important information:

- **DANGER** This signal word points you to an immediate and threatening risk of serious injury or death.
- **WARNING** This signal word indicates a potentially imminent danger which can result in serious injury or even death.
- **CAUTION** This signal word indicates a potentially imminent danger that can result in minor to severe injuries.
- **NOTICE** This signal word indicates a potentially imminent danger which can result in damage to property.
- **INFORMATION** This signal word refers to practical application tips or particularly important information when using PRV.

Warning symbols

The following warning symbols are used in this user manual to alert you to hazards, prohibitions and important information:

| | | |
|---|---|--|
|  |  |  |
| General warning sign | Electricity hazard | Flammable material |

Structure of the safety instructions

The safety instructions in this user manual are structured according to the following system:




CAUTION

This text explains the consequences of disregarding the reference.

This text shows what to do as an instruction.

Symbols for information

The following information symbols are used in the text and instructions in this manual:

-  Requests you to take action
-  Shows the consequences of an action
-  Additional information about the action

Safety

All persons working with PRV must follow these operating instructions, in particular the safety instructions and the rules and regulations applicable at the place of use. Generally applicable legal regulations and other rules as well as the relevant rules and regulations for accident prevention (e.g. personal protective equipment (PPE)) and environmental protection must be observed.

Hazards

In order to avoid danger to the user or damage to the machine on which the PRV is used, PRV may only be used for its intended purpose (chapter 2.4) and in a technically safe condition.

Always inform yourself about the general safety instructions (chapter 2.6) before starting to work.

Staff

Only qualified staff who has read and understood this manual may work with PRV. Local and/or company regulations apply accordingly.

Reasonably predictable misuse

Any use of PRV which exceeds the maximum permissible technical data is generally considered to be improper and therefore prohibited.

Usage for the intended purpose

The following points must be observed for the intended purpose of using PRV:

- PRV is exclusively approved for industrial use.
- PRV may be used in accordance with the technical data (chapter 3.4) exclusively.
- Unauthorized structural alterations to PRV are not permitted.
- Read the user manual and act accordingly.

- During operation of PRV, a visual inspection of PRV as well as of the lubrication point must be carried out regularly. Any anomalies must be eliminated immediately and the cause must be rectified.
- PRV may not be opened or disassembled.
- Only lubricants approved by Gruetzner GmbH may be used.
- Relevant regulations and rules on work safety, accident prevention and environmental protection must be observed.
- Work and activities with and on PRV are only permitted with appropriate authorization (chapter 2.2).

All uses other than the aforementioned intended usage or the disregard of one of the above points shall be deemed improper usage. In this case no liability and/or warranty is assumed.

Warranty and Liability

If the following items are disregarded, all warranty and liability claims for personal injury and/or damage to property are excluded in case of:

- non-observance of the instructions on transport and storage;
- misuse;
- improper or unperformed maintenance or repair work;
- improper assembly / disassembly or improper operation;
- operation of PRV with defective protective devices;
- operation of PRV without lubricant;
- operation of PRV with non-approved lubricant;
- operation of heavily contaminated PRV;
- modifications or alterations have taken place which were carried out without the written permission of Gruetzner GmbH;
- opening and/or partial or complete disassembly of PRV.

General safety instructions

The following safety instructions are given for PRV:

NOTICE

- Loose or overloaded screw connections can cause damage to PRV.
- Mount and check all screw connections with the permissible torques specified for this purpose. Use a calibrated torque wrench.

WARNING

Lubricants are flammable.

- In case of fire do not use a water jet to extinguish.
- In case of fire only use suitable extinguishing agents such as powder, foam and carbon dioxide.
- Observe the relevant safety instructions of the lubricant manufacturer on the safety data sheet of the lubricant used.

CAUTION

Lubricants can cause skin irritations.

Avoid direct skin contact.

NOTICE

Lubricants can contaminate soil and water.
Use and dispose lubricants properly.

Description of function

General information

PRV is used to reliably supply multiple lubrication points in machines and systems with oil (>ISO VG 100) or grease (up to NLGI cl. 2). The lubricant supplied by a pump is divided in subsets according to the number of outlets of PRV and is delivered to the lubrication points.

The number of outlets and their delivery rates are defined by the design for PRV standard distributors described below. On request, various special distributors are available. PRV is a progressive lubricant distributor for a maximum working pressure of 100 bar (1,450 psi). It is therefore particularly suitable for use with lubricant pumps of the Gruetzner Lubricus series.

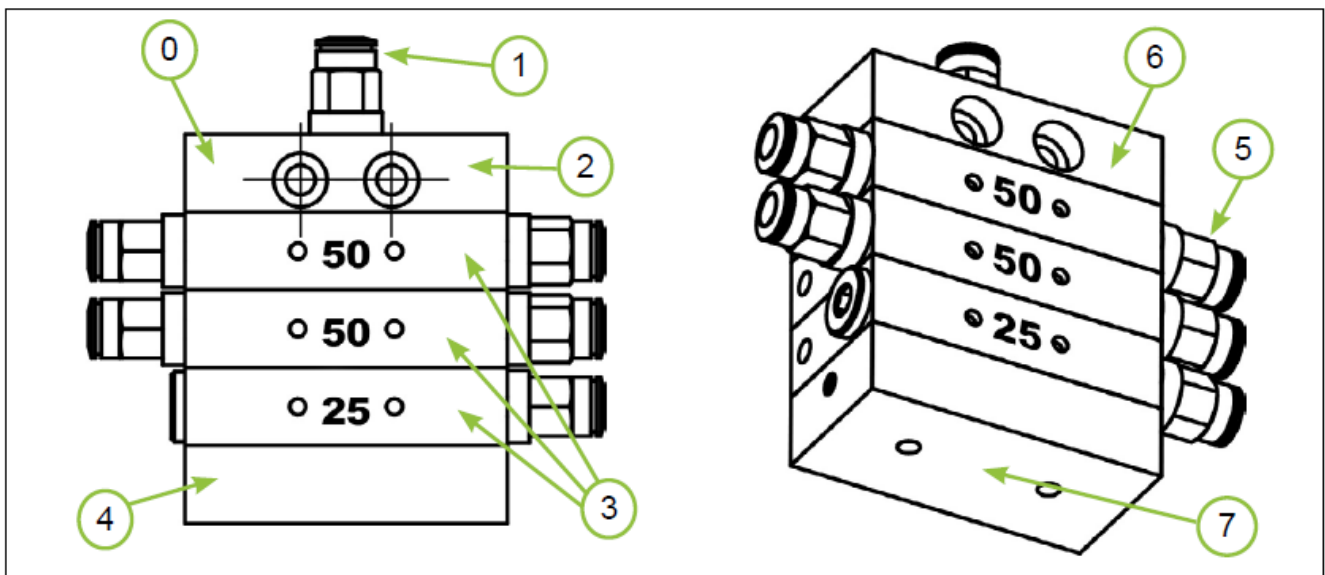


Fig. 1: Overview PRV 5-50

Fig. 1: Overview PRV 5-50

No. Description

- 0 PRV
- 1 Lubricant inlet
- 2 Initial element
- 3 Dispensing elements
- 4 Final element
- 5 Lubricant outlets
- 6 Through holes for mounting
- 7 Nameplate with serial number

Identification

A sticker informs about the serial number (which serves the traceability of PRV). It is visibly attached to PRV itself. For the position of the sticker and the serial number, please refer to chapter 3, fig.1.

Scope of delivery

PRV is available in several different versions. They differ in the number of outlets and by the characteristics of the dispensing elements.

All versions of the PRV are prefilled with a neutral, food-grade (H1) lubricant (approx. 3 cm³) which can be mixed with the lubricants approved by Gruetzner GmbH to simplify the initial commissioning. The manufacturer's designation is Addinol Foodproof XHF 150 S. Further data and documentation on the lubricant Addinol Foodproof XHF 150 S are available on request from Gruetzner GmbH.

Technical data

| General | | | |
|--------------------------------------|-----------------------|---|------------------------------|
| Tube connector inlet/outlet | | straight for tube Ø = 6 mm / M10x1 special tube connectors on request | |
| Mounting options | | 2 blind holes in the initial element for cylinder head screw M5 (DIN 912) | |
| Max. torque mounting | | 3 | Nm |
| Mounting position | | horizontal movement direction of the delivery pistons | |
| Material main body | | aluminum | |
| Material grease inlet/outlet | | CuZn39Pb3 | |
| Operating temperature | | -20 ... +70* | °C |
| Lubricant and hydraulic | | | |
| Lubricant characteristics** | | grease | up to NLGI class 2 |
| | | oil | minimal viscosity ISO 100 VG |
| Number of outlets | | 2 to 10 | |
| Hydraulic connection | | directly or via PA tube | |
| max. pressure | | 100 | bar |
| max. inlet volume flow | | 0.5 | ml/s |
| Grease delivery per piston stroke | Dispensing element 50 | 0.050 | ml |
| max. length connection line to inlet | | 300 | mm |

individual cases the operating temperature may depend on other factors (e.g. lubricant).

** Warranty is only given when using lubricants with Gruetzner approval

The following sketch shows the outer dimensions of PRV-3. The length L of each standard distributor can be found

in table 1.

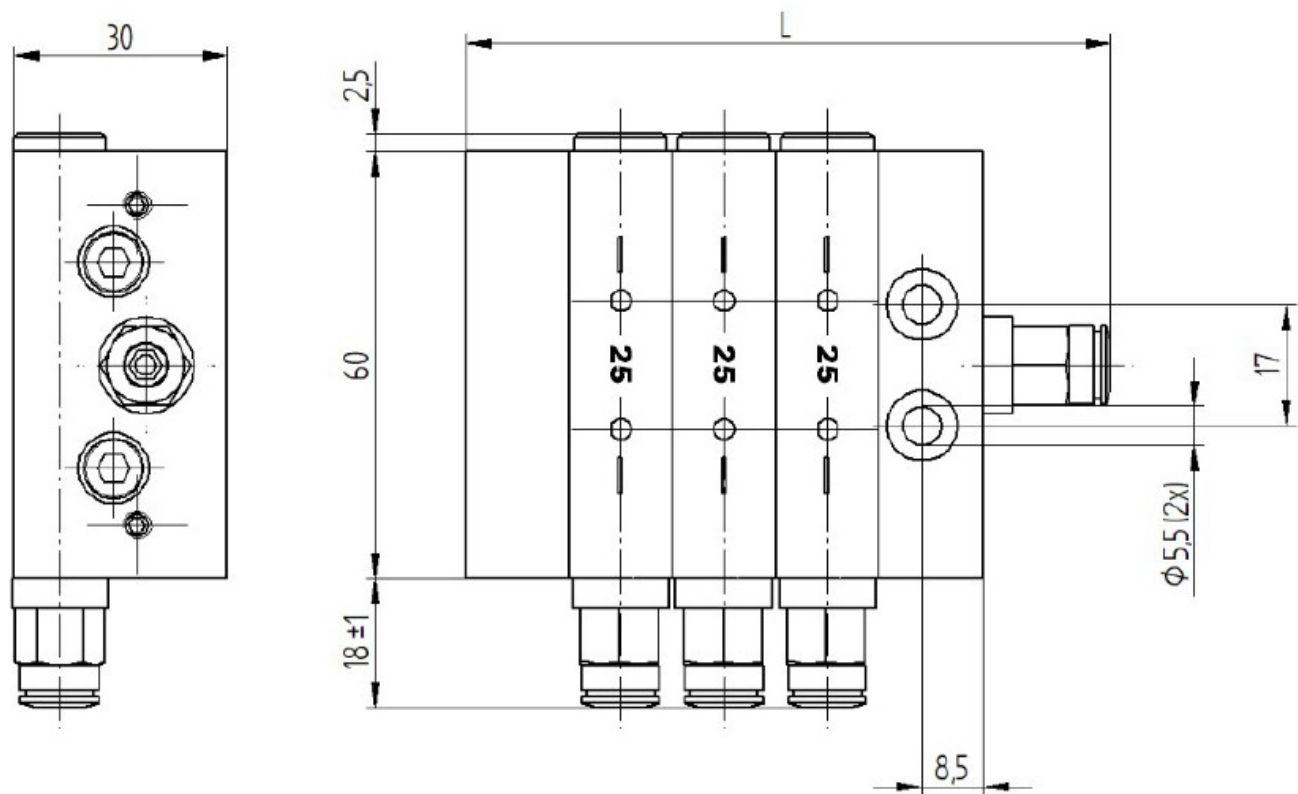


Fig. 1: Sketch PRV-3

| Art. no | Width (mm) | Length (m) | Weight (g) | Total no. of outlets | No. of right outlets | No. of left outlets |
|---------|------------|------------|------------|----------------------|----------------------|---------------------|
| PRV-2 | 96 | 95 | 476 | 2 | 1 | 1 |
| PRV-3 | 81.5 | 95 | 476 | 3 | 3 | 0 |
| PRV-4 | 96 | 95 | 476 | 4 | 3 | 1 |
| PRV-5 | 96 | 95 | 476 | 5 | 3 | 2 |
| PRV-6 | 96 | 95 | 476 | 6 | 3 | 3 |
| PRV-7 | 96 | 109,5 | 567 | 7 | 4 | 3 |
| PRV-8 | 96 | 109,5 | 567 | 8 | 4 | 4 |
| PRV-9 | 96 | 124 | 657 | 9 | 5 | 4 |
| PRV-10 | 96 | 124 | 657 | 10 | 5 | 5 |

Special distributors

Any PRV that has been developed in direct consultation with the customer and is not documented in Table 1 is considered a special distributor.

Special distributors are PRV whose output quantities per outlet are different from each other, or which enable higher output quantities than the standard distributors or whose hose connectors contradict the standard.

Transport and storage

Packaging

PRV is delivered in an outer packaging (cardboard box). To protect them from moisture and dirt, they are also packed in PE films. As a preventive measure to stop the prefilled lubricant escaping from PRV, a dowel pin is inserted in the inlet hose connector. Dispose the packaging materials at the designated disposal points in compliance with the relevant national and company regulations.

After receiving PRV check the delivery note for completeness and correctness.

Any missing parts or damage must be reported immediately to the forwarding agent, the insurance company or Gruetzner GmbH in writing.

Transport

| | |
|--|---|
| | NOTICE |
| | <p>Hard shocks due to e.g. falling or setting down too hard can damage PRV.</p> <ul style="list-style-type: none">• Do not throw PRV.• When using lifting equipment, only use hoists and load-handling attachments in perfect condition and with sufficient load capacity.• The permissible lifting weight of the lifting device must not be exceeded. |

Storage

Store PRV in its original packaging in a vertical position in a dry, frost-free environment at an ambient temperature of +5 °C to +30 °C. The maximum storage time in unopened condition is 2 years.

The so-called “first-in-first-out” principle (fifo) is recommended for storage logistics.

Mounting

Preparations

NOTICE

Pressurised air can damage the seals of PRV and can transport dirt and foreign matter into PRV or the lubricant.

- Do not use pressurised air.
- Make sure that there is no coarse dirt in the mounting area.

Mountin

1. Condition as delivered

PRV is delivered sealed in PE film in a cardboard box.

2. Pull out the sealing dowel pin



Pull the dowel pin out of the top of the PRV lubricant inlet.



Make sure that no dirt, water or foreign bodies enters the lubricant inlet.





As soon as the dowel pin is removed from the lubricant inlet, lubricant can leak out. Do not turn the distributor!

3. Mount the progressive distributor





Pull the dowel pin out of the top of the PRV lubricant inlet.


 Mount the PRV carefully according to the steps described in chapter 3.4.

 Ensure a flat support surface when mounting PRV.


4. Hydraulic connection: inlet


 Connect the lubricant supply to the inlet of PRV.

 Pay attention to cleanliness when carrying out the work. It is imperative that dirt and foreign bodies do not enter the pipes or the distributor.

 Ideally, use tubes prefilled with the appropriate lubricant.


5. Flushing the distributor


 Activate the lubricant supply until the lubricant you are using emerges from all outlets of the progressive distributor.


 Dispose the lubricant that has escaped from the distributor.

6. Hydraulic connection: outlets


 Connect the outlets of the distributor to the respective connecting lines.


 Pay attention to cleanliness when carrying out the work. It is imperative that dirt and foreign bodies do not enter the pipes or the distributor.

 Ideally, use tubes prefilled with the appropriate lubricant.

 Use connecting lines with the same cross section at each outlet.

7. Flushing the connection lines

 Activate the lubricant supply you are using until the lubricant you are using emerges from all connecting lines.

 If you have used connecting lines that are prefilled with the lubricant you are using, this step is not necessary.

8. Hydraulic connection: lubrication point

 Fit the connecting lines to the lubrication points.

Commissioning

Mount PRV carefully according to the steps described in chapter 5.2.

Depending on the scope of delivery you must also carry out the following additional measures for the first commissioning:

1. Check the assembly

Ensure that PRV is properly and completely assembled. In particular, the connections between the pump and the distributor or between the distributor and the lubrication points must be properly connected.

2. Check the output of the pump used

Make sure that the set output of the lubricant supply matches the lubrication requirements of the individual lubrication points. If this is not the case, adjust the delivery rate accordingly.

CAUTION

If special PRV are connected incorrectly, lubrication points can be under-lubricated or over-lubricated and thus cause damage to machine elements.

Ensure that the connecting cables are connected correctly before commissioning. Mark them if necessary.

Operating

In the interest of dispensing accuracy it must be ensured that the delivery pistons fulfil at least two complete circulations during each lubrication process.

When using PRV with the lubricant pumps of the Lubricus series ensure the number of delivery cycles mentioned in the following table are executed.

| Number of dispensing elements | Recommended minimum number of strokes of a Lubricus |
|-------------------------------|---|
| 3 | 5 |
| 4 | 6 |
| 5 | 7 |
| 6 | 8 |
| 7 | 10 |

Please note the following when operating the progressive distributor:

When delivering lubricant is forced, the blockage of a single lubrication point leads in blocking the entire progressive distributor. Controlled lubrication of the lubrication points is no longer guaranteed.

The following applies to the lubricant supply of the lubrication points connected to the PRV when using the standard PRV mentioned in Table 1, section 3.4:

Each outlet is supplied with the same lubricant and the same quantity of lubricant during a lubrication interval (=inserting enough lubricant into PRV that theoretically each outlet delivers lubricant once).

Troubleshooting

If lubricant is fed into PRV but is not delivered to the lubrication point, the following scenarios may have occurred:

| Possible Error | Remedy |
|--|---|
| Blockage of one or more lubrication points | Check the lubrication points, disconnect the hoses |
| Internal blockage of PRV | Check the function of the distributor, disconnect the hoses |
| Leak in a connecting line | Check the connecting lines from the lubricant supply to the PRV and from the PRV to the lubrication points |

If you cannot detect a blockage at a lubrication point and ensure that the PRV is fed with lubricant, contact Gruetzner GmbH.

Maintenance and disposal

Before starting any maintenance work, inform yourself about the general safety instructions (see chapter 2) and observe the relevant local and operational safety regulations.

Do not deactivate any protective device without authorization

Maintenance schedule

The following maintenance schedule must be observed for PRV:

| Maintenance | Commissioning | After 3 months | Annually | If required |
|--------------|---------------|----------------|----------|-------------|
| Cleaning | x | x | x | x* |
| Visual check | x | x | x | x* |

* Depending on operating conditions and lubricant consumption

Visual check

- Check the entire lubrication system incl. PRV for external damage (e.g. loose or loosened tubes) by a thorough and conscientious visual inspection.
- Check the condition of the lubrication point for correct supply of lubricant.
- Replace damaged or defective parts immediately to ensure permanent lubrication.

Cleaning

Clean PRV from dirt using suitable cleaning agents (e.g. absorbent towels, cloths).

NOTICE

Compressed air can damage the seals of PRV as well as transport dirt and foreign bodies into PRV or the lubricant.

Do not use compressed air to clean PRV.

Recommissioning after maintenance

Reinstall all safety devices and make sure that no tools remain in the danger area.

Disposal

- When disposing PRV observe the relevant national regulations in force.
- When disposing PRV observe the relevant safety data sheets and disposal instructions for the individual components.

Released accessories

Lubricants

Only use lubricants approved by Gruetzner GmbH


Tube lengths

In principle it is recommended to mount PRV as close as possible to the lubricant supply and to keep the distance between PRV and the lubrication points as small as possible.


If you cannot mount the PRV directly or at the specified distance (chapter 3.4) to the lubricant supply, contact Gruetzner GmbH to verify your application. The influence of temperature, the grease, the hoses and accessories used does not allow a general statement to be made about the possible hose length on PRV.

Appendix

Dimension sheet and installation dimensions

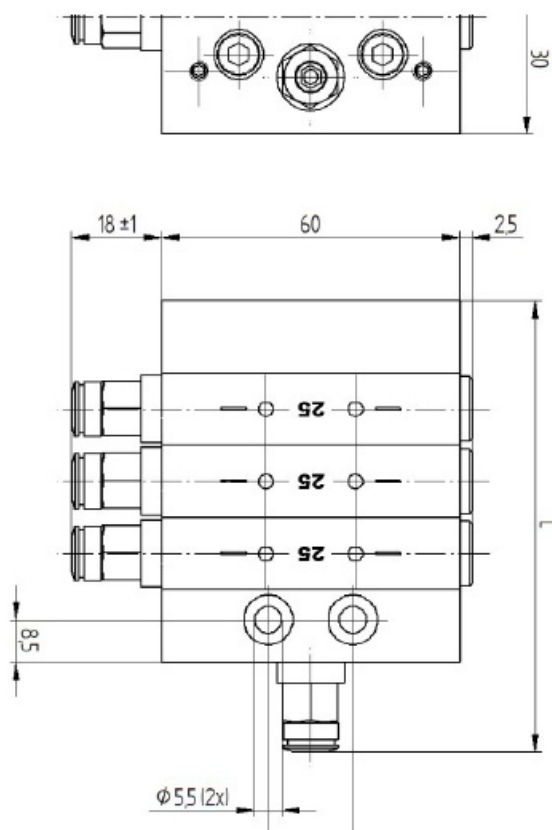

Drilling pattern for PRV

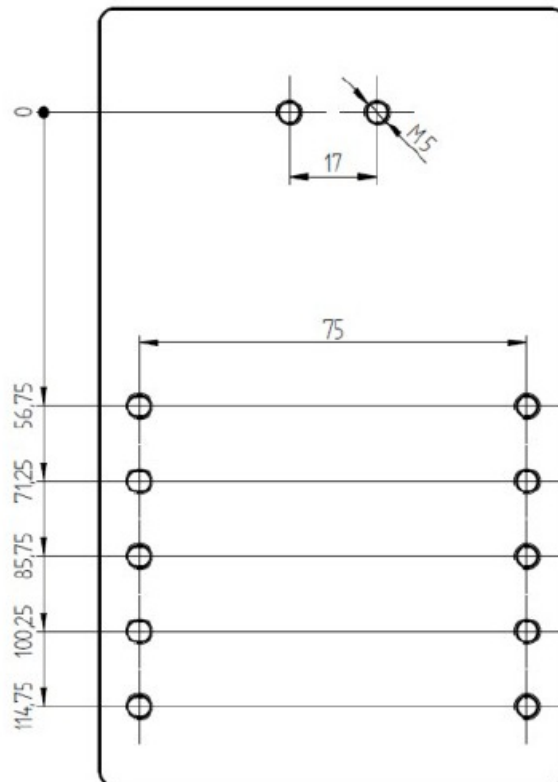

www.G-LUBE.com

Gruetzner GmbH

Dagobertstr. 15 • D – 90431 Nuremberg, Germany

Tel. +49 911 277 399 0 • info@G-LUBE.com • www.G-LUBE.com

Frequently Asked Questions

- **Q: What should I do if I encounter a WARNING signal word?**

A: If you encounter a WARNING signal word, pay immediate attention as it indicates a potentially imminent danger that can result in serious injury or death. Follow the instructions carefully to ensure safety.

Documents / Resources

| | |
|---|---|
|  | <p>Gruetzner PRV Progressive Distributors [pdf] User Manual PRV Progressive Distributors, PRV, Progressive Distributors, Distributors</p> |
|---|---|

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.