


GRUNDFOS 

GRUNDFOS
SCALA2 Smart
Water Boosting
Pump



GRUNDFOS SCALA2 Smart Water Boosting Pump Instructions

[Home](#) » [GRUNDFOS](#) » GRUNDFOS SCALA2 Smart Water Boosting Pump Instructions 

Contents

- [1 GRUNDFOS SCALA2 Smart Water Boosting Pump](#)
- [2 Product Usage Instructions](#)
- [3 General information](#)
- [4 Installing the product](#)
- [5 Starting up the product](#)
- [6 Storing and handling the product](#)
- [7 Product introduction](#)
- [8 Control functions](#)
- [9 Operating the controller](#)
- [10 Starting up the product after shutdown or standstill](#)
- [11 Servicing the product](#)
- [12 Fault finding the product](#)
- [13 Technical data](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)

GRUNDFOS 

GRUNDFOS SCALA2 Smart Water Boosting Pump



Specifications:

- Product Name: Grundfos SCALA2 3-45
- Application: Domestic pressure boosting
- Max Head: 27m
- Material: Carbon/Ceramic
- Max Pressure: 10 bar
- Max Flow: 5200...
- Power Consumption: 550 W
- Voltage: 200-240 V, 50/60 Hz
- Weight: 9.8 kg (Pump), 12.1 kg (Packaged)

Product Usage Instructions

Installation Steps:

1. Connect the pipes securely.
2. Prime the pump by following the manufacturer's instructions.
3. Plug the pump into a power outlet to start the pump.

Features:

- Integrated speed control for perfect pressure adjustment.
- Self-priming capability for extracting water from depths up to 8 meters.
- Built-in sensors for automatic shutdown in case of dry running or blockages.
- Integrated tank to reduce starts and stops, prolonging pump life.

Usage Tips:

Ensure the pump is primed properly before initial use. Monitor for any leaks in the inlet hose or pipes. Regular maintenance and cleaning are recommended to ensure optimal performance.

Frequently Asked Questions (FAQ):

- **Q: What should I do if the pump does not start?**

A: Check the power supply and ensure the pump is correctly plugged in. Verify that the pump is primed and there are no blockages in the system.

- **Q: How often should I perform maintenance on the SCALA2 pump?**

A: Regular maintenance is recommended as per the user manual guidelines. Typically, check for leaks, clean filters, and inspect the overall condition of the pump periodically.

Original installation and operating instructions

These installation and operating instructions describe Grundfos SCALA domestic water supply pumps. Sections 1-4 give the information necessary to be able to unpack, install and start up the product in a safe way. Sections 5-14 give important information about the product, as well as information on service, fault finding and disposal of the product.

**Warning**

Prior to installation, read this document and the quick guide. Installation and operation must comply with local regulations and accepted codes of good practice.

Warning

This product can be used by children of eight years and up and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are under supervision or have been instructed in the safe use of the product and understand the hazards involved.

Children must not play with the product.

Cleaning and maintenance of the product must not be made by children without supervision.

Caution

This pump has been evaluated for use with water only.

Warning

Risk of electric shock.

This pump has a grounding conductor and grounding-type attachment plug. To reduce the risk of electric shock, be certain that the pump is connected only to a properly grounded, grounding-type receptacle.

General information**Target group**

These installation and operating instructions are intended for professional installers.

Symbols used in this document**Warning**

If these safety instructions are not observed, it may result in personal injury.



Warning

If these instructions are not observed, it may lead to electric shock with consequent risk of serious personal injury or death.

Caution

If these safety instructions are not observed, it may result in malfunction or damage to the equipment.

Note

Notes or instructions that make the job easier and ensure safe operation.

Receiving the product

Inspecting the product

Check that the product received is in accordance with the order. Check that the voltage and frequency of the product match voltage and frequency of the installation site. See section 6.4.1 Nameplate.

Scope of delivery

The box contains the following items:

- 1 Grundfos SCALA pump
- 1 quick guide
- 1 safety instructions booklet.

Installing the product

Location

The pump can be installed indoors or outdoors, but it must not be exposed to frost.

We recommend that you install the pump near a drain or in a drip tray connected to a drain in order to lead away possible condensation from cold surfaces.

Minimum space

The pump requires a minimum space of 430 x 215 x 325 mm (17 x 8.5 x 12.8 inches).

Even though the pump does not require much space, we recommend that you leave enough space for service and maintenance access.

Installing the product in frosty environment

Protect the pump from freezing if it is to be installed outdoors where frost may occur.

System sizing

Warning

The system in which the pump is incorporated must be designed for the maximum pump pressure. The pump is factory-set to three bar outlet pressure which can be adjusted according to the system in which it is incorporated. The tank precharge pressure is 1.25 bar (18 psi).

In case of suction lift of more than six metres, the pipe resistance on the outlet side must be at least two metres water column or 3 PSI at any given flow in order to obtain optimum operation.

Mechanical installation

Warning

Before starting any work on the product, make sure that the power supply has been switched off and that it cannot

be accidentally switched on.

Foundation

Fasten the pump to a solid horizontal foundation by means of screws through the holes in the base plate. See figures 2 and 1.

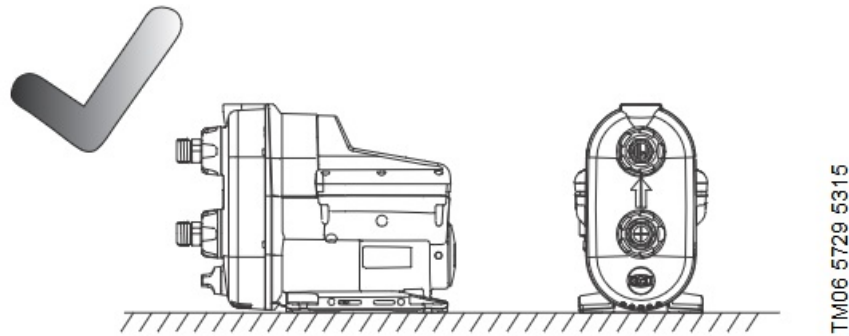


Fig. 1 Horizontal foundation

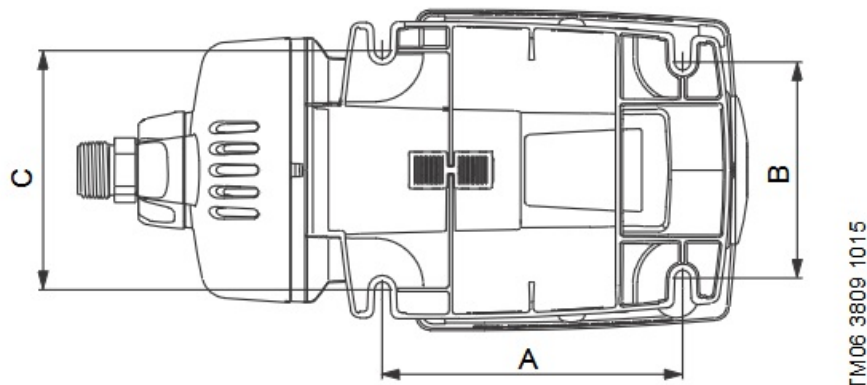


Fig. 2 Base plate

- A 130 mm 5.12 inches
- B 181 mm 7.13 inches
- C 144 mm 5.67 inches

Pipework


Make sure that the pump is not stressed by the pipework.

The pumps are equipped with flexible connections, $\pm 5^\circ$, to facilitate the connection of inlet and outlet pipes. The inlet and outlet ports can be loosened by turning the union nuts by hand.

Caution

Always loosen and tighten inlet and outlet union nuts by hand.

1. Carefully screw the inlet and outlet connections on to the inlet and outlet ports using a pipe wrench or similar tool.
2. Then fit the connections to the inlet and outlet holding the connections with one hand, and tightening the union nuts with the other hand. See fig. 3.

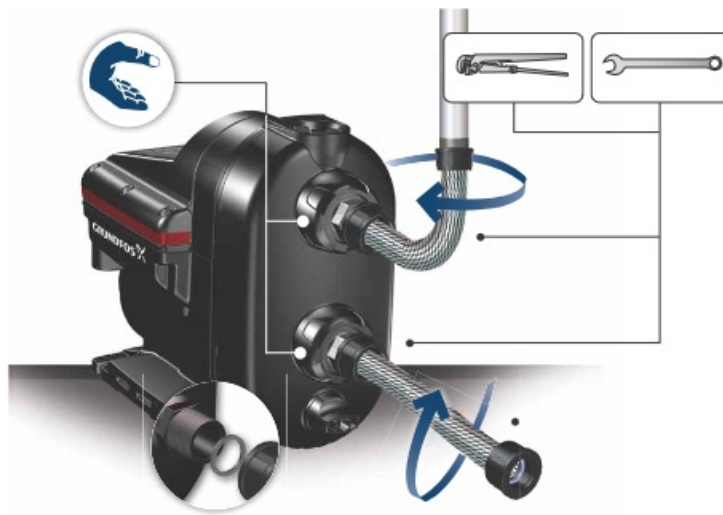


TM06 4318 1915

Fig. 3 How to fit the connections

How to reduce noise in the installation

Vibrations from the pump may be transferred to the surrounding structure and create noise in the 20-1000 Hz spectrum, also called the bass spectrum. Correct installation using a vibration-damping rubber pad, flexible hoses and correctly placed pipe hangers for rigid pipes can reduce the noise experienced by up to 50 %. See fig. 4. Place pipe hangers for the rigid pipes close to the connection of the flexible hose.

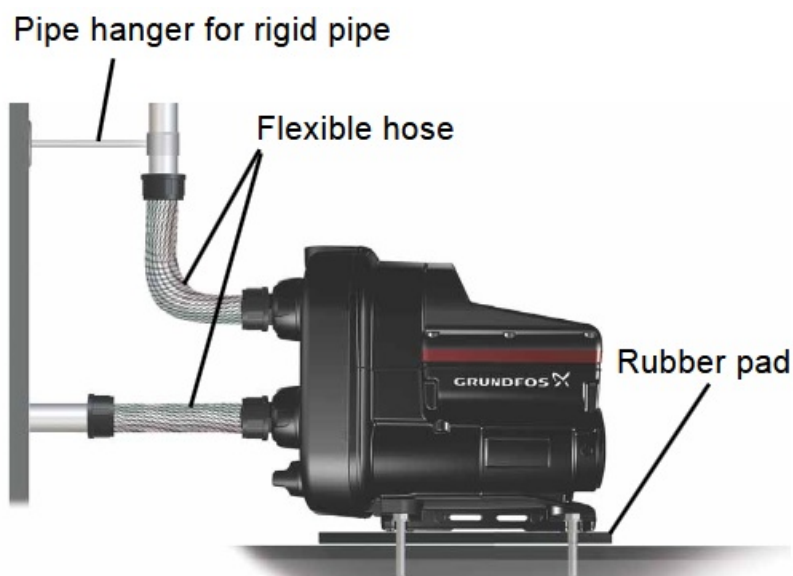

TM06 4321 1915

Fig. 4 How to reduce noise in the installation

Installation examples

Fittings, hoses and valves are not supplied with the pump. 3.5.1 Mains water pressure boosting

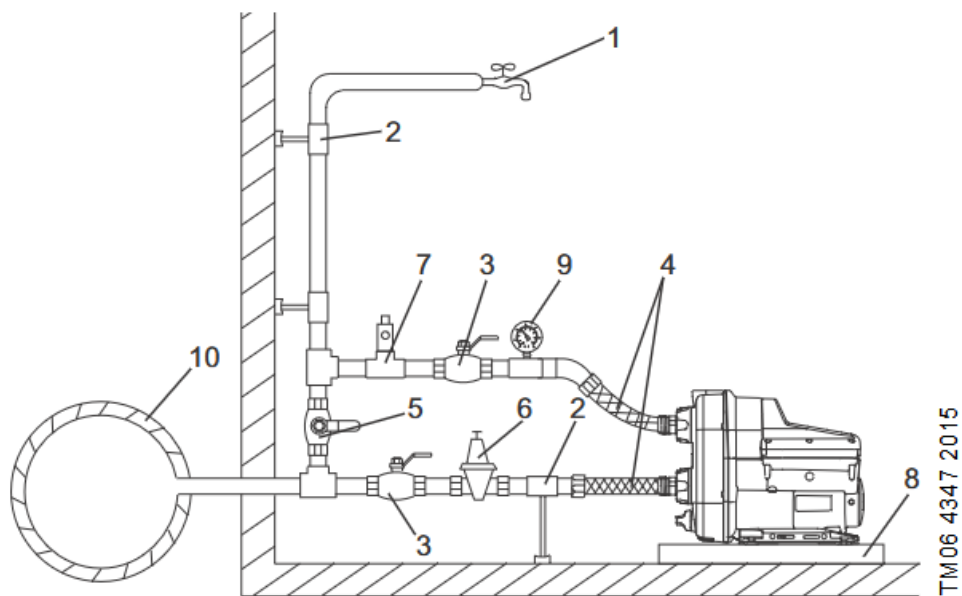


Fig. 5 Mains water pressure boosting

Pos.	Description
1	Highest tapping point
2	Pipe hangers and supports
3	Isolating valves
4	Flexible hoses
5	Bypass valve
6	Optional pressure-reducing valve on the inlet side if the inlet pressure can exceed 10 bar (145 psi)
7	Optional pressure-relief valve on the outlet side if the installation cannot stand up to a pressure of 6 bar (87 psi)
8	Drip tray. Install the pump on a small stand to avoid the ventilation holes from being flooded.
9	Pressure gauge
10	Mains water pipe

Suction from a well

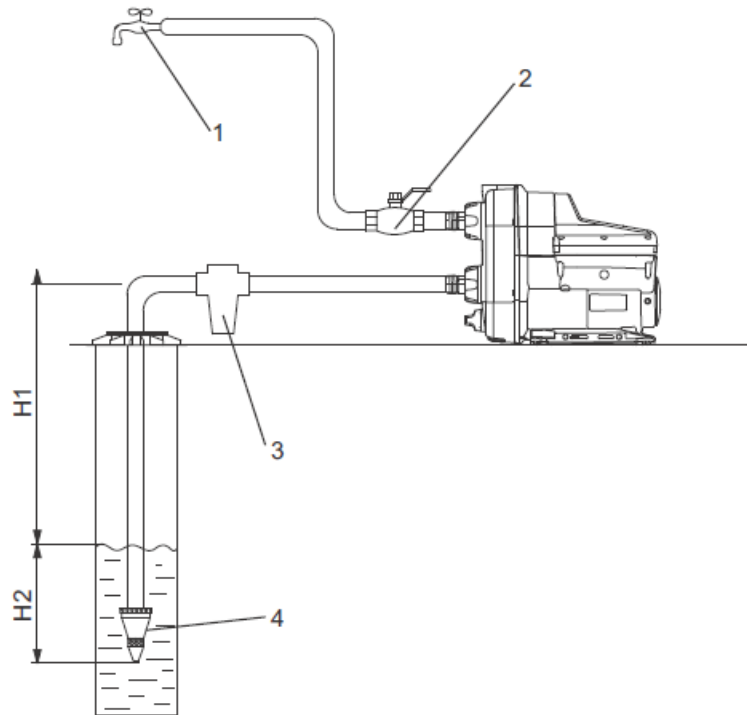


Fig. 6 Suction from a well

Pos.	Description
1	Highest tapping point
2	Isolating valve
3	Inlet filter. If the water can contain sand, gravel or other debris, please install a filter on the inlet side to protect the pump and installation.
4	Foot valve with strainer
H1	Maximum suction lift is 8 m (29 ft)
H2	Inlet pipe must be submersed at least 0.5 m (1.64 ft)

Suction from freshwater tank

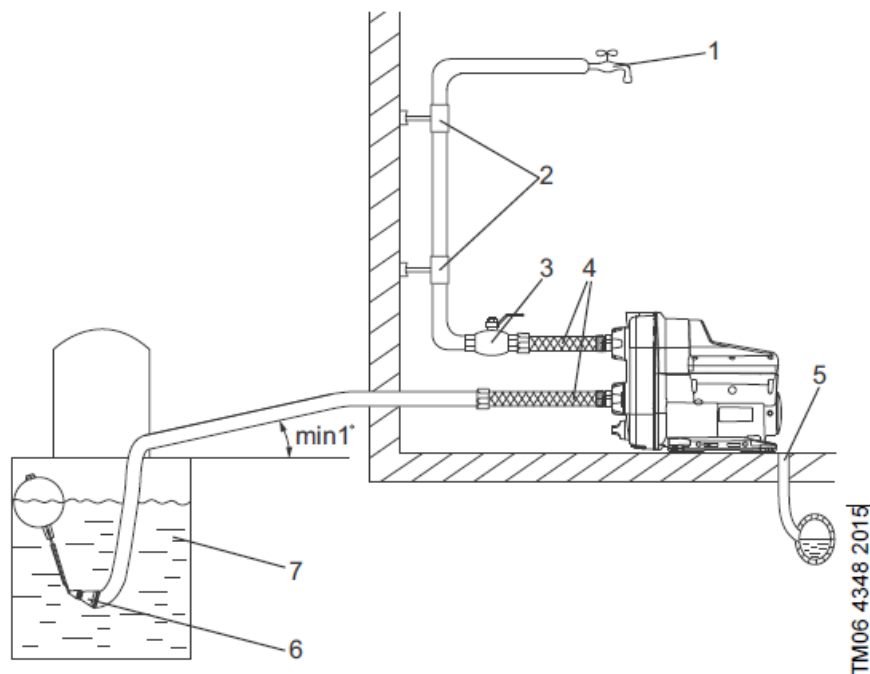


Fig. 7 Suction from freshwater tank

Pos.	Description
1	Highest tapping point
2	Pipe hangers
3	Isolating valve
4	Flexible hoses
5	Drain to sewer
6	Foot valve with strainer
7	Freshwater tank

Suction pipe length

The overview below shows the different possible pipe lengths, depending on the vertical pipe length. The overview is only intended as a guide.

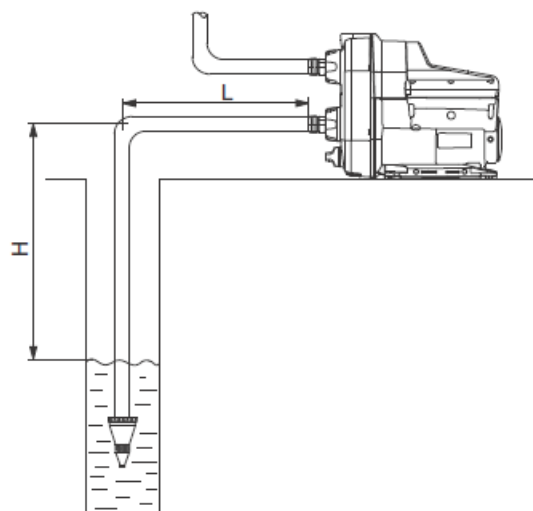


Fig. 8 Suction pipe length

DN 32		DN 40	
H [m (ft)]	L [m (ft)]	H [m (ft)]	L [m (ft)]
0 (0)	68 (223)	0 (0)	207 (679)
3 (10)	43 (141)	3 (10)	129 (423)
6 (20)	17 (56)	6 (20)	52 (171)
7 (23)	9 (30)	7 (23)	26 (85)
8 (26)	0 (0)	8 (26)	0 (0)

Preconditions:

- Maximum flow velocity: 1 l/s (16 gpm)
- Inside roughness of pipes: 0.01 mm (0.0004 inch).

Size	Inside pipe diameter	Pressure loss
DN 32	28 mm (1.1 inches)	0.117 m/m (5 psi/100 ft)
DN 40	35.2 mm (1.4 inches)	0.0387 m/m (1.6 psi/100 ft)

Electrical connection

Plug connection

Warning

Check that the voltage and frequency of the product match voltage and frequency of the installation site.

Warning

If the power supply cable is damaged, it must be replaced by the manufacturer, his service agent or similarly qualified persons in order to avoid hazard.

Warning

As a precaution, the product must be connected to a socket with earth connection.

Caution

We recommend that you fit the permanent installation with an earth leakage circuit breaker (ELCB) with a tripping current < 30 mA.

The pump incorporates current and temperature dependent motor protection.

Connections without plug

Warning

The electrical connection must be carried out by an authorized electrician in accordance with local regulations.

Warning

Before making any connections in the product, make sure that the power supply has been switched off and that it cannot be accidentally switched on.

The product must be connected to an external mains switch with a contact gap of at least 3 mm (0.12 inch) in all poles.

Starting up the product

Caution

Do not start the pump until it has been filled with liquid.

Priming the pump

1. Unscrew the priming plug and pour minimum 1.7 litres (0.45 gallons) of water into the pump housing. See fig. 9.
2. Screw the priming plug on again.



Note

If the suction depth exceeds 6 m (20 ft), it may be necessary to prime the pump more than once.

Caution

Always tighten priming and drain plugs by hand.

Starting the pump

1. Open a tap to prepare the pump for venting.
2. Insert the power plug into the socket or turn on the power supply and the pump will start.
3. When water flows without air, close the tap.
4. Open the highest tapping point in the installation, preferably a shower.
5. Adjust the pressure to the required pressure by means of the   buttons.
6. Close the tapping point. Startup has been completed.



TM06 4204 1615

Fig. 9 Priming the pump

Shaft seal run-in

The shaft-seal faces are lubricated by the pumped liquid, meaning that there may be a certain amount of leakage from the shaft seal. When the pump is started up for the first time, or when the shaft seal has been replaced, a certain run-in period is required before the leakage is reduced to an acceptable level. The time required for this depends on the operating conditions, that is, every time the operating conditions change, a new run-in period will be started. Under normal conditions, the leaking liquid will evaporate. As a result, no leakage will be detected.

Storing and handling the product

Handling

Caution

Take care not to drop the pump as it may break.


Storing

In case the pump is to be stored for a period of time, drain it and store it in a dry location. Temperature range during storing must be -40 to 70 °C (104 to 158 °F).

Winterizing

If the pump is going to be out of operation during the winter and can be exposed to frost, it must be disconnected from the power supply and winterized.

Proceed as follows:

1. Stop the pump by means of the on/off button .
2. Disconnect the power supply.
3. Open a tap to release the pressure in the pipe system.
4. Close the isolating valves and/or drain the pipes.
5. Gradually loosen the priming plug to release the pressure in the pump.
6. Remove the drain plug to drain the pump. See fig. 10.



TM06 4203 1615


Fig. 10 Draining the pump

Startup after the winter

Check that the pump is not blocked by following the steps in section 9.1 Deblocking the pump. See section 4. Starting up the product.

Product introduction

Product description

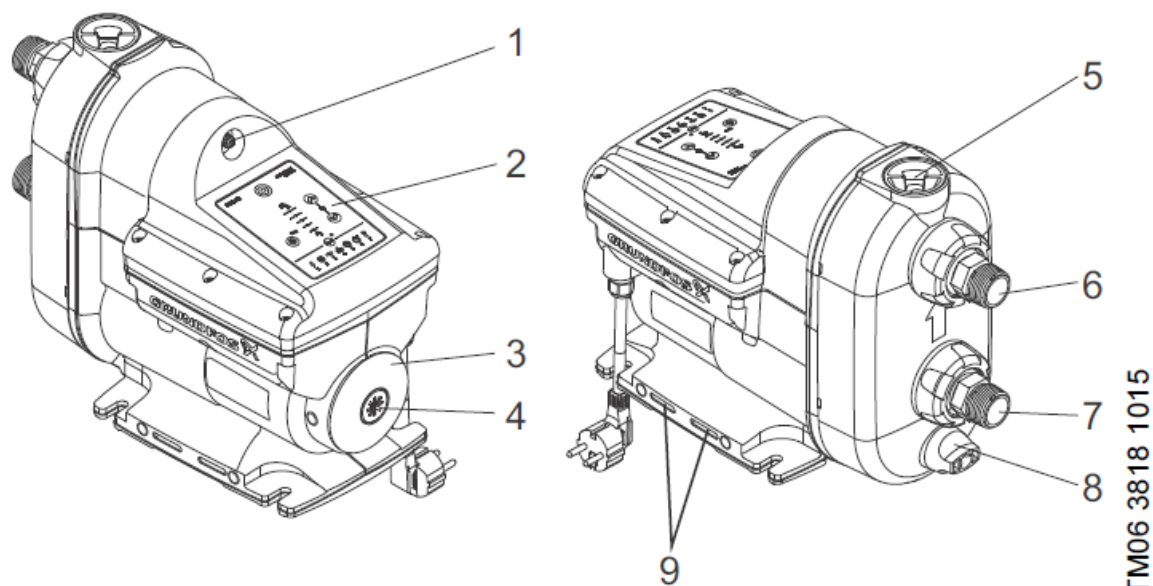

TM06 3818 1015

Fig. 11 Grundfos SCALA pump

Pos.	Description
1	Air valve for built-in pressure tank
2	Operating panel. See section 7. Control functions.
3	Nameplate. See section 6.4.1 Nameplate.
4	Plug for access to pump shaft. See section 9.1 Deblocking the pump.
5	Priming plug. See section 4.1 Priming the pump.
6	Outlet opening. With $\pm 5^\circ$ flexible connection. See section 3.4.1 Pipework.
7	Inlet opening. With $\pm 5^\circ$ flexible connection. See section 3.4.1 Pipework.
8	Drain plug. See section 5.3 Winterizing.
9	Ventilation holes. Must not be flooded.

Application


The pump is suitable for pressure boosting of fresh water in domestic water supply systems.

Pumped liquids

The pump is designed for clean fresh water and chlorinated water < 300 ppm.

Identification

Nameplate

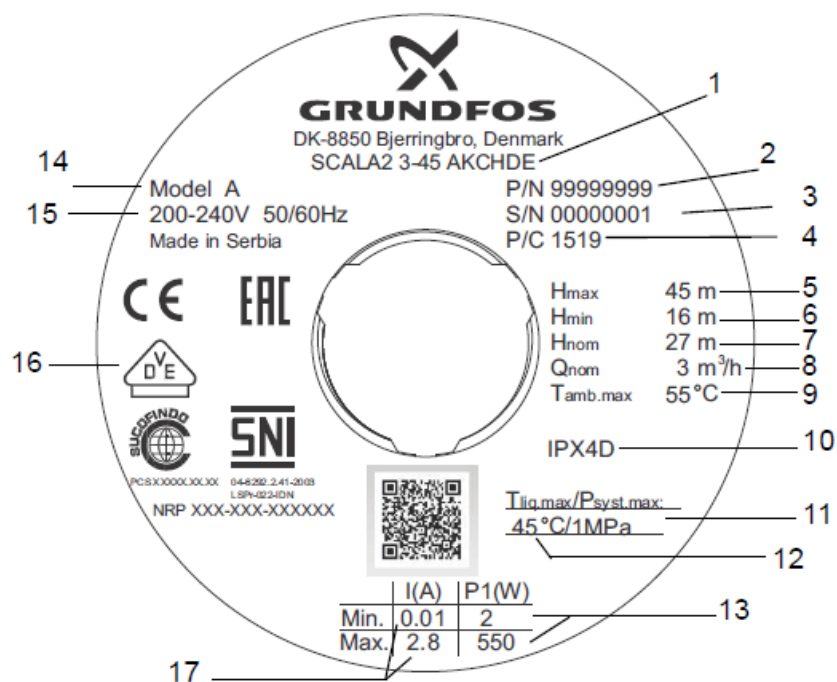

TM06 4340 2015

Fig. 12 Example of nameplate

Pos.	Description
1	Type designation
2	Product number
3	Serial number
4	Production code (year and week)
5	Maximum head
6	Minimum head
7	Rated head
8	Rated flow rate
9	Maximum ambient temperature
10	IP class
11	Maximum operation pressure
12	Maximum liquid temperature
13	Minimum and maximum rated power
14	Model
15	Voltage and frequency
16	Approvals
17	Minimum and maximum rated current

Type key

	SCALA2	3	-45	A	K	C	H	D	E
Type range									
SCALA1 Economy									
SCALA2 Comfort									
Rated flow rate									
3: [m ³ /h]									
Maximum head									
45: [m]									
Material code									
A: Standard									
Supply voltage									
K: 1 x 200-240 V, 50/60 Hz									
M: 1 x 208-230 V, 60 Hz									
V: 1 x 115 V, 60 Hz									
W: 1 x 100-115 V, 50/60 Hz									
Motor									
C: High-efficiency motor with frequency converter									
Mains cable and plug									
A: Cable with plug, IEC type I, AS/NZS3112, 2 m									
B: Cable with plug, IEC type B, NEMA 5-15P, 6 ft									
C: Cable with plug, IEC, type E&F, CEE7/7, 2 m									
D: Cable without plug, 2 m									
G: Cable with plug, IEC type G, BS1363, 2 m									
H: Cable with plug, IEC type I, IRAM 2073, 2 m									
J: Cable with plug, NEMA 6-15P, 6 ft									
Controller									
D: Integrated frequency converter									
Thread									
A: R 1" EN 1.4308									
C: NPT 1" EN 1.4308									
E: R 1" composite material									
F: NPT 1" composite material									








Control functions

Menu overview, SCALA2



TM06 3301 5114

Fig. 13 SCALA2 operating panel

SCALA2	Function
	On/off
	Increases the outlet pressure
	Decreases the outlet pressure
	Resets alarms
	Indicates the required outlet pressure
	Indicates that the pump has been stopped manually
	Indicates that the operating panel is locked









 

 
Pressure indicator, SCALA2

The pressure indicator shows the required outlet pressure from 1.5 to 5.5 bars (22 to 80 psi) in 0.5 bar (7.5 psi) intervals. The illustration below shows a pump set to 3 bar (44 psi) indicated by two green lights and a pump set to 3.5 bar (51 psi) indicated by one green light.



TM06 4345 2015

Fig. 14 SCALA2 outlet pressure indication

	BAR	PSI	Water column [m]	kPa	MPa
					
	5.5	80	55	550	0.55
	5.0	73	50	500	0.50
	4.5	65	45	450	0.45
	4.0	58	40	400	0.40
	3.5	51	35	350	0.35
	3.0	44	30	300	0.30
	2.5	36	25	250	0.25
	2.0	30	20	200	0.20
	1.5	22	15	150	0.15
					

TM06 4187 1615










Fig. 15 Pressure indication table

Note

The pressure settings 4.5, 5.0 and 5.5 bar (65, 73 and 80 psi) require a minimum positive inlet pressure which is maximum 4 bar (58 psi) lower than the required outlet pressure.

Example: If the required outlet pressure is 5 bar, the minimum inlet pressure must be 1 bar (14.5 psi).

Indicator lights, SCALA2



Indications	Description
	Operating indications
	The operating panel is locked
	Power supply failure
	The pump is blocked, e.g. the shaft seal has seized up
	Leakage in the system
	Dry-running or water shortage*
	The maximum pressure has been exceeded or the setpoint cannot be reached
	The maximum runtime has been exceeded
	The temperature is outside the range

* For fault number 4, dry-running, the pump must be reset manually. For fault number 4, water shortage, and the remaining faults, 1, 2, 3, 5, 6 and 7, the pump will reset whenever the cause has disappeared or been remedied. See section 8.3.2 Auto reset.

For further information about system status, see section 12.1 Grundfos Eye operating indications.

Operating the controller




Setting the outlet pressure

Adjust the outlet pressure by pressing   .




Locking and unlocking the operating panel

The operating panel can be locked, which means that the buttons do not function and no settings can be changed accidentally.

How to lock the operating panel

1. Hold down the   buttons simultaneously for three seconds.
2. The operating panel is locked when  symbol lights up.

How to unlock the operating panel

1. Hold down the   buttons simultaneously for three seconds.
2. The operating panel is unlocked when  symbol turns off.

Expert settings, SCALA2



Note

Expert settings are for installers only.




The expert setting menu allows the installer to toggle between the functions “Auto reset”, “Anti cycling” and “Maximum continuous operating time”.




Accessing the expert settings

Proceed as follows:

1. Hold down the  button for five seconds.
2. The  symbol will start flashing to indicate that the expert settings are active.

The pressure indicator now acts as the expert “menu”. A flashing green diode is the cursor. Move the cursor using

the   buttons, and toggle the selection on or off using the  button. The diode for each setting will light up when the setting is active.

	Move cursor up
	Move cursor down
	Toggle settings

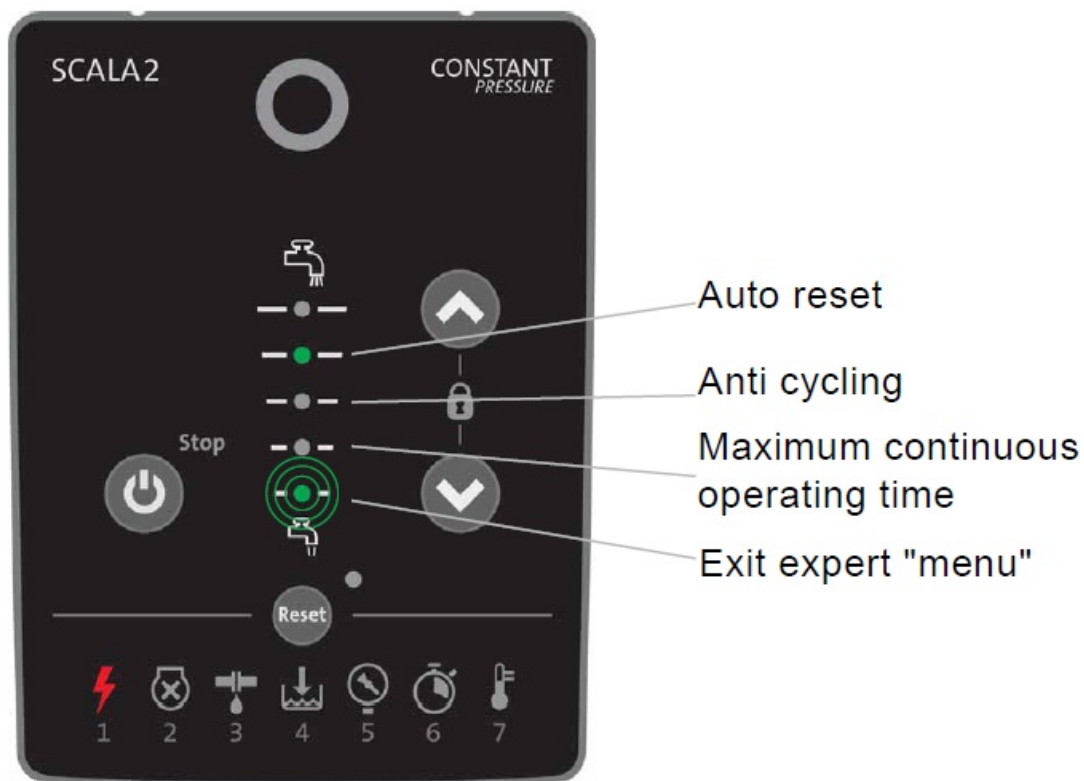


Fig. 16 Expert "menu" overview

Auto reset

The factory setting for “Auto reset” is “on”.

On:

This function allows the pump to automatically check if the operating conditions are back to normal. If the operating conditions are back to normal, the alarm indication will be reset automatically.

The “Auto reset” function works in the following way:

Indication	Action
Water shortage	The pump will attempt eight restarts at five-minute intervals. If not successful, this cycle will be repeated after 24 hours.
Dry running (pump not primed)	Prime the pump and reset it manually.
All other indications	The pump will attempt three restarts within the first 60 seconds, then eight restart attempts at five-minute intervals. If not successful, this cycle will be repeated after 24 hours.

For indications, see section 7.1.2 Indicator lights, SCALA2.

Off:

All alarms must be reset manually by means of the  button.

Anti cycling

The factory setting for “Anti cycling” is “off”.

This function monitors the stops and starts of the pump.

Off:

If the pump starts 40 times in a fixed pattern, there will be an alarm. The pump will remain in operation as normal.

On:

If the pump starts and stops in a fixed pattern, there is a leakage in the system, and the pump will stop and show alarm 3.



Leakage in the system.

Maximum continuous operating time

The factory setting for “Maximum continuous operating time” is “off”.

This function is a timer that can turn off the pump if it runs continuously for 30 minutes.

Off:

If the pump exceeds the running time of 30 minutes, the pump will run depending on the flow.



On:

If the pump exceeds the running time of 30 minutes, the pump will stop after 30 minutes of continuous operation, and it will show alarm 6. This alarm will always need to be reset manually.



Maximum runtime exceeded.

Resetting to factory settings

The pump can be reset to factory setting by pressing the   buttons simultaneously for five seconds.

Starting up the product after shutdown or standstill

Deblocking the pump

Warning

Before starting any work on the product, make sure that the power supply has been switched off and that it cannot be accidentally switched on.

The end cover incorporates a plug which can be removed by means of a suitable tool. This makes it possible to deblock the pump shaft if it has seized up as a result of inactivity.

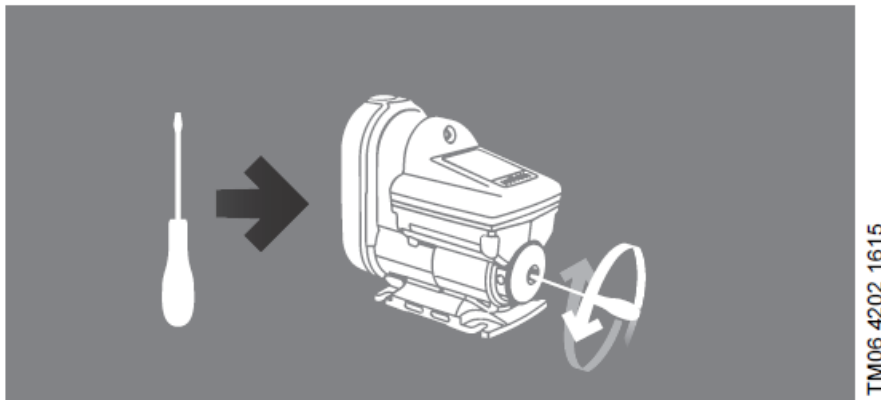


Fig. 17 Dblocking the pump

Controller settings

The pump will remember the controller settings even if it is turned off.

Priming

If the pump has been drained, it must be filled with liquid before startup. See section 4. Starting up the product.

Servicing the product


Warning

Before starting any work on the product, make sure that the power supply has been switched off and that it cannot be accidentally switched on.

Maintaining the product

Insect filter

The pump has an insect filter to prevent insects from nesting in the pump. The filter is placed on the bottom and can easily be removed and cleaned with a stiff brush. See fig. 18. Clean the insect filter once a year or as needed.

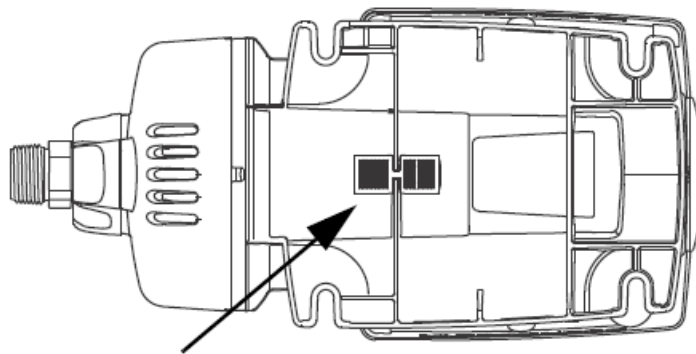


TM06 4537 2515

Fig. 18 Insect filter

Inlet and outlet valves

The pump is maintenance-free, but we recommend that you check and clean the inlet and outlet non-return valves once a year or as needed.

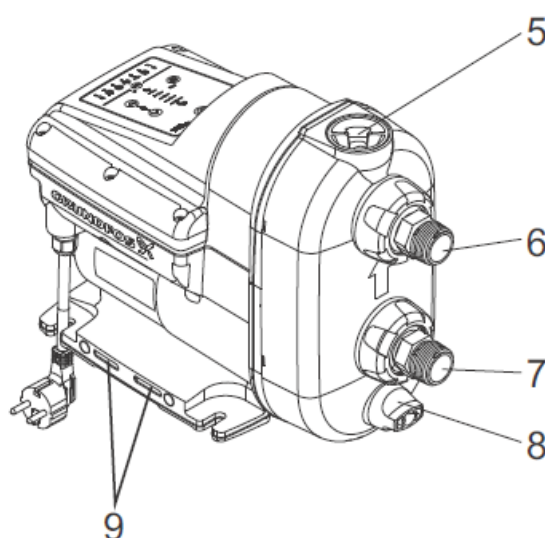

TM06 3818 1015

Fig. 19 SCALA pump

To remove the inlet non-return valve, follow the steps below:

1. Turn off the power supply and disconnect the power plug.
2. Shut off the water source.
3. Open a tap to release the pressure in the pipe system.
4. Close the isolating valves and/or drain the pipes.
5. Gradually open and remove the priming plug. See fig. 19 (5).
6. Remove the drain plug and drain the pump. See fig. 19 (8).
7. Unscrew the union nut holding the inlet connection. See fig. 19 (7). Depending on the installation type, it may be necessary to remove the pipes from both the inlet and outlet connections.
8. Pull out the inlet connection.
9. Pull out the inlet non-return valve.
10. Clean the non-return valve with warm water and a soft brush.
11. Assemble the components in reverse order.

To remove the outlet non-return valve, follow the steps below:

1. Turn off the power supply and disconnect the power plug.
2. Shut off the water source.
3. Open a tap to release the pressure in the pipe system.
4. Close the isolating valves and/or drain the pipes.
5. Gradually open and remove the priming plug. See fig. 19 (5). The plug and non-return valve are one unit.
6. Clean the non-return valve with warm water and a soft brush.
7. Assemble the components in reverse order.



Fig. 20 Outlet and inlet non-return valves

Customer service information

For further information on service parts, see Grundfos Product Center on www.product-selection.grundfos.com.

Service kits







For further information on service kits, see Grundfos Product Center on www.grundfos.com.

Taking out of operation

For further information on how to take the product out of operation, see end-of-life documentation on www.grundfos.com.


Fault finding the product

Grundfos Eye operating indications

Grundfos Eye	Indication	Description
	No lights are on.	The power is off. The pump is not running.
	Two opposite green indicator lights running in the direction of rotation of the pump.	The power is on. The pump is running.
	Two opposite green indicator lights at a 45 ° angle is the icon used throughout this document for pump running.	The power is on. The pump is running.
	Two opposite green indicator lights permanently on.	The power is on. The pump is not running.
	Two opposite red indicator lights flashing simultaneously.	Alarm. The pump has stopped.
	Two opposite red indicator lights is the icon used throughout this document for pump stopped.	Alarm. The pump has stopped.

Fault resetting

You can reset a fault indication in one of the following ways:




























- When you have eliminated the fault cause, reset the pump manually by pressing the  button. The pump will then revert to normal duty.
- If the fault disappears by itself, the pump will attempt to reset automatically and the fault indication will disappear if automatic reset is successful and provided that you have enabled “Auto reset” in the service menu.
















 
Fault finding chart

Warning

Before starting fault finding, switch off the power supply.

Make sure that the power supply cannot be accidentally switched on.

Fault	Grundfos Eye	Indicator light	Automatic reset	Cause	Remedy
1. The pump is not running.		-	-	a) Power supply failure	Switch on the power supply. Check the cables and cable connections for defects and loose connections and check for blown fuses in the electrical installation.
			Yes	b) The power supply is out of prescribed voltage range	Check the power supply and the pump nameplate. Reestablish the power supply within the prescribed voltage range.
			No	c) The shaft seal has seized up	See section 9. <i>Starting up the product after shutdown or standstill.</i>
			No	d) The pump is blocked by impurities	See section 9. <i>Starting up the product after shutdown or standstill.</i> Contact Grundfos Service if the problem persists.
			Yes	e) Dry running	Check the water source, and prime the pump.
			No	f) The maximum runtime has been exceeded	Check the installation for leakage and reset the alarm.
			No	g) The internal non-return valve is defective or blocked in completely or partly open position	Clean, repair or replace the non-return valve. See section 10. <i>Servicing the product.</i>
2. The pump is running.			-	a) Leakage from the pipework, or the non-return valve is not properly closed due to impurities	Check and repair the pipework, or clean, repair or replace the non-return valve.
			-	b) Small continuous consumption	Check the taps and reconsider the usage pattern (ice machines, water evaporators for air-conditioning, etc.).
			-	c) The temperature is below freezing point	Consider protecting the pump and the installation against frost.
3. Pump performance is insufficient.		-	-	a) The pump inlet pressure is too low	Check the inlet conditions of the pump.
		-	-	b) The pump is undersized.	Replace the pump with a bigger pump.
		-	-	c) The inlet pipe, the inlet strainer or the pump is partly blocked by impurities	Clean the inlet pipe or the pump.
		-	-	d) Leakage in the inlet pipe	Repair the inlet pipe.
		-	-	e) Air in the inlet pipe or the pump	Prime the inlet pipe and the pump. Check the inlet conditions of the pump.
		-	-	f) The required outlet pressure is too low for the installation	Increase the pressure setting (arrow up).
			Yes	g) The maximum temperature has been exceeded and the pump is running at reduced performance	Check the cooling conditions. Protect the pump against direct sunlight or any nearby heat sources.

Fault	Grundfos Eye	Indicator light	Automatic reset	Cause	Remedy
4. System overpressure.			Yes	a) The setpoint has been set too high. The difference between the outlet pressure and the inlet pressure must not exceed 4 bar (58 psi). Example: If the required outlet pressure is 5 bar (73 psi), the minimum inlet pressure must be 1 bar (14.5 psi).	Reduce the setpoint to 4 bar (58 psi) + positive inlet pressure.
			Yes	b) The maximum pressure has been exceeded - the inlet pressure is higher than 6 bar, 0.6 MPa (87 psi)	Check the inlet conditions.
			Yes	c) The maximum pressure has been exceeded - equipment elsewhere in the system causes a high pressure at the pump (e.g. water heater or defective safety equipment)	Check the installation.
5. You can reset the pump, but it runs only for a few seconds.			Yes	a) Dry running or water shortage	Check the water source, and prime the pump.
			Yes	b) The inlet pipe is blocked by impurities	Clean the inlet pipe.
			Yes	c) The foot or non-return valve is blocked in closed position	Clean, repair or replace the foot or non-return valve.
			Yes	d) Leakage in the inlet pipe	Repair the inlet pipe.
			Yes	e) Air in the inlet pipe or the pump	Prime the inlet pipe and the pump. Check the inlet conditions of the pump.
6. You can reset the pump, but it starts repeatedly, immediately after stopping.			No	a) The internal non-return valve is defective or blocked in completely or partly open position.	Clean, repair or replace the non-return valve.
			No	b) The tank precharge pressure is not correct.	Adjust the tank precharge pressure to 70 % of the required outlet pressure.

Technical data

Operating conditions

- Maximum ambient temperature:
 - 1 x 208-230 V, 60 Hz: 45 °C (113 °F)
 - 1 x 115 V, 60 Hz: 45 °C (113 °F)
 - 1 x 200-240 V, 50/60 Hz: 55 °C (131 °F)
- Maximum liquid temperature: 45 °C (113 °F)
- Maximum system pressure: 10 bar, 1 MPa (145 psi)
- Maximum inlet pressure: 6 bar, 0.6 MPa (87 psi)
- Maximum head: 45 m (147 ft)
- IP rating: X4D (outdoor installation)
- Pumped liquid: Clean water
- Noise level: < 47-53 dB(A)

Mechanical data


Pipe connections are R 1" or NPT 1".

Electrical data

Type	Supply voltage [V]	Frequency [Hz]	I _{max.} [A]	P1 [W]	Stand-by power [W]
SCALA2	1 x 200-240	50/60	2.3 - 2.8	550	2
					2
					2
					2
SCALA2	1 x 208-230	60	2.3 - 2.8	550	2
SCALA2	1 x 115	60	5 - 5.7	560	2

Type	Supply voltage [V]	Frequency [Hz]	Plug
SCALA2	1 x 200-240	50/60	IEC, type E&F
			IEC, type I
			IEC, type G
			None
SCALA2	1 x 208-230	60	NEMA 6-15P
SCALA2	1 x 115	60	IEC, type B, NEMA 5-15P

Dimensions and weights

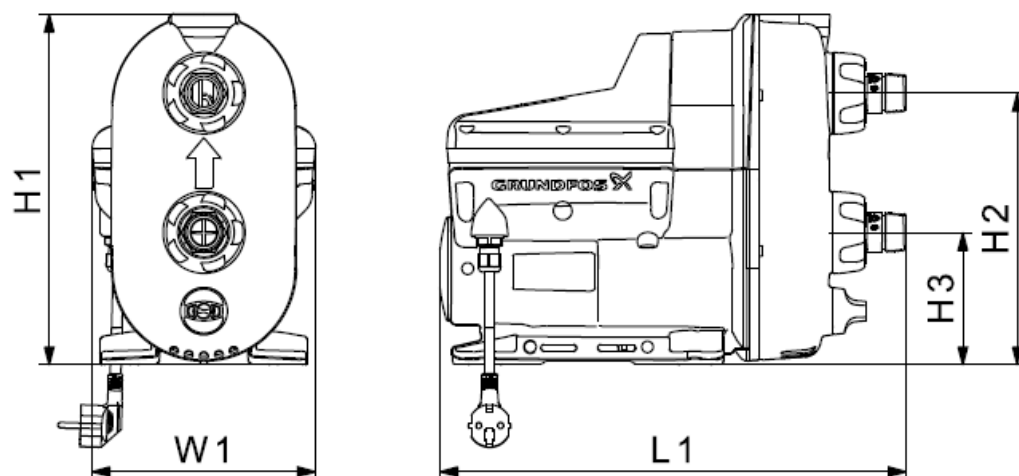

TM06 3305 5114

Type	H1 [mm] [inch]	H2 [mm] [inch]	H3 [mm] [inch]	W1 [mm] [inch]	L1 [mm] [inch]	Weight [kg] [lbs]
SCALA2	302 11.9	234 9.2	114 4.5	193 7.6	403 15.9	10 22

Disposal

This product has been designed with focus on the disposal and recycling of materials.

The following disposal values apply to all variants of Grundfos SCALA pumps:

- Minimum 85 % for recycling
- Maximum 10 % for incineration
- Maximum 5 % for depositing.

Values are percent of total weight.

This product or parts of it must be disposed of in an environmentally sound way according to local regulations.
Subject to alterations.

Grundfos companies

United Kingdom

GRUNDFOS Pumps Ltd.
Grovebury Road
Leighton Buzzard/Beds. LU7 4TL

- Phone: +44-1525-850000
- Telefax: +44-1525-850011

Germany


GRUNDFOS GMBH
Schlüterstr. 33
40699 Erkrath

- Tel.: +49-(0) 211 929 69-0
- Telefax: +49-(0) 211 929 69-3799
- e-mail: infoservice@grundfos.de

Service in Deutschland:

- e-mail: kundendienst@grundfos.de
- www.grundfos.com

Documents / Resources

	<p>GRUNDFOS SCALA2 Smart Water Boosting Pump [pdf] Instructions 93013252, SCALA2 Smart Water Boosting Pump, SCALA2, Smart Water Boosting Pump, Boosting Pump, Pump</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.