



Gtech CTL001 Task Light Instruction Manual

[Home](#) » [Gtech](#) » Gtech CTL001 Task Light Instruction Manual 

Contents

- [1 Gtech CTL001 Task Light](#)
- [2 Product Usage Instructions](#)
- [3 IMPORTANT SAFEGUARDS](#)
- [4 About your product](#)
- [5 Operation](#)
- [6 Charging the battery](#)
- [7 Maintenance](#)
- [8 Troubleshooting](#)
- [9 TECHNICAL SPECIFICATION](#)
- [10 WARRANTY – REGISTRATION](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)



Gtech CTL001 Task Light



Product Information and Usage Instructions

Product Information:

Product Name: Task Light

Model Number: CTL001

Important Safety Information:

IMPORTANT SAFEGUARDS:

1. **READ ALL INSTRUCTIONS BEFORE USE.** Retain instructions for future reference.
2. **WARNING:** Basic safety precautions should always be observed when using an electrical appliance to reduce the risk of fire, electrical shock, or serious injury.

Personal Safety:

- Electrical safety
- Battery safety

Intended Use:

WARNING:

- This product is intended for specific use. Refer to the user manual for details.

About Your Product:

The Task Light (Model number: CTL001) is a portable light designed to provide illumination for various tasks. It features a power switch, lens/adjuster, hanging hook, and requires a battery (sold separately) for operation.

Product Usage Instructions

Installing and Removing the Battery:

1. To install the battery, simply insert the battery pack into the designated slot. Make sure the latch on the battery snaps in place and the battery pack is securely attached to the tool.
2. To remove the battery, depress the latch and pull out the battery pack.

Adjusting the Position of the Light:

To adjust the position of the light:

1. Pull the lamp fully forward to find the hanging hook.
2. Flip out the hanging hook.
3. Once the hook has been deployed, the light can be angled accordingly.
4. The lamp can also be sat upright for different lighting angles.

Operation:

To operate the Task Light:

1. To switch on, press the green button once.
2. Press the green button a second time for full brightness.
3. Press the green button a third time to switch off the light.
4. There is an adjuster on the lens to turn the beam from wide to narrow.
5. **WARNING:** Do not shine the light directly into your own or anyone else's eyes.

Charging the Battery:

To charge the battery:

1. Line up the slot of the battery with the slot of the charger and slide it into place. (The charger is sold separately.)
2. The battery indicator light should turn from green to red when the battery is charging.
3. When the indicator light has turned green, the battery should be fully charged.
4. The state of charge of the battery can be tested by pressing the button. Three bars indicate a full charge, two bars indicate a partial charge, and one bar indicates a low charge.
5. **WARNING:** Allow the battery to cool down before charging if it is hot after continuous use.

Maintenance:

Safety warning for work-light:

- This product is not a toy and should not be used by children.
- The work-light should not be opened or modified unless done by a professional electrician.
- Do not attempt to replace or change the diode lights.
- If the protective glass is cracked or broken, it must be replaced before using the work-light again.

IMPORTANT SAFEGUARDS

IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE.

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

WARNING: Basic safety precautions should always be observed when using an electrical appliance to reduce the risk of fire, electrical shock or serious injury.

Personal Safety:

- Do not look directly at the light source or direct the light at your eyes.
- The product should not be positioned whereby it can be stared into for a prolonged period at a distance of less than 2.9m.
- Never operate the product if it is damaged.
- Keep the product and all accessories away from hot surfaces.
- Never modify the product in any way.

Electrical safety:

- Only use batteries and chargers supplied by Gtech.
- Never modify the charger in any way.
- The charger has been designed for a specific voltage. Always check that the mains voltage is the same as that stated on the rating plate.
- A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack; never use the charger with another appliance or attempt to charge this product with another charger.
- A damaged or entangled charger cord increases the risk of fire and electric shock.
- Do not abuse the charger cord.
- Never carry the charger by the cord.
- Do not pull the cord to disconnect from a socket; grasp the plug and pull to disconnect.
- Don't wrap the cord around the charger to store.
- Keep the charger cord away from hot surfaces and sharp edges.
- The supply cord cannot be replaced. If the cord is damaged the charger should be discarded and replaced.
- Avoid body contact with earthed or grounded surfaces, such as pipes. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not handle the charger or product with wet hands.
- Do not let children use or charge the product.
- Ensure users have an understanding of how to use, maintain and charge the product.
- Do not charge the battery pack outside.
- Before charging check the power supply and charger cables for signs of damage or ageing.

Battery safety:

- Liquid ejected from the battery may cause irritation or burns.
- In an emergency situation contact professional help immediately.
- Do not touch any liquid that leaks from the battery.
- Wear gloves to handle the battery and dispose of immediately in accordance with local regulations.
- Shorting the battery terminals may cause burns or fire.
- When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws or other small metal objects that could make a connection from one terminal to another.
- When you dispose of the appliance remove the battery and dispose of the battery safely in accordance with local regulations.
- Batteries must be recycled or disposed of properly. Do not dispose of batteries with regular waste, municipal waste stream or burn, as batteries may leak or explode. Do not open, short circuit or mutilate batteries as injury may occur.
- Do not use the appliance if any part is damaged or defective.
- Do not attempt to use the charger with any other product or to charge this product with any other charger.
- This product uses Li-Ion batteries. Do not incinerate batteries or expose to high temperatures, as they may explode.
- Do not charge the battery when the surrounding air temperature or the battery pack is below 0°C or above 45°C.
- After prolonged use or in high temperatures the battery may become warm. Allow the product to cool for 30 minutes before charging.
- Use only with recommended Gtech battery.
- Leaks from battery cells can occur under extreme conditions. If the liquid gets on your skin wash immediately with soap and water. If the liquid gets into your eyes, flush them immediately with cold water for a minimum of 10 minutes and seek urgent medical attention.
- Do not store the battery outside for prolonged periods of time, especially over the winter months.

Maintenance and storage

- Use only the manufacturer's recommended replacement parts and accessories.
- When not in use, store out of the reach of children.
- The LEDs of the product are not replaceable; when they reach the end of life the product must be replaced.

Intended Use:

- This product is intended for

DOMESTIC USE ONLY.

WARNING:

- Do not use solvents, or polishes to clean the outside of the appliance; wipe clean with a dry cloth.

Thank you for choosing Gtech

 
“ Welcome to the Gtech family. I started Gtech to create sensible, easy to use products that do a great job, and hope you get many years of trouble-free performance from your new product.”

Make a note of your product serial number code for future reference. You can find this on the underside of the product once the battery has been removed.





About your product

1. Power switch
2. Lens/Adjuster
3. Hanging hook
4. Battery (sold separately)


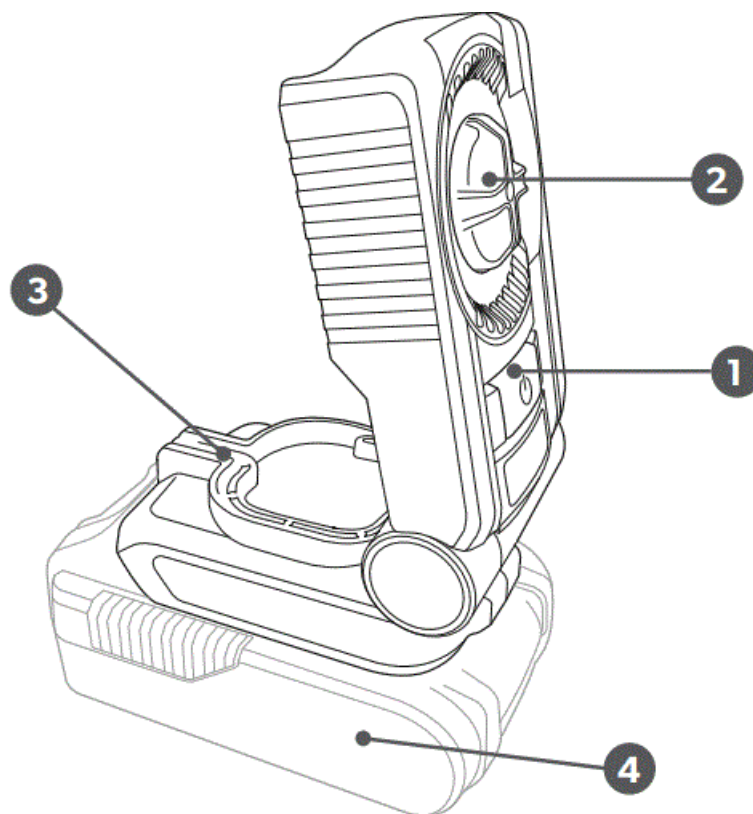


Installing and removing the battery

  - To install, simply insert the battery pack.

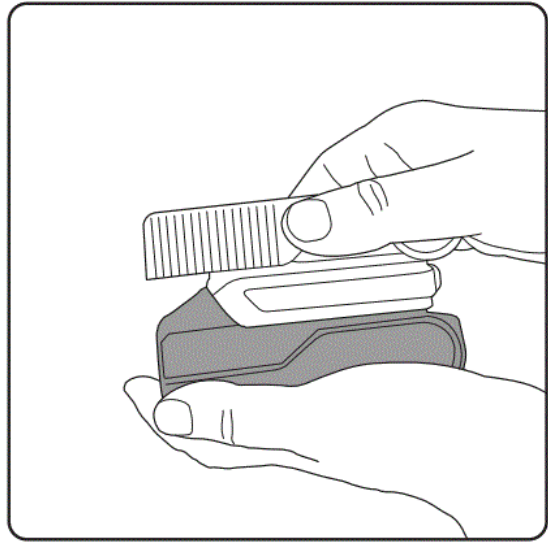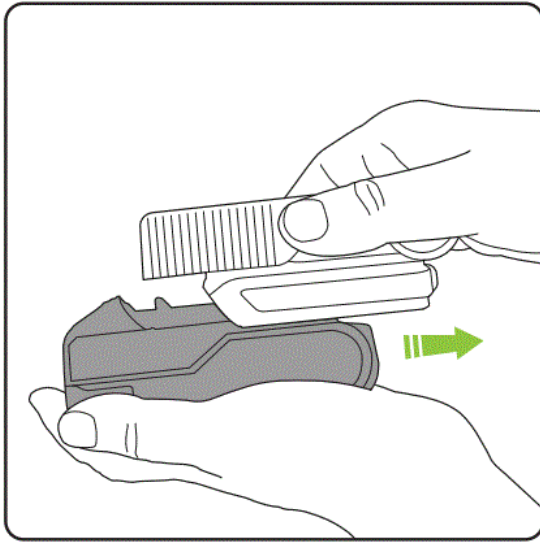

 
 
- Make sure the latch on the battery snaps in place and battery pack is secured to the tool.
- To remove, depress the latch...

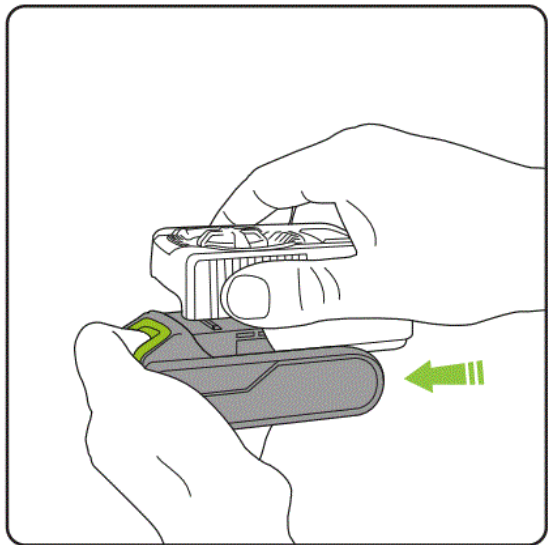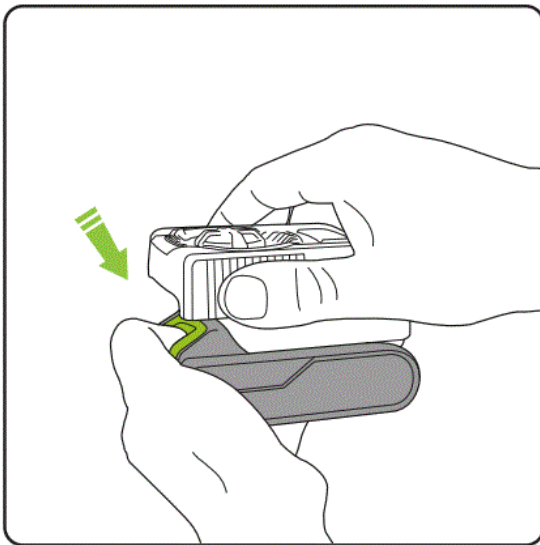



- ...and pull out the battery pack.

Adjusting the position of the light

 
 
- The light can be positioned through 180°

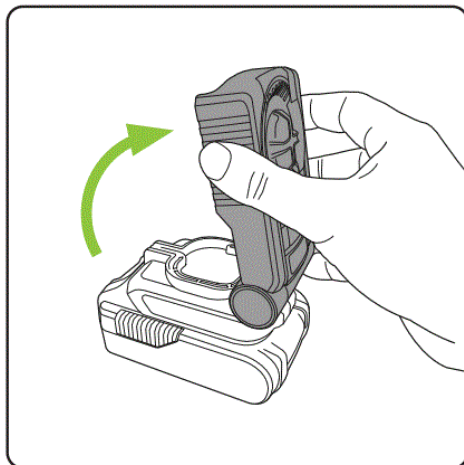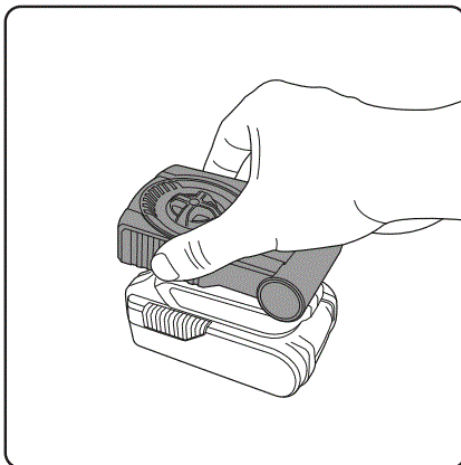

  - Full the lamp fully forward to find the hanging hook

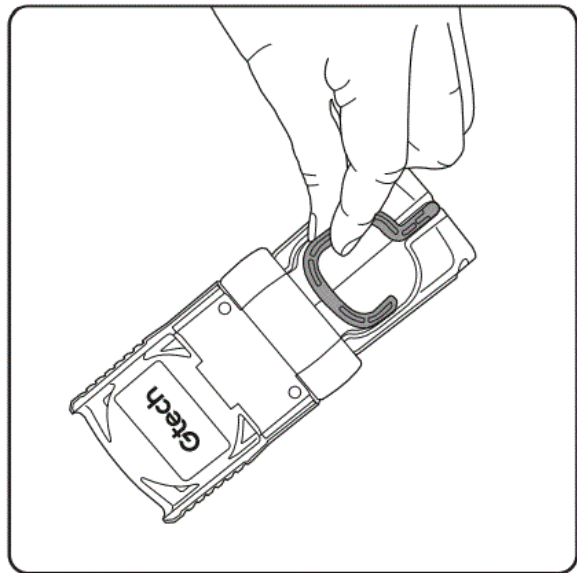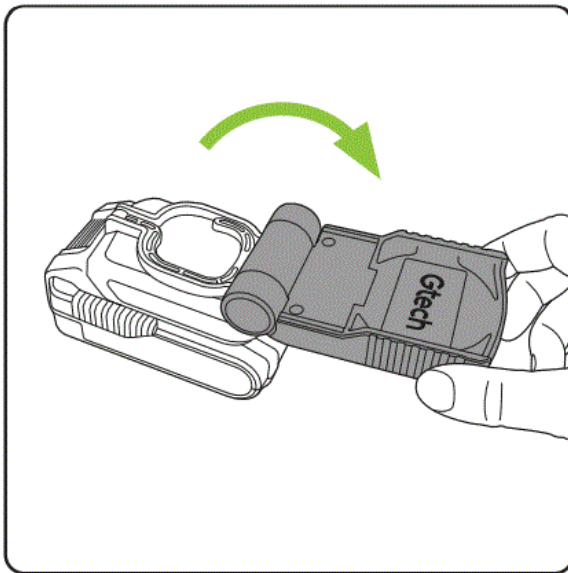

 
 
- This can be flipped out.
- Once the hook has been deployed the light can be angled accordingly.

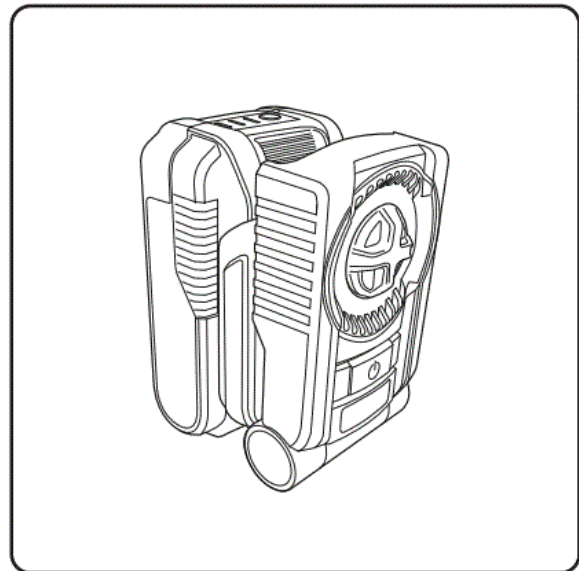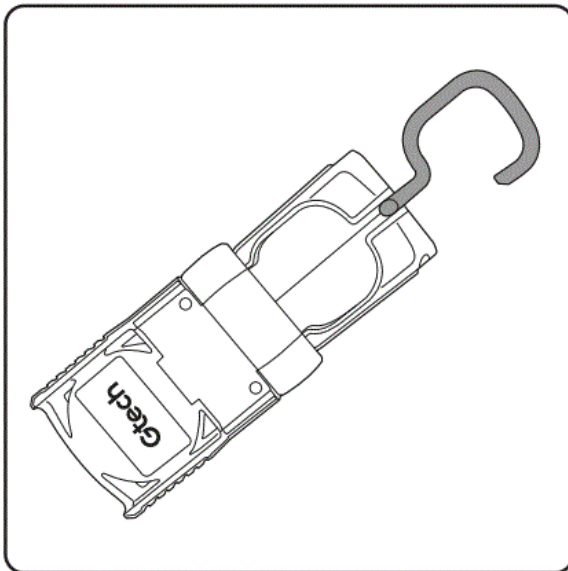

- The lamp can also be sat upright

Operation

  - To switch on press the green button. Press a second time for full brightness and third time to switch off.

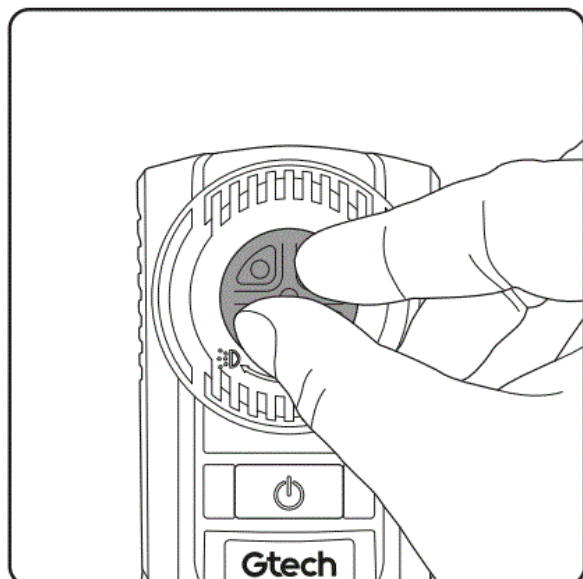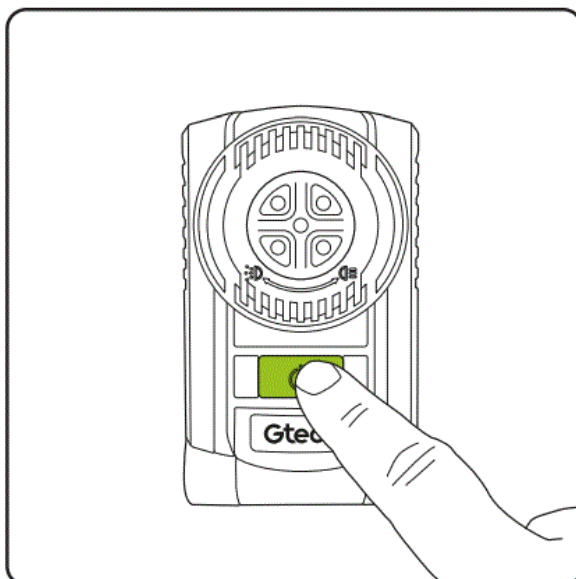


- There is an adjuster on the lens to turn the beam from wide to narrow.

WARNING:


Do not shine the light directly into your own or anyone else's eyes.

Charging the battery

 - To charge the battery, line up the slot of the battery with the slot of the charger and slide into place. The charger is sold separately.

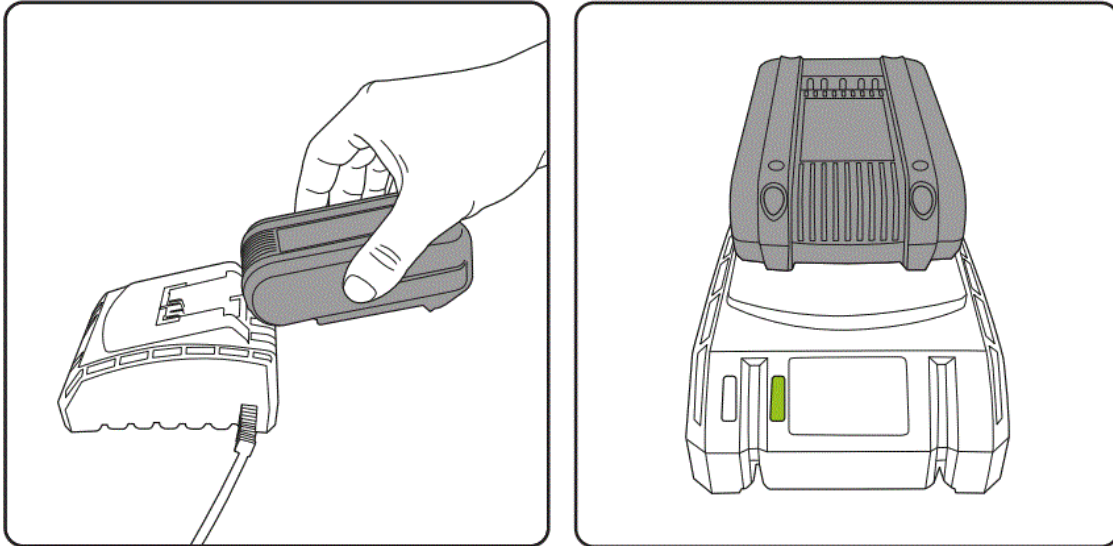

 - The battery indicator light should turn from green to red when the battery is charging. When the indicator light has turned green the battery should be fully charged.
- The state of charge of the battery can be tested by pressing the button. Three bars indicates a full charge, two bars a partial charge, one bar low charge.

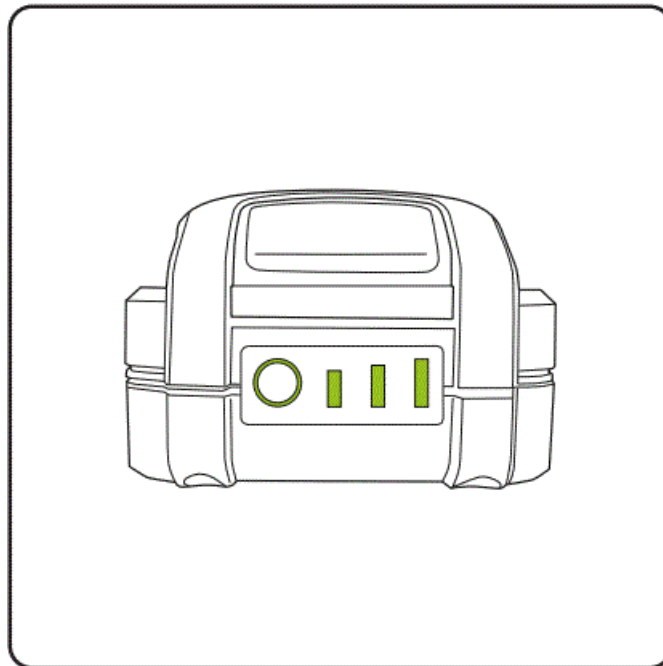

WARNING:

Allow battery to cool down before charging if the battery is hot after continuous use.

BATTERY

All batteries wear out over time due to normal wear and tear. Do not attempt to disassemble and repair the

battery, as this could cause serious burns especially when wearing rings and jewellery. For the longest possible battery life, we suggest the following:

- Remove the battery from the charger once fully charged.
- Store the battery away from moisture and at a temperature below 80°F.
- Store the battery with at least a 30% – 50% charge.
- If a battery has been stored for six months or more, charge the battery as normal.

Maintenance

Your product requires very little care and maintenance. Simply clean the lens regularly with a non-abrasive cleaner, we recommend the work light to be completely discharged every one month and fully recharged again. Only store with a fully charged battery and top-up the charge from time to time if stored for a long time (we recommend the work light to be completely discharged every three month and fully recharged again). Store in a dry and frost-free place, the ambient temperature should not exceed 40°C.

Safety warning for work-Light

This is not a toy; children should not permit to use it. This is a DIY product, all electronic parts fixed already, any intention of opening work-light or changing work-light design is prohibitive unless a professional electrician. Do not attempt to replace or change or the diode lights! If the protective glass is cracked or broken, it must be replaced before the work light can be used again.

Troubleshooting

The product isn't working	The battery may have cut out due to excessive use to prevent overheating. Allow the product to cool down before re-using.
The product is getting hot	During intensive use, this is normal, but it is advisable to allow the product to cool down regularly to prevent damage of the motor.
The battery heats up during use	This is normal. Allow the battery to cool down regularly to prevent damage of the battery.
The battery and charger heat up during charging	This is normal. It is advisable to remove the battery from the charger once it is fully charged.

Product support

If these initial tips do not solve your problem we please visit our support area where you can find troubleshooting help including online manuals, FAQs and how-to-videos, as well as genuine spares and replacement parts compatible with your product.

Visit: www.gtech.co.uk/support



Online



Live chat support



support@gtech.co.uk



How to Videos

Online

Live chat support

TECHNICAL SPECIFICATION


Voltage	DC 20V Max
Work Time:	Max 12 hrs
Output power	4 Watts
Brightness	300 Lumens High 150 Lumens Low

WARRANTY – REGISTRATION

Visit www.gtech.co.uk/warrantyregistration to register your product to ensure that we have all the information required to provide you with quick and efficient support.

You will need your product's serial code.

 If you purchased directly from Gtech, your details are already registered and your 2-year warranty will start automatically.

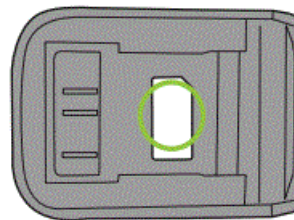

If you purchased from an authorised Gtech retailer, please register your warranty within 3 months. You will need to provide proof of purchase to support any claim(s) against your warranty.

WARRANTY – TERMS AND CONDITIONS

If your product is within its warranty and has a fault that cannot be resolved from the troubleshooting section or online support, please do the following:

- Contact our Gtech Customer Care Helpline on UK: 08000 308 794, who will go through any troubleshooting with you to identify the fault.
- If your fault can be resolved by a replacement part, this will be sent to you free of charge.
- Following troubleshooting, if your product needs to be replaced, we will arrange collection of your faulty product for inspection, and delivery of a replacement product free of charge.

Your product is guaranteed against material or manufacturing faults for 2 years from the date of purchase (or the delivery date if this is later) subject to the following terms and conditions:

SUMMARY

The guarantee becomes effective at the date of purchase (or the date of delivery if this is later). If a product is repaired or replaced during the warranty period, the warranty period is not started again.

- You must provide proof of delivery/purchase before any work can be carried out on the product. Without this proof, any work carried out will be chargeable. Please keep your receipt or delivery note.
- All work will be carried out by Gtech or its authorised agents.
- Any parts which are replaced will become the property of Gtech.
- The repair or replacement of your product is under guarantee and will not extend the period of guarantee.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer.

WHAT ISN'T COVERED

Gtech does not guarantee the repair or replacement of a product as a result of:

- Normal wear and tear (e.g. batteries) .
- Use of consumables
- Accidental damage, faults caused by negligent use or lack of care and maintenance, misuse, neglect, careless operation or handling of the product which is not in accordance with operating manual.
- Use of the product for anything other than the normal domestic household purposes.
- Use of parts and accessories which are not Gtech genuine components.
- Faulty installation (except where installed by Gtech)
- If it is modified in any way.
- Repairs or alterations carried out by parties other than Gtech or its authorised agents.
- Purchasing your product from an unofficial third party (i.e not from Gtech or an official Gtech retailer.
- If you are in doubt as to what is covered by your guarantee, please call the Gtech Customer Care Helpline on UK: 08000 308 794

International orders are subject to a delivery charge for both faulty and non faulty products.

The symbol indicates that this product is covered by legislation for waste electrical and electronic products (2012/19/EU)

When the product has reached the end of its life, it and the Li-Ion battery it contains should not be disposed of with general household waste. The battery should be removed from the product and both should be disposed of properly at a recognised recycling facility.

Call your local council, civic amenity site, or recycling centre for information on the disposal and recycling of electrical products. Alternatively visit www.recycle-more.co.uk for advice on recycling and to find your nearest recycling facilities.

FOR HOUSEHOLD USE ONLY

Grey Technology Limited


Brindley Road, Warndon, Worcester WR4 9FB

email: support@gtech.co.uk

telephone: 08000 308 794

www.gtech.co.uk

Documents / Resources

 The image shows the front cover of the Gtech CTL001 Task Light instruction manual. It features the Gtech logo at the top left, the product name 'Task Light' and model number 'Model number: CTL001' at the top center, a line drawing of the task light in the center, and the text 'OPERATING MANUAL' at the bottom center.	<p>Gtech CTL001 Task Light [pdf] Instruction Manual CTL001 Task Light, CTL001, Task Light, Light</p>
--	--

References

- [G Gtech UK Official: Vacuum Cleaners, Home & Gardening](#)
- [G Support and Customer Service | Gtech](#)
- [G Register your product | Gtech](#)
- [👤 Everything you need to know to Recycle More](#)