



Guangzhou Baihui Auto Electronic J23 Keyless Entry Remote Instructions

[Home](#) » [Guangzhou Baihui Auto Electronic](#) » **Guangzhou Baihui Auto Electronic J23 Keyless Entry Remote Instructions** 

Contents

- [1 Guangzhou Baihui Auto Electronic J23 Keyless Entry Remote](#)
- [2 Introduction](#)
- [3 General Description](#)
- [4 PROGRAMMING](#)
- [5 FCC Statement:](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Guangzhou logo

Guangzhou Baihui Auto Electronic J23 Keyless Entry Remote



Introduction

Thanks for purchasing our product. This is an aftermarket key replacement for your lost or broken key. Its function and appearance are the same as the original. Please read the instruction clearly before you use the replacement.

Guangzhou Baihui Auto Electronic Co., Ltd

Guangzhou Baihui Auto Electronic Co., Ltd. focuses on this line for more than 10 years. The product could be divided into three parts, key fob, brake light, and Antenna. Our ambition is to provide a perfect auto part replacement for users who enjoy driving. The store offers simple, practical solutions to replace your lost or broken parts.

General Description

Color: Black Product type: Auto part Manufacture & Brand: 433MHz Product name: Keyless entry remote
Caution: Some key fobs could be programmed without the original key but some must be with the original.

PROGRAMMING

Key fob Cadillac ATS programming instruction (for example) With Recognized Transmitter The vehicle must be off, and both currently recognized and new must be with you.

1. Remove the vehicle key from the recognized transmitter.
2. Place the recognized transmitter in the cupholder.
3. Insert the vehicle key into the key lock cylinder on the driver door handle, then turn the key counterclockwise to the unlock position five times within 10 seconds. The Driver Information Center (DIC) displays READY TO LEARN ELECTRONIC KEY.
4. Place the new into the transmitter pocket. The console area will need to be opened to access the transmitter pocket.
5. Press the ENGINE START button. When the transmitter is learned, the DIC display will show that it is ready to program the next transmitter.
6. Remove the transmitter from the transmitter pocket and press unlock or lock on the transmitter. When transmitters are programmed, press and hold the ENGINE START for 12 seconds to exit programming mode.

Note

- Some of the key fobs could be programmed by following the step-by-step instruction. But some must be cut and programmed by qualified locksmith or dealer.
- If you have no idea about the compatibility between your vehicle and key replacement, you could search for instruction on <http://www.programyourremote.com/> or search on YouTube.
- If it still does not work after self-programmed, please turn to local locksmith or dealer for technical help.
- Avoid severe impact. The key fob is designed to withstand impact under normal use even if it is made of good quality material. It is not recommended to subject it to severe impact or rough usage.

Satisfaction using experience

All of our key fobs contain electronics components (some uncut key contained), you have no need to prepare electronics or batteries. If there is any problem without the key fob, just contact Guangzhou Baihui Auto Electronic Co., Ltd. and send a message to us by Amazon.

FCC Statement:

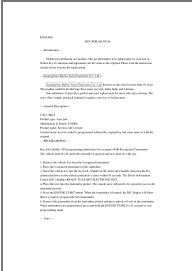
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by the manufacturer could void your

authority to operate this equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Documents / Resources

	Guangzhou Baihui Auto Electronic J23 Keyless Entry Remote [pdf] Instructions J23, 2A4RX-J23, 2A4RXJ23, J23 Keyless Entry Remote, Keyless Entry Remote, Entry Remote , Remote
---	--

References

- 🌐 [Free Automotive Keyless Entry Remote Fob Smart Key Programming Instructions](#)