



# Guangzhou Chuxun Electronic Technology CX215C Touch Computer All-In-One Machine Instruction Manual

[Home](#) » [Guangzhou Chuxun Electronic Technology](#) » Guangzhou Chuxun Electronic Technology CX215C Touch Computer All-In-One Machine Instruction Manual

*Guangzhou Chuxun Electronic Technology*  
*CX215C Touch Computer All-In-One*  
*Machine Instruction Manual*

# CUSN

## Product instruction manual

### Contents [ [hide](#) ]

- [1 Product description of touch All-in-one](#)
- [2 Safety Precautions](#)
- [3 Warranty that](#)
- [4 Product Introduction reference](#)
- [5 Wireless network connection](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

**Product description of touch All-in-one**

1. Touch all – in – one connection:
2. Connect the power output plug of the power adapter to the power port of the fusion cube, connect the three-pin plug to the power socket, and then press the switch button to start the fusion cube
3. Number of interfaces:
4. USB:A device or USB flash drive is connected to the USB port
5. HDMI: A device or USB flash drive is connected to the USB port
6. VGA: External display equipment
7. LAN :Network interface, LAN interface
8. Audio: Connect speakers and earphones
9. COM:232 agreement
10. DC12V-4A

## **Safety Precautions**

Please read the following safety precautions carefully before using this computer

To ensure your safety and prolong the service life of color touch all-in-one, please read the following safety precautions carefully before use. Do not use accessories not recommended by the manufacturer. Improper use of accessories may cause accidents.

Use the power adapter that comes with the touch Appliance. Check the specifications of the touch Appliance before connecting the AC power cable to the power socket Voltage suitable for local power supply conditions.

There is high pressure in the machine, do not open the case, in case of electric shock. Please make sure that the maintenance is carried out by a professional. Incorrect operation methods may be possible

It could lead to electrocution or fire.

When the machine needs to replace parts, please confirm with the maintenance personnel to use the parts specified by the manufacturer or with the same performance as the original Improper can lead to fire, electric shock, damage and other hazards.

When cleaning, unplug the power plug first. Do not use chemical or spray cleaners. Wipe with a damp cloth. Please wipe with a damp cloth. If the device is not used for a long time, please remove the AC power plug. Do not place the unit on an unstable surface. Please ensure that the air around the machine is circulating and the air vent is not covered or blocked.

 
The LCD panel of the machine is made of sensitive materials. Do not touch the LCD panel with anything if the machine is dropped or hit from a high place Impact, the LCD panel may be broken, please stop using the unit immediately. Do not place the unit in direct sunlight or near heat sources such as radiators, heaters, stoves and other hot objects.

## **Warranty that**

1. Dear customers, how are you? Thank you for buying CUSN products, which are produced under strict quality control and quality inspection. This warranty card means to provide customers with maintenance and adjustment in accordance with the provisions of the warranty card when the product breaks down under normal use.

2. Since the purchase date, in normal use when the failure of the touch all-in-one machine warranty for 1 year. However, the damage caused by man-made damage (such as improper demolition of parts, handling damage, etc.) and natural damage (such as fire, earthquake, flood, rodent damage, etc.) does not belong to this warranty scope.
3. Consumables such as power adapters are guaranteed for one year
4. As a result of the improper use of consumers themselves caused by the fault, do not give free warranty service.
5. The product has overdue warranty period failure, if the company still have spare parts to provide warranty service, discretionary parts fee and handling fee.
6. The right of final interpretation of this Regulation belongs to Guangzhou Chuxun Electronic Technology Co., LTD.

## Product Introduction reference

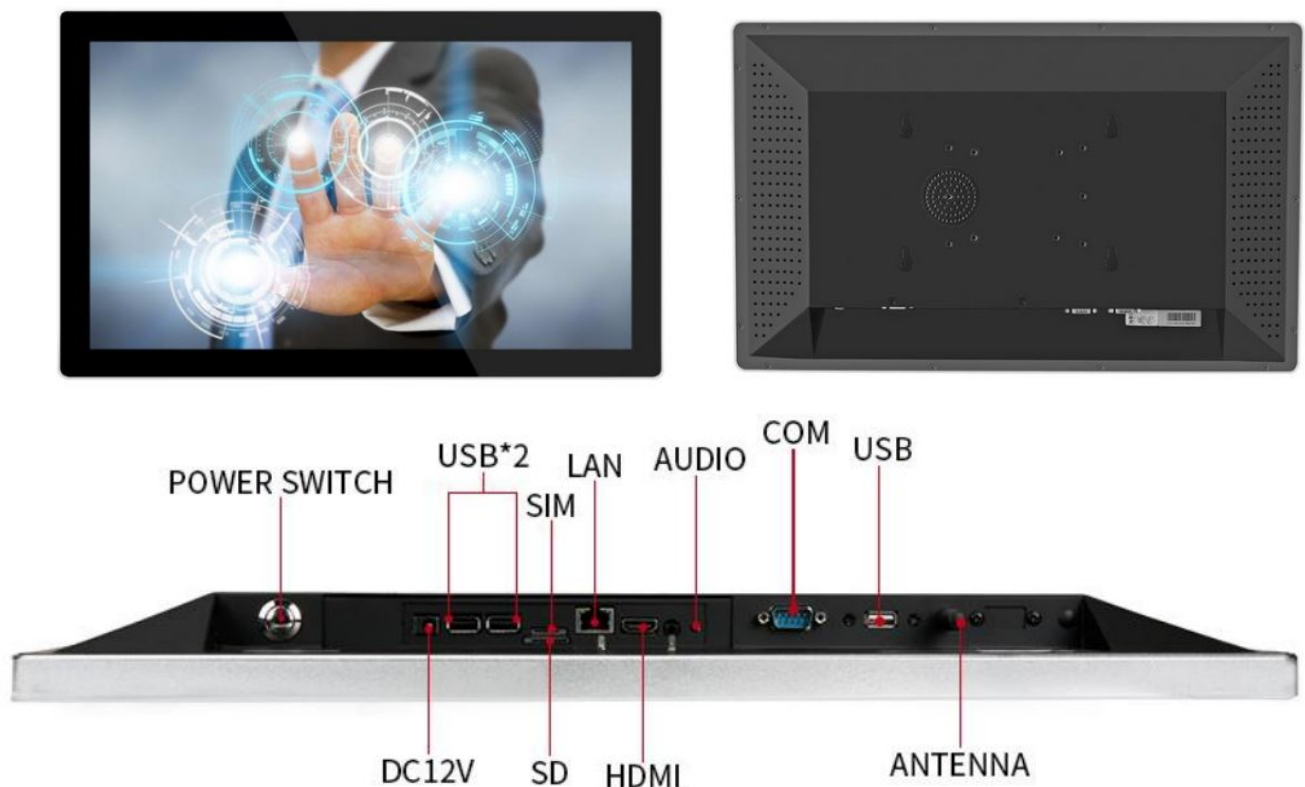


## Wireless network connection


1. Open the Settings



 
2. Select a wireless connection

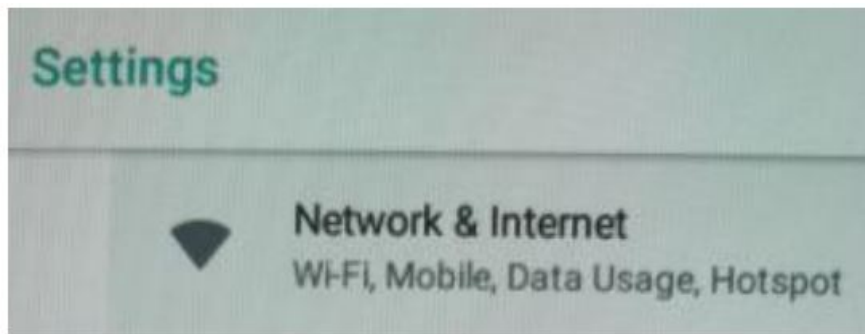

 
3. Select the corresponding wireless signal to be connected

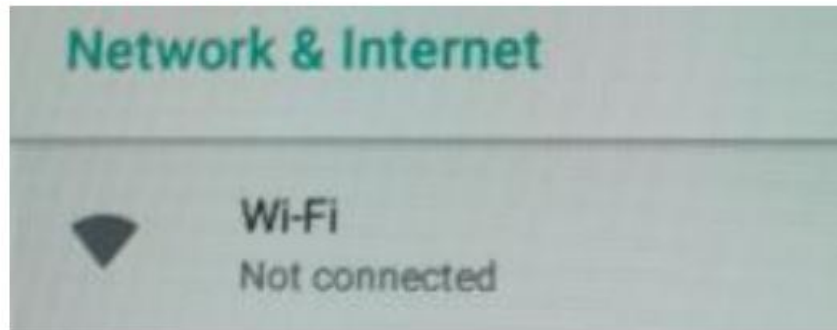

 4. Enter the wireless network connection password

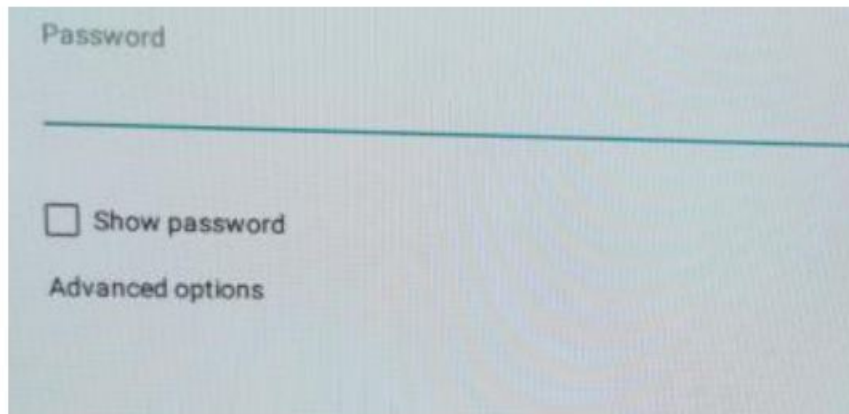

 5. Complete the connection

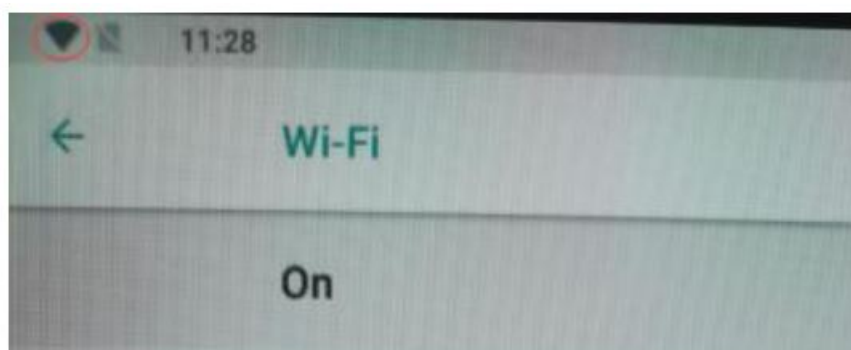

**FCC Caution.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Documents / Resources

[illegible]