

 **GUARDIAN**
GUARDIAN CSP-UL Series
Computer and Laptop Locks



GUARDIAN CSP-UL Series Computer and Laptop Locks Instruction Manual

[Home](#) » [GUARDIAN](#) » GUARDIAN CSP-UL Series Computer and Laptop Locks Instruction Manual 



Contents

- [1 GUARDIAN CSP-UL Series Computer and Laptop Locks](#)
- [2 Product Usage Instructions](#)
- [3 DETERMINE LOCK HEAD](#)
- [4 ASSEMBLING THE LOCK](#)
- [5 INSTALLING THE LOCK](#)
- [6 UNLOCKING THE LOCK](#)
- [7 TROUBLESHOOTING](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

GUARDIAN CSP-UL Series Computer and Laptop Locks



Product Specifications:

- Lock Slot Sizes:
 - 3.2 – 4.5mm WEDGE SLOT
 - 2.5 – 6mm NANO SLOT
 - 3 – 7mm STANDARD SLOT
- Cable Length: 6.5 ft
- Available Kits:
 - CSP-UL-3K – Universal kit, includes all 3 lockheads
 - CSP-UL-870k – T-Lock kit, includes only the T-lock lockhead
 - CSP-UL-871K – Wedge lock kit, includes only the wedge lockhead
 - CSP-UL-872K – Nano lock kit, includes only the nano lockhead

Product Usage Instructions

Determine Lock Head:

Determine which of the three interchangeable lock heads fits the lock slot on your computer.

Assembling the Lock:

Insert the lock head that fits the lock slot on your computer into the lock body.

Installing the Lock:

Anchor the cable to an immovable object like a desk leg or data hole. If no natural anchor point is available, use an external fastener. Insert the lock into the security slot of your computer and press the lock button.

Unlocking the Lock:

To unlock, turn the key to the right to remove the lock from your computer.

FAQ:

- **When changing lock heads, the new lock head won't go all the way into the lock body.**

Ensure the lock is unlocked and the lock button is not depressed before inserting the lock head into the lock body.
- **When pressing the lock button, the lock head gets pushed out of the lock body.**

The lock head has not been inserted completely. It should sit flush with the end of the lock body when seated correctly.
- **When inserting the lock into your device, it is hard to press the lock button.**

You may be using the wrong lock head. Check your device settings for security slot information.
- **How do I remove the lock head?**

With the lock unlocked, pull the lock head straight out of the lock body.
- **What if there isn't a natural anchoring point?**

A glue-on external fastener can be attached to a desk with permission.
- **How many keys are included?**

2 keys are included with each kit.
- **How long is the cable?**

The cable length is 6.5 ft.

COMPUTER AND LAPTOP LOCKS

DETERMINE LOCK HEAD

Determine which of the three interchangeable lock heads fits the lock slot on your computer.

UNIVERSAL SOLUTIONS

Three interchangeable lock heads




ASSEMBLING THE LOCK

- Insert the lock head that fits the lock slot on your computer into the lock body.
- If you purchased a specific-sized kit, the lock head is already pre-assembled.



INSTALLING THE LOCK

- Anchor the cable to an immovable object. This could be a desk leg or data hole. If no natural anchor point is available, you can use an external fastener.

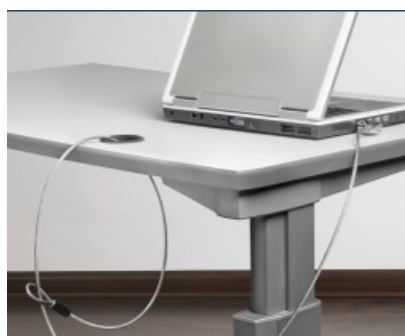

- Insert the lock into the security slot of your computer and press the lock button.



UNLOCKING THE LOCK



To unlock, turn the key to the right to remove the lock from your computer.

Have questions? Need a different lock style? Need any of the lock styles in bulk? Give us a call at [800-466-7636](tel:800-466-7636) or send us an email to: help@computersecurity.com

TROUBLESHOOTING

QUESTIONS & ANSWERS

- **When changing lock heads, the new lock head won't go all the way into the lock body.**
Ensure the lock is unlocked and the lock button is not depressed before inserting the lock head into the lock body. If the lock button is depressed (even partially) on the lock body, you will not be able to fully insert the lock head.
- **When pressing the lock button, the lock head gets pushed out of the lock body**
The lock head has not been inserted completely. The lock head should sit flush with the end of the lock body when it is seated correctly.
- **When inserting the lock into your device, it is hard to press the lock button**
You may be using the wrong lock head. Check your device settings for security slot information
Make sure the lock is pressed all the way into the security slot before depressing the lock button
- **How do I remove the lock head?**
With the lock unlocked, pull the lock head straight out of the lock body.
- **What if there isn't a natural anchoring point?**
A glue-on external fastener can be attached to a desk to use as an anchor. (This is a semi-permanent option and should only be used with permission)
- **How many keys are included?**
2 keys are included.
- **How long is the cable?**

6.5 ft.

FIND THE KIT THAT'S RIGHT FOR YOU:

- CSP-UL-3K – Universal kit, includes all 3 lock heads
- CSP-UL-870k – T-Lock kit, includes only the T-lock locked
- CSP-UL-871K – Wedge lock kit, includes only the wedge lock head
- CSP-UL-872K – Nano lock kit, includes only the nano lock head

All the above kits can be keyed under the same master key series

Visit our website at: www.ComputerSecurity.com or call us at [800-466-7636](tel:800-466-7636)

DO YOU HAVE OTHER COMPUTER SECURITY NEEDS?

Privacy Monitors



Glue-on
External Fasteners



CPU Enclosures



File Cabinet Locks



-BY-



5 Star North, LLC
dba Computer Security Products

100 Factory Street Nashua, NH 03060

- Phone: [800-466-7636](tel:800-466-7636) or [603-889-9899](tel:603-889-9899)
- FAX: [800-615-1954](tel:800-615-1954) or [603-889-9822](tel:603-889-9822) help@computersecurity.com

www.computersecurity.com

Documents / Resources



[GUARDIAN CSP-UL Series Computer and Laptop Locks](#) [pdf] Instruction Manual
CSP-UL Series Computer and Laptop Locks, CSP-UL Series, Computer and Laptop Locks, Laptop Locks, Locks

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.