



Home » GUARDIAN » GUARDIAN D3B Programming Remote Controls Instruction Manual ™



Contents [hide]

- 1 GUARDIAN D3B Programming Remote Controls
- 2 Product Specifications
- 3 Product Usage Instructions
- 4 To Program Remote Control (s)
- 5 Removing ALL Remote Controls
- 6 Replacing the Remote Control Battery
- 7 FCC NOTE
- 8 Frequently Asked Questions (FAQ)
- 9 Documents / Resources
 - 9.1 References



GUARDIAN D3B Programming Remote Controls



Product Specifications

• Models: D1B, D2B, D3B

• Battery Type: CR2032

• Maximum Remote Controls: Up to 20, including wireless keypad codes

• Compliance: FCC Rules for HOME OR OFFICE USE

• Contact for Technical Service: 1-424-272-6998

Product Usage Instructions

Programming Remote Controls:

WARNING: To prevent serious injury or death, ensure remote control and battery are out of reach of children.

- Press/release the LEARN button once on the control panel to enter programming mode.
- 2. The OK LED will glow and beep, indicating readiness to accept a remote control in the next 30 seconds.
- 3. Press/release any desired button on the Remote Control to pair it with the unit.
- 4. Up to 20 Remote Controls can be added by repeating the above steps. Each new remote control added replaces the 1st stored remote control.

5. If a Remote Control is not accepted, the courtesy light will indicate an error. Retry programming by following the steps above.

Removing ALL Remote Controls:

To remove all stored Remote Controls from memory, press/release the LEARN button twice on the control panel. The unit will beep 3 times to confirm removal.

Replacing Remote Control Battery:

When the battery is low, the indicator light will dim or the range will decrease. To replace the battery:

- 1. Pry open the Remote Control using the visor clip or a small screwdriver.
- 2. Replace with a CR2032 battery.
- 3. Snap the housing back together securely.

Compliance Notice:

This device complies with FCC Rules for HOME OR OFFICE USE. It must not cause harmful interference and must accept any interference received.

Guardian Technical Service:

If you require technical assistance, please contact Guardian Technical Service at 1-424-272-6998.

WARNING

- To prevent possible SERIOUS INJURY or DEATH:
 - Keep the remote control and battery out of reach of children.
 - NEVER permit children to access the Deluxe Door Control Console or Remote Controls.
 - Operate the door ONLY when it is properly adjusted, and there are no obstructions present.
 - ALWAYS keep a moving door in sight until completely closed. NEVER cross the path of a moving door.
- To reduce the risk of fire, explosion, or electric shock:
 - DO NOT short-circuit, recharge, disassemble, or heat the battery.

Dispose of batteries properly.


To Program Remote Control (s)

- 1. Press/release the "LEARN" button once on the control panel, and the "OK" LED will glow and beep. The unit is now ready to accept a remote control in the next 30 seconds.
- 2. Press/release any desired button on the Remote Control.
- 3. The "OK" LED will flash and beep twice indicating Remote Control is stored successfully. Up to 20 Remote Controls (including wireless keypad codes) can be added to the unit by repeating the above procedure. If more than 20 Remote Controls are stored, the first stored Remote Control will be replaced (i.e. the 21st Remote Control replaces the 1st stored Remote Control) and will beep 5 times.
 *If the courtesy light is already on, it will flash once and stay illuminated for 30 seconds.

*If a Remote Control is not accepted, the courtesy light will stay on for 30 seconds, beep 4 times, and then stay on for 4 1/2 minutes. Retry programming the Remote Control by repeating the steps above.


Removing ALL Remote Controls

To remove ALL Remote Controls from memory, press and hold the "LEARN" button for 3 seconds. The "OK" LED will flash and beep 3 times, indicating ALL Remote Controls have been removed from memory.

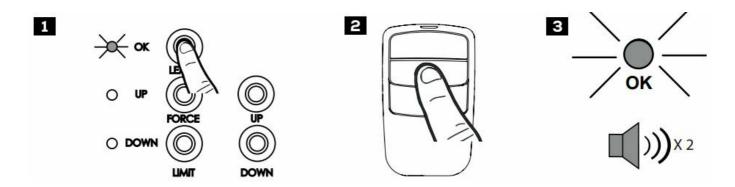

Replacing the Remote Control Battery

When the battery of the Remote Control is low, the indicator light will become dim and/or the range of the Remote Control will decrease. To replace the battery, pry open the Remote Control using the visor clip or a small screwdriver. Replace with a CR2032 battery. Snap the housing back together.

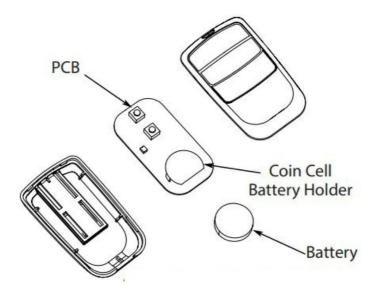

FCC NOTE

This device complies FCC Rules for HOME OR OFFICE USE. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference
- 2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING

- INGESTION HAZARD: DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH OF CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted into any part of the body.

Notice to CA users: WARNING: This product can expose you to chemicals, including lead, that are known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

This product contains a CR coin cell lithium battery, which contains perchlorate material. Special handling may apply. See www.disc.ca.gov/hazardouswaste/perchlorate. Keep away from small children. If the battery is swallowed, promptly see a doctor. Do not try to recharge this battery. Disposal of this battery must be by your local waste management and recycling regulations.

Guardian Technical Service: 1-424-272-6998

Frequently Asked Questions (FAQ)

- How do I know if a Remote Control is successfully programmed?
 The unit will beep and indicate acceptance by lighting up the OK LED when a Remote Control is successfully programmed.
- What should I do if the Remote Control battery is dead?
 Follow the instructions for replacing the battery with a new CR2032 battery. Ensure proper disposal of the old battery.

Documents / Resources



GUARDIAN D3B Programming Remote Controls [pdf] Instruction Manual D1B, D2B, D3B, D3B Programming Remote Controls, Programming Remote Controls, Remote Controls

References

- <u>P65Warnings.ca.gov</u>
- User Manual
- GUARDIAN
- ▶ D1B, D2B, D3B, D3B Programming Remote Controls, GUARDIAN, Programming Remote Controls, Remote Controls
 - —Previous Post

Guardian 7160V Access and Door Hardware Owner's ManualNext Post—

Guardian 4250V Access and Door Hardware User Manual

Leave a comment

Your email address will not be published. Required fields are marked *

Comment * Name Email Website Save my name, email, and website in this browser for the next time I comment. **Post Comment**

Manuals+, Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.