




GVISION PVM10ZJ-OC4-4 IP Public View Monitor User Manual

[Home](#) » [GVISION](#) » GVISION PVM10ZJ-OC4-4 IP Public View Monitor User Manual 



PVM10ZJ-OC4-4 IP Public View Monitor
User Manual
WWW.GVISION-USA.COM

Contents

- [1 Important Information](#)
- [2 Safety Precautions / Maintenance](#)
- [3 Accessories](#)
- [4 Installation](#)
- [5 Control & Functions](#)
- [6 Remote Control](#)
- [7 Input Source](#)
- [8 OSD Setup](#)
- [9 Setup Under SD Card / USB](#)
- [10 Care and Cleaning](#)
- [11 Mounting Monitor to Wall](#)
- [12 Camera Setting](#)
- [13 Specifications](#)
- [14 Dimensions](#)
- [15 Documents / Resources](#)
- [16 Related Posts](#)

Important Information



TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. ALSO, DO NOT USE THIS UNIT'S POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLETS UNLESS THE PRONGS CAN BE FULLY INSERTED.
REFRAIN FROM OPENING THE CABINET AS THERE ARE HIGH-VOLTAGE COMPONENTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



TO REDUCE THE RISK OF ELECTRIC SHOCK, MAKE SURE THE POWER CORD IS UNPLUGGED FROM THE WALL SOCKET. TO FULLY DISENGAGE THE POWER TO THE UNIT, PLEASE DISCONNECT THE POWER CORD FROM THE AC OUTLET. DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock.

Therefore, it is dangerous to make any kind of contact with any part inside this unit.

This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included.

Therefore, it should be read carefully in order to avoid any problems.

CAUTION: Please use the power cord provided with this display in accordance with the table below. If a power cord is not supplied with this equipment, please contact VISION. For all other cases, please use the power cord with the plug style that matches the power socket where the monitor is located. The compatible power cord corresponds to the AC voltage of the power outlet and has been approved by, and complies with, the safety standards in the country of purchase.

*When operating this monitor with its AC 125-240V power supply, use a power supply cord that matches the power supply voltage of the AC power outlet being used.

Care and Cleaning

- Always unplug your monitor from the wall outlet before cleaning. Clean the LCD monitor surface with a lint-free, non-abrasive cloth. Avoid using any liquid, aerosol or glass cleaners.
- Slots and openings on the back or top of the cabinet are for ventilation. They must not be blocked or covered. Your monitor should never be placed near or over a radiator or heat source, or in a built-in installation unless proper ventilation is provided.
- Never push objects or spill liquid of any kind into this product.

Safety Precautions / Maintenance

- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the

point where they exit from the apparatus.

- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the KIOSK combination to avoid injury from tip-over.
- Unplug KIOSK during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the KIOSK has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Do not press strongly upon the panel with a hand or a sharp object such as a nail, pencil, or pen, or make a scratch on it.
- Do not stick metal objects or any other conductive material into the power cord. Do not touch the end of the power cord while it is plugged in.
- Keep the packing anti-moisture material or vinyl packing out of the reach of children. Anti-moisture material is harmful if swallowed. If swallowed, induce vomiting and go to the nearest hospital. Additionally, vinyl packing can cause suffocation. Keep it out of the reach of children.
- Concerning the Power Cord (Can differ by country): Check the specification page of this owner's manual to be certain concerning current requirements. Do not connect too many devices to the same AC power outlet as this could result in fire or electric shock. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device. Do not move the KIOSK with the power cord plugged in. Do not use damaged or loose power cords. Be sure to grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the monitor.
- To reduce the risk of fire or electrical shock, do not expose this product to rain, moisture, or other liquids. Do not touch the screen with wet hands. Do not install this product near flammable objects such as gasoline or candles, or expose the TV to direct air conditioning.
- Do not use high-voltage electrical equipment near the TV (e.g., a bug zapper). This may result in product malfunction.
- Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g., on shelves above the unit).
- Do not attempt to modify this product in any way without written authorization from VISION. Unauthorized modification could void the user's authority to operate this product.
- Moving: Make sure the product is turned off, and unplugged, and all cables have been removed.
- If you smell smoke or other odors coming from the screen, unplug the power cord and contact an authorized service center.
- If water or another substance enters the product (like an AC adapter, power cord, or unit), disconnect the power cord and contact the service center immediately. Otherwise, this may result in fire or electric shock.

Accessories

 
Please check the following listed accessories before installation

PACKAGE OF CONTENTS

LCD Monitor	x1
User's Manual	x1
CP for IP Cam	x1
Remote Control	x1
Power Adapter	x1

Installation

Rear Interface

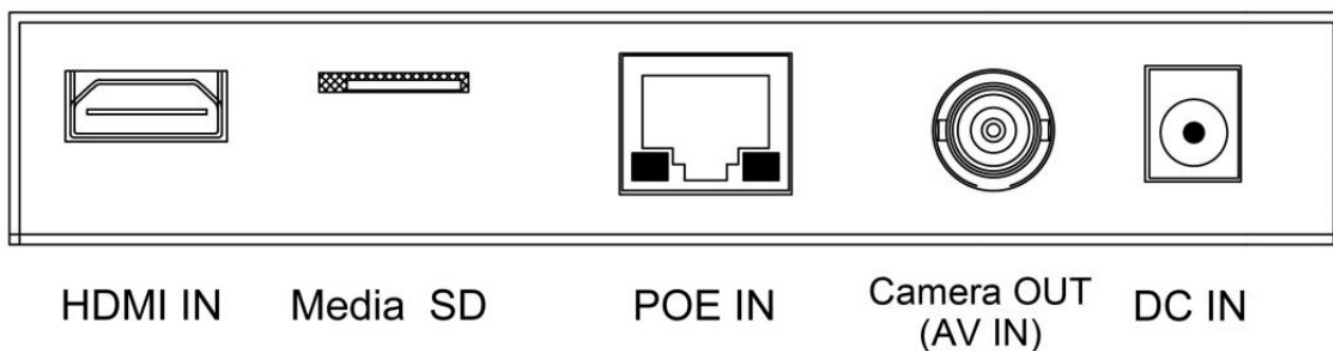



This section describes the I/O on the back panel of the MONITOR. There are several ways to connect devices. The following * is configured according to different customer requirements, not standard

HDMI	High-Definition Multimedia Interface
Media SD	Built-in MPEG-2/MPEG-4/H.264/Real Media/AVS Video Decoder. Supports maximum resolution up to 1080p@30fps. Supported memory card capacity Up to 32GB. Supported file types: AVI/MPG/MPEG/XVID/VOB/DAT/MP4/TS/M2TS/ MKV/H. 264/RM/RMVB. Default auto play video format, for photos, need to manual play by remote control
POE In	The network interface of the built-in IP camera and Power Over Ethernet
Camera Out	Built-in camera output via CVBS
Recording Card	For the build recording care, you need to insert a TF card firstly and set the recording activity in the IP camera setting OSD
DC	Power input DC12V, make sure your input is not over DC12.4V

Control & Functions

 If you cannot locate your remote, you can use the side panel buttons of your monitor to operate the monitor's features. (* Depends on the types or models, the OSD button may not available)

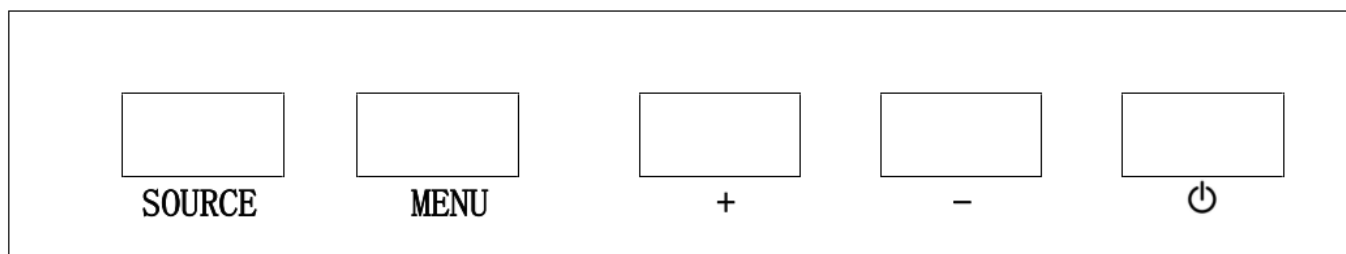

	Turn on / off the monitor
SOURCE	Accesses the available video input signals (HDMI/ Camera/ Media)
MENU	Brings up the MONITOR Main menu. When in the OSD, press the MENU button to return to the previous menu or exit
+	Turn on the volume. In the MONITOR menu system, function like the right arrow button on the remote control and adjusts menu controls.
-	Turn down the volume. In the MONITOR menu system, function like the left arrow button on the remote control and adjust the menu controls

How to Use Buttons


Use the buttons on the right side control panel to adjust the OSD

1. POWER ON/OFF the LCD monitor
2. Press the SOURCE' button to access the available video input signal menu, press the button select, and press 'SOURCE' to enter the video mode
3. Press the MENU button then press the button to move the highlight icon left / right.
4. Press the SOURCE button to enter the sub-menu then press the button correspondingly to change the setting
5. When the setting is done, press the MENU button to return to the previous menu or exit

Remote Control



Motion Control

	Turn on or off the monitor
Mute	Turn on or off sound
Lock	OSD menu lock and unlock
Menu	Display the main menu
▲	Select Up
▼	Select Down
◀	Volume Down/ Select Left
▶	Volume Up/ Select Right
Info	Display information
Motion	Motion detection switch
Exit	Exit the Monitor OSD
Source	Source selection menu
Unavailable	DVR

Special Controls		Media Controls	
▲	Select Up	◀ ◀	Rewind
▼	Select Down	▶ ▶	Forward
◀	Select Left	▲	Fast Rewind Speed / Up
▶	Select Right	▼	Fast Forward Speed / Down
MENU	OSD	◀	Volume Down / Select Left
OK	Confirm Selection	▶	Volume Up / Select Right
Exit	Exit	▶ II	Play / Pause
		OK	Confirm Selection
		■	Exit / Stop

Ensure the remote control is pointed toward the IR receiver on the display. No obstacles should be placed between the remote control and the IR receiver. The effective receiving distance for the controller is 3 meters.

The camera & DVR buttons of the remote controller are for backup use, not functional with this model.

1. To ensure normal operation, the remote control should not be dropped or damaged in any way. It should also be kept dry and away from all heat sources.
2. Battery replacement is necessary when the remote controller acts inconsistently or stops operating the LCD display.

Input Source

Choose the input source

If you hope to show the video from the external input source, Before choosing the right source in OSD, you need to connect the devices, otherwise, when you select the source, none or no signal will appear on the screen, Press the source button on the monitor or remote control, the menu appears on the screen, then press source to select the monitor item, and press“ +/- (>)” to enter it.

HDMI: the input source from the HDMI device

Camera: the source from Built-in IP camera video


SD Video or photo content in your mini SD card

OSD Setup

OSD Setup under HDMI/AV Input Mode




PICTURE	
Picture Mode	Press the “OK “button to select picture modes, then press the < or > button to select “Standard, Dynamic, Mild, or User”. Finally, press the “Menu” button to exit.
Color Temperature	Press the” OK” button to Change the color intensity of the temperature Selected (Medium, Warm, Cool, or User) you could change “RGB”. Finally, press the “Menu” button to exit.
Aspect Ratio	Press the “OK “button to select picture scales, then press the “< or >“ button to select “4:3 or Full”. Finally, press the “Menu” button to exit.
Noise Reduction	Press the “< or >“ button to select five kinds of settings (Low, Middle, High, Off, and Default), then press the “Menu” button to exit.

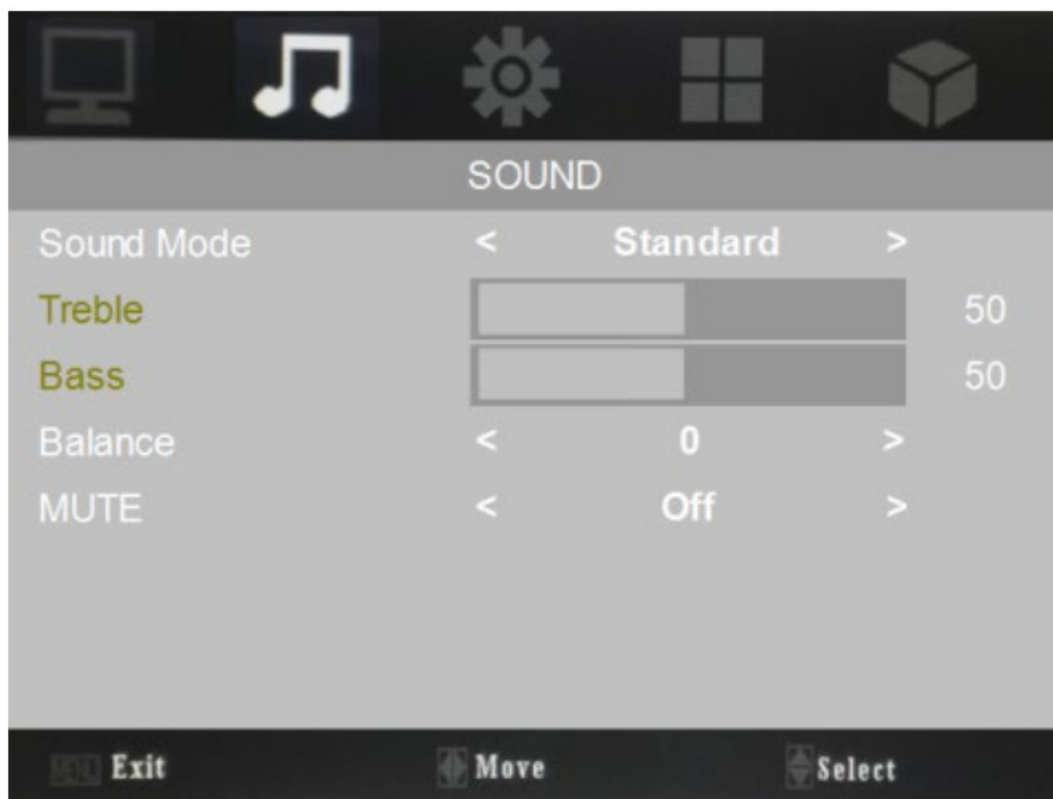 


SOUND

Sound Mode	Press the "< or >" button to select sound modes, "Music, Movie, Sports, standard, or User". Then, press the "Menu" button to exit.
Balance	Adjusts how much audio is sent to the left and right (-50 to +50). The intermediate value is 0, when indication value of balance increases toward +50, the sound of the right and left speaker becomes stronger and weaker, respectively, when the indication value of balance decrease toward -50 sound of the right and left speaker becomes weaker and stronger. Press the "OK" button, then press the "< or >" button to adjust the sound of the right and left. Finally, press the "Menu" button to exit.
Mute	Press the "< or >" button to select "On or Off", Then, press the "Menu" button to exit.

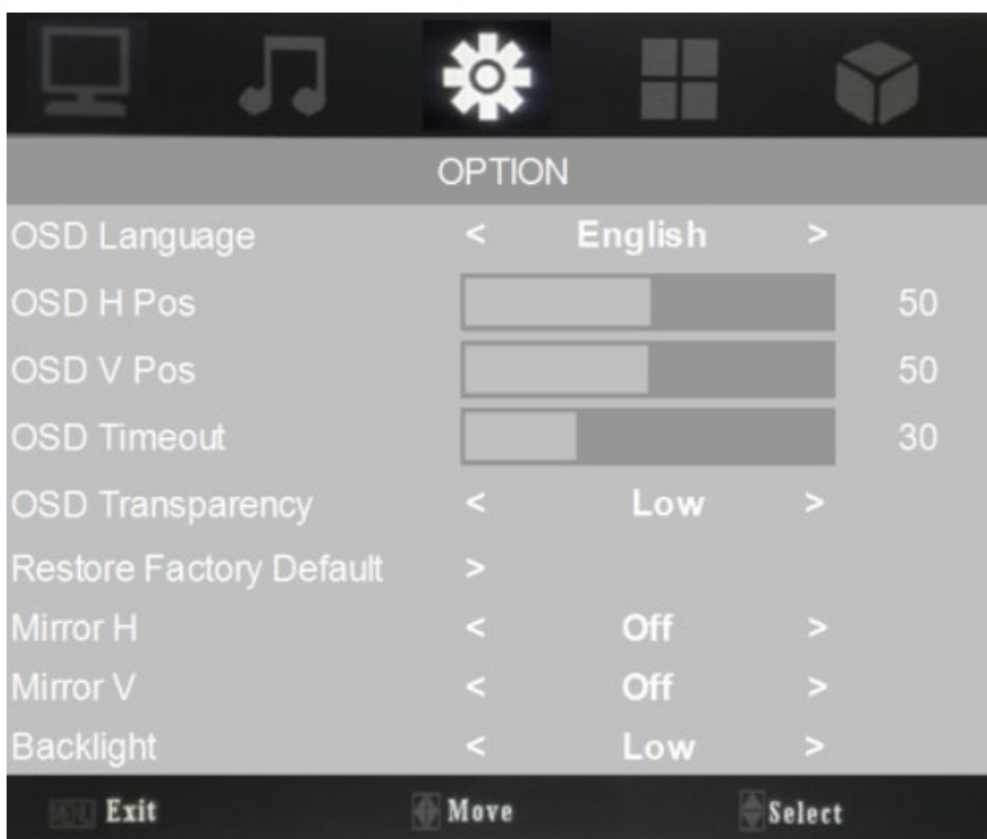 

OPTION

OSD Language	There are nine kinds of languages. Press the “< or >” button to select the languages which you need. Finally, press the “Menu” button to exit.
OSD H/V Pos	Press the “< or >” button to set the OSD position on the screen.
OSD Timeout	Press the “< or >” button to set the time that OSD disappears from the screen.
OSD Transparency	Press the “< or >” button to set the OSD transparency. (Low, Middle, or High)
Restore Factory	Press the “>” button to Restore the factory menu.
Mirror H/V	Press the “< or >” button to select “On or Off”. Then the picture could flip(horizontally or Vertically).
Backlight	Press the “< or >” button to set the backlight. You have three sections: “High, Middle, and Low”. Finally, press the “Menu” button to exit.

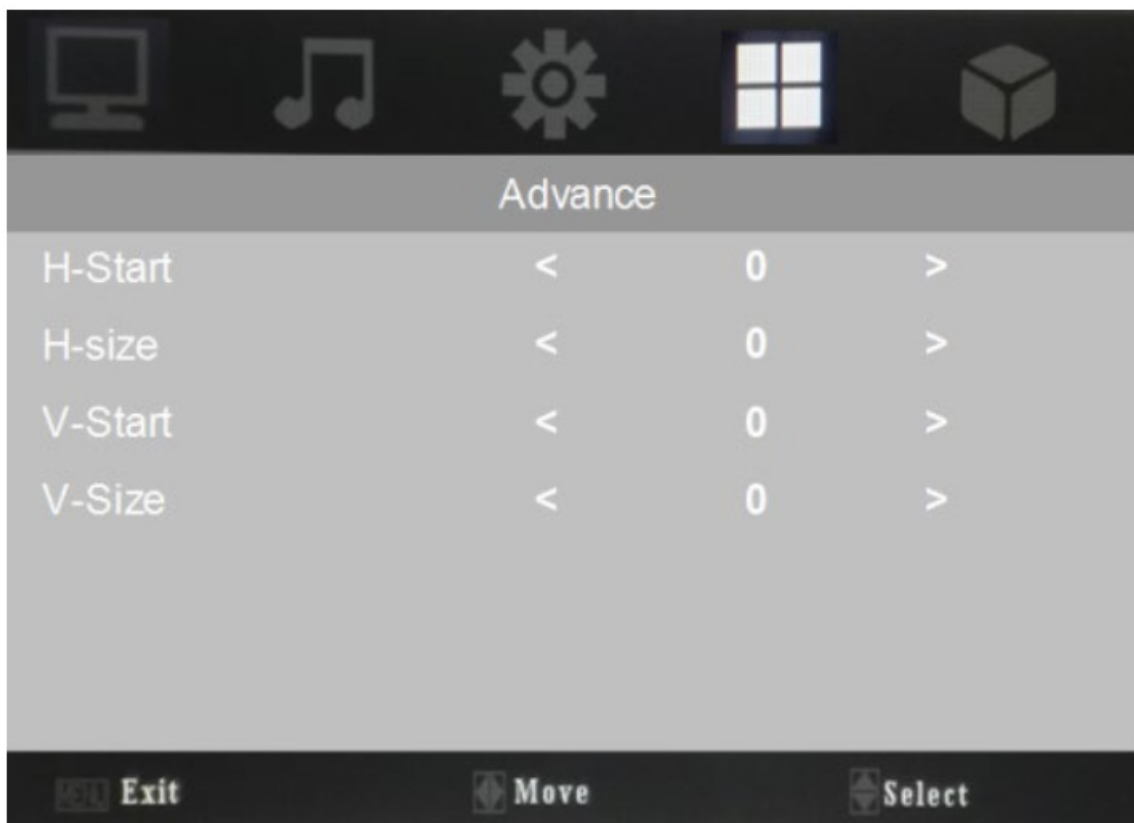 

ADVANCE


H/V-Start	Press the “< or >” button to set the over-scan In this part. Finally, press the “Menu” button to exit.
H/V-Size	Press the “< or >” button to set the size of the horizontal/ Vertical over-scan. Finally, press the “Menu” button to exit.



PVM

Image Mode	Press the "< or >" button to set image mode, there are three modes. (Off, Switch and Motion) Finally, press the "Menu" button to exit. The switch means the monitor will auto-switch the setting channel. Motion means the monitor will return to the camera channel after motion is detected by the camera.
Motion Time	When you select the motion, you could set the motion time. Then press the menu to exit. Motion time is the staying camera time with the camera channel after motion disappears.
Switch Timer	When you select the switch mode, you could set the switch timer. There are three input sources, you could set the time for each source from 0 to 30 seconds. Finally, press the "Menu" button to exit.
Special Control	Press the ">" button to set message select, message flicker, and led flicker. And there are four modes of message selection. And you could set on/off in the message flicker and led flicker. Finally, press the "Menu" button to exit.

 Setup Under SD Card / USB

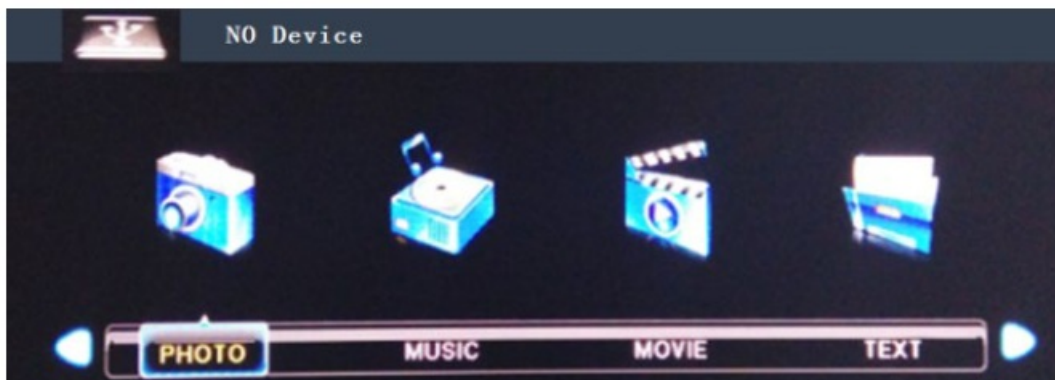

Function	Press the "< or >" button to select some functions. For example; "PHOTO, MUSIC, MOVIE, TEXT". The default priority auto-play video.
----------	---

Care and Cleaning

CAUTION: Turn off your MONITOR before cleaning.

You can clean the MONITOR as required, using a soft lint-free cloth. Be sure to occasionally dust the ventilation slots in the cabinet to help assure adequate ventilation.

The Monitor's screen may be cleaned with a soft, lint-free cloth as well. Take care not to scratch or mar the screen. If necessary, you may use a cloth dampened with warm water. While cleaning does not spray liquid directly on the screen or allow liquid to run down the screen and inside the Monitor. Also, never place drinks or vases with water on top of the monitor. This could increase the risk of fire or shock hazard or damage to the monitor.

Mounting Monitor to Wall

CAUTION: The wall mount must bear a minimum of five times. The monitor's net weight without causing damage. To mount your MONITOR to the wall you need to purchase a VESA wall mount 100x100mm or 75x75mm, KM4x 8mm (100 x 100, for example, means the mounting measurements are 100mm horizontally and 100mm vertically; M4 x 8 mm is the types of screw that need to be used).

Camera Setting


If you want to access the IP camera OSD to change the setting including IP address, color adjustment, recording activity, etc. Pls log into the IP camera via the web or the VMS software in the CD, the default IP address is Dynamic, and

User name: admin / Password: admin

Specifications


MODEL	PVM10ZJ-OC4-4
Screen Size	10.1
Resolution	1280 x 800
Refresh	60Hz
Brightness (MAX)	300cd/m ²
Response Time (Typical)	15ms
Aspect Ratio	16:10
Contrast Ratio	1000:01:00
Display Color	16.7M (8-bit)
INTERFACE	
CVBS Out	1
HDMI In	1
SD Slot	1
RJ45 (PoE)	1
IP CAMERA	
Sensor	1/3" Sony CMOS
Resolution	1080P@25fps
Lens	3.6mm Fixed lens
CABINET	
Color/Material	Black/Metal
POWER	
Consumption	18W / Or POE: IEEE 802.3at Less than 18W
Electrical Rating	DC24V (AC 100~240V 50/60Hz)
TEMPERATURE	
Operating	0~50°C
VESA™	
Mount Size	75 x75mm

 Dimensions

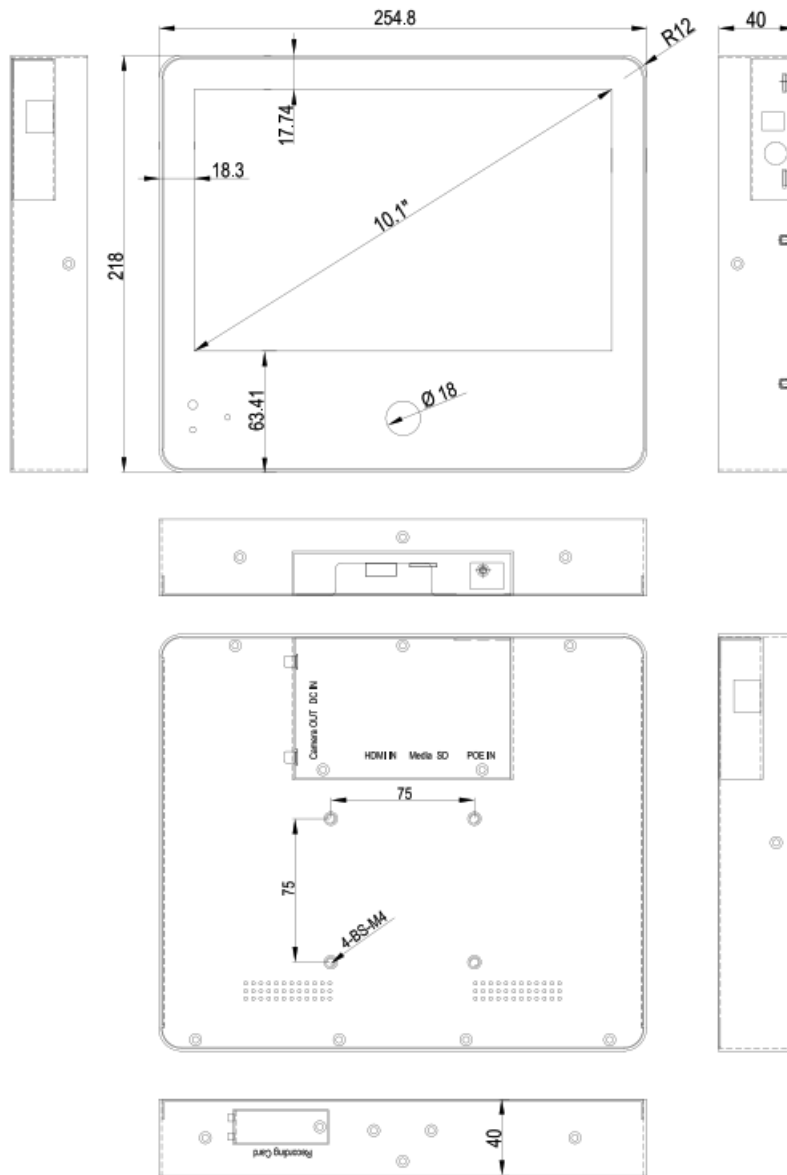

VISION USA, INC
30398 Esperanza, Rancho Santa Margarita
CA 92688 / 949.586.3338
info@gvision-usa.com

Documents / Resources

 PVM10ZJ-OC4-4 USER'S MANUAL	<p> GVISION PVM10ZJ-OC4-4 IP Public View Monitor [pdf] User Manual PVM10ZJ-OC4-4, IP Public View Monitor, PVM10ZJ-OC4-4 IP Public View Monitor, Public View Monitor, View Monitor, Monitor </p>
---	--