

**GVM**<sup>®</sup>  
Great Video Maker  
**Y30D160**  
**Great Video  
Maker**



## GVM-Y30D160 Great Video Maker Owner's Manual

[Home](#) » [GVM](#) » GVM-Y30D160 Great Video Maker Owner's Manual 

### Contents

- 1 GVM-Y30D160 Great Video Maker
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 PRODUCT INTRODUCTION
- 4 PRODUCT PARAMETER
- 5 PRODUCT STRUCTURE DIAGRAM
- 6 INSTALLATION METHOD
- 7 DESCRIPTION OF PRODUCT CONTROL KEYS
- 8 FUNCTION INTRODUCTION & INSTRUCTIONS FOR USE
- 9 APP CONNECT
- 10 APP INTRODUCTION
- 11 QUICK TROUBLESHOOTING
- 12 USE AND PRESERVATION
- 13 PRECAUTIONS
- 14 PACKING LIST
- 15 PRODUCT WARRANTY
- 16 MORE INFORMATION
- 17 FAQs
- 18 Documents / Resources
  - 18.1 References
- 19 Related Posts

**GVM**<sup>®</sup>  
Great Video Maker

**GVM-Y30D160 Great Video Maker**



## IMPORTANT SAFETY INSTRUCTIONS

First and foremost: this product is professional lighting and staging equipment and should be used by a professional lighting technician or under the guidance of a professional. When using this product, you must always follow the cautions below:

1. Read the product manual carefully before use.
2. This product is only suitable to use in a temperature range of -10°C to 40°C.
3. Do not place the equipment near flammable and volatile solvents such as alcohol and gasoline.
4. Before storing the device, make sure it has cooled down completely. When being stored, unplug the power cord from the device. The equipment should be stored in its carrying case or a well-ventilated and dry place.
5. This lighting fixture is not for general illumination and should not be used as such. Individuals with eye injuries or sensitivity should avoid using this lighting fixture.
6. This is a professional light and children are prohibited from using it. Parents or guardians must closely supervise children when they are near the equipment to prevent personal injury caused by colliding with or misusing the equipment.
7. Before using the equipment, please remove the protective cover.
8. When the lighting fixture is on, it is forbidden to stare directly at the light source under any circumstances. High-intensity lighting should only be used under the guidance of a professional lighting technician. Avoid staying in a high-intensity light environment for a long time. If feeling any discomfort, please immediately turn off the lighting fixture, and seek medical attention.
9. When the lighting fixture is on, use it carefully and avoid contacting high-temperature components such as LED light sources to prevent being burnt.
10. Do not use damaged equipment or accessories. Wait for a professional repairman to inspect and repair it before it is confirmed that the equipment can function normally.

11. If the light source is damaged or deformed due to heat, please stop using it and contact the manufacturer, service agents, or qualified repairman promptly to replace the light source= to avoid accidents.
12. If the product is cracked due to falling, squeezing, or strong impact during use, please stop use it to avoid being electrically shocked by touching internal electronic components.
13. Do not disassemble the product by yourself. If the product malfunctions, it must be checked and repaired by the manufacturer or authorized repair personnel.
14. Before cleaning and maintenance, be sure to unplug the power supply. To unplug never pull on the cable but always pull the plug itself. This device shall only operate with earthed power outlets or emergency power generators.
15. When cleaning the device, do not wipe it with a wet cloth. Use a dry and soft cloth to wipe off the dirt.
16. If an extension cord is required, it needs to have the necessary capacity to power the respective unit. Using an extension cord with a lower current capacity than the devices need may cause overheating.
17. some products with long power cords, please place the power cords properly and avoid contact with overheated surfaces that may damage or trip personnel. Please use the original power cords of our manufactory. The damage caused by using non-original power cords is not covered by our repair service.
18. Do not use product accessories that are not recommended by our brand to avoid fire, electric shock, or personal injury.
19. Some products use batteries for power supply. Do not use any batteries, power sources, or accessories that are not specified in the user manual. Please keep batteries and other accessories out of reach of children and infants. If a child or infant swallows a battery or accessory, seek medical attention immediately. If the battery leaks, changes color, deforms, smokes, or emits an odor, remove it immediately. Be careful not to get burned during the removal. Continued use of such batteries may cause a fire, electric shock, or skin burns. Do not use any deformed or modified batteries. Do not disassemble or modify this product or the battery. Do not heat the battery or solder it. Do not let the battery come into contact with fire or water, or subject it to strong external force. Do not insert the battery's positive and negative ends incorrectly, or mix and use old and new batteries or different types of batteries.
20. For some products with built-in lithium batteries, please use a dedicated charger for charging, and following the correct operating instructions within the prescribed voltage and temperature range.
21. the warranty last for one year. Consumables like batteries, adapters, power cords, and other accessories are not covered by the warranty.
22. The one-year warranty will be invalidated if the equipment is found to have been repaired privately. The related repair costs will be charged.
23. Equipment malfunctions caused by non-standard operations are not covered by the warranty.
24. The safety instructions are based on our factory's strict testing. If there are any changes in the equipment's design and specifications, we reserve the right not to notify you. Customers can visit our official website to check the latest digital version of the instructions and learn about the newest product information.

### **Keep these instructions!**

#### **WARNING:**

- High-power LED lights are strictly prohibited from being directly viewed or shining into other people's eyes.
- Do not unplug the power cord or connecting wires while the light is on to avoid personal injury.
- Do not cover the heat dissipation port when the lamp is in operation.

- Keep children away from touching or using this light.
- As professional lighting equipment, please make sure to operate it correctly according to the user manual.

## PRODUCT INTRODUCTION

Thank you for purchasing “GVM-Y30D160/GVM-Y60D256”. This product is specially designed for senior photography enthusiasts. The product is suitable for live/outdoor / studio photography, and also for YouTube video shooting. The main features of the product are:

1. Step-less adjustable dual color temperature feature, color range 3200K ~ 5600k. Using LED bulbs, which is helpful to restore and enrich the color of objects and provide you with a natural and vivid shooting effect.
2. APP intelligent control system, which can be controlled by your smart mobile devices.
3. With digital screen display and stable system, which can support 360 ° rotation and effectively control the light Line. You can customize the control of fill light, so that you can easily get the desired results. We firmly believe that the correct use of this product will definitely of great help to your shooting work. Before using the product, we strongly recommend that you carefully read the following user guide.

## DISCLAIMERS

1. Before using this product, please read the text carefully to ensure that the correct operation of the product has been carried out. Failure to follow and not following the instructions and warnings in this document may cause harm to you and others around you, or even damage the product or other surrounding items.
2. By using this product, you are deemed to have carefully read the disclaimer and warning, understand and acknowledge all the terms and contents of this statement, and promise to take full responsibility for the use of this product and the possible consequences.
3. Design and specifications are subject to change without notice.

## PRODUCT PARAMETER

### Product Model: GVM-Y30D160


- Brand: GVM
- Product Name: Photography Lights
- Product Type Photography Fill Light
- Features: APP, Joint Control, High Color Rendering Index Light Beads
- Light Adjustment Method: Step-Less Adjustment
- WIFI Controllable Distance: ≤50M
- RF Controllable Distance: ≤50M
- Color Rendering Index: ≥97
- Color Temperature: 3200K~5600K
- Lumens: 607lux/1m ; 2400lux/0.5m
- Power: 30W
- Product Weight: 2KG
- Product Size(mm): 328×328×40
- Lamp Beads Quantity: 160

- Battery Capacity: NF Series Battery × 2 (Sold Separately)
- Power Supply Mode: DC Input & Battery
- Power Supply: DC15V/3A
- Voltage: DC15V
- Product Material: Aluminum Alloy
- Cooling: Natural Heat Dissipation
- Place Of Origin: China. Huizhou

#### **Product Model: GVM-Y60D256**


- Brand: GVM
- Product Name: Photography Lights
- Product Type: Photography Fill Light
- Features: APP, Joint Control, High Color Rendering Index Light Beads
- Light Adjustment Method: Stepless Adjustment
- WIFI Controllable Distance: ≤50M
- RF Controllable Distance: ≤50M
- Color Rendering Index: ≥97
- Color Temperature: 3200K~5600K
- Lumens: 1333lux/1m ; 5020lux/0.5m
- Power: 60W
- Product Weight: 2.7KG
- Product Size(mm): 430×418×40
- Lamp Beads Quantity: 256
- Battery Capacity: NF Series Battery × 2 (Sold Separately)
- Power Supply Mode: DC Input & Battery
- Power Supply: DC15V/4A
- Voltage: DC15V
- Product Material: Aluminum Alloy
- Cooling: Natural Heat Dissipation
- Place Of Origin: China. Huizhou

#### **PRODUCT STRUCTURE DIAGRAM**

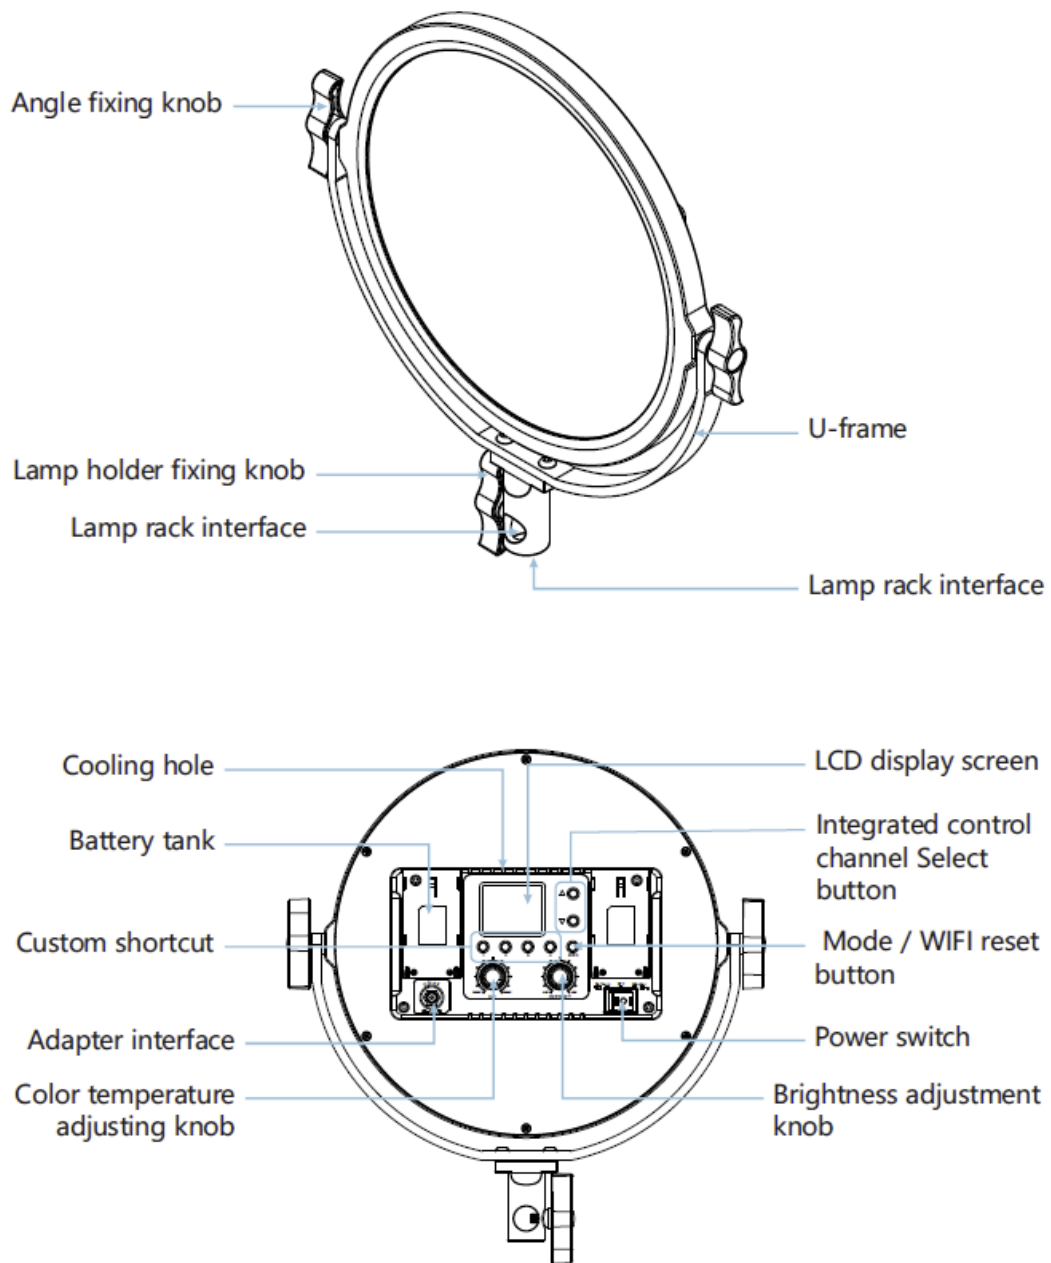


## INSTALLATION METHOD


1. The lamp can be installed and fixed on the bracket by rotating the knob clockwise, and unloaded by rotating in the counterclockwise direction.

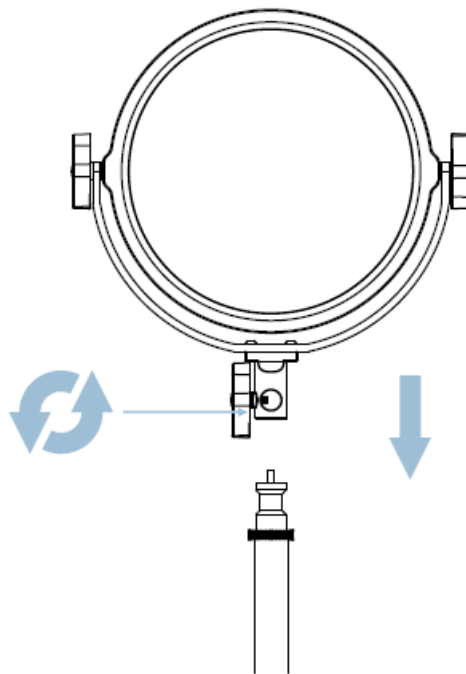


2. The lamp can be installed and fixed on the bracket by rotating the knob clockwise, and unloaded by rotating in the counterclockwise direction. Loosen the adjustment knobs on both sides of the U-frame, adjust the angle of the panel you need, and then tighten the adjustment knobs on both sides of the U-frame.

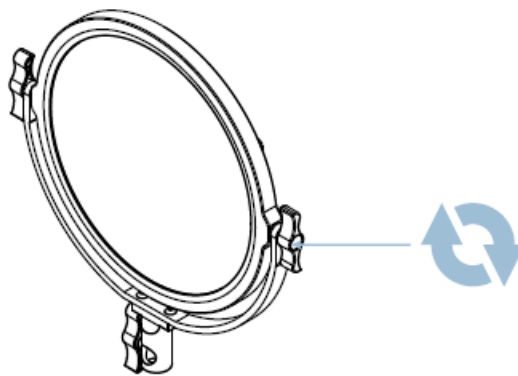

3. There are two power supply modes to choose.
1. Connect the power cord and adapter for power supply.
  2. Purchase two other suitable lithium batteries and use them for power supply. ( both battery cells must be plugged in to power )

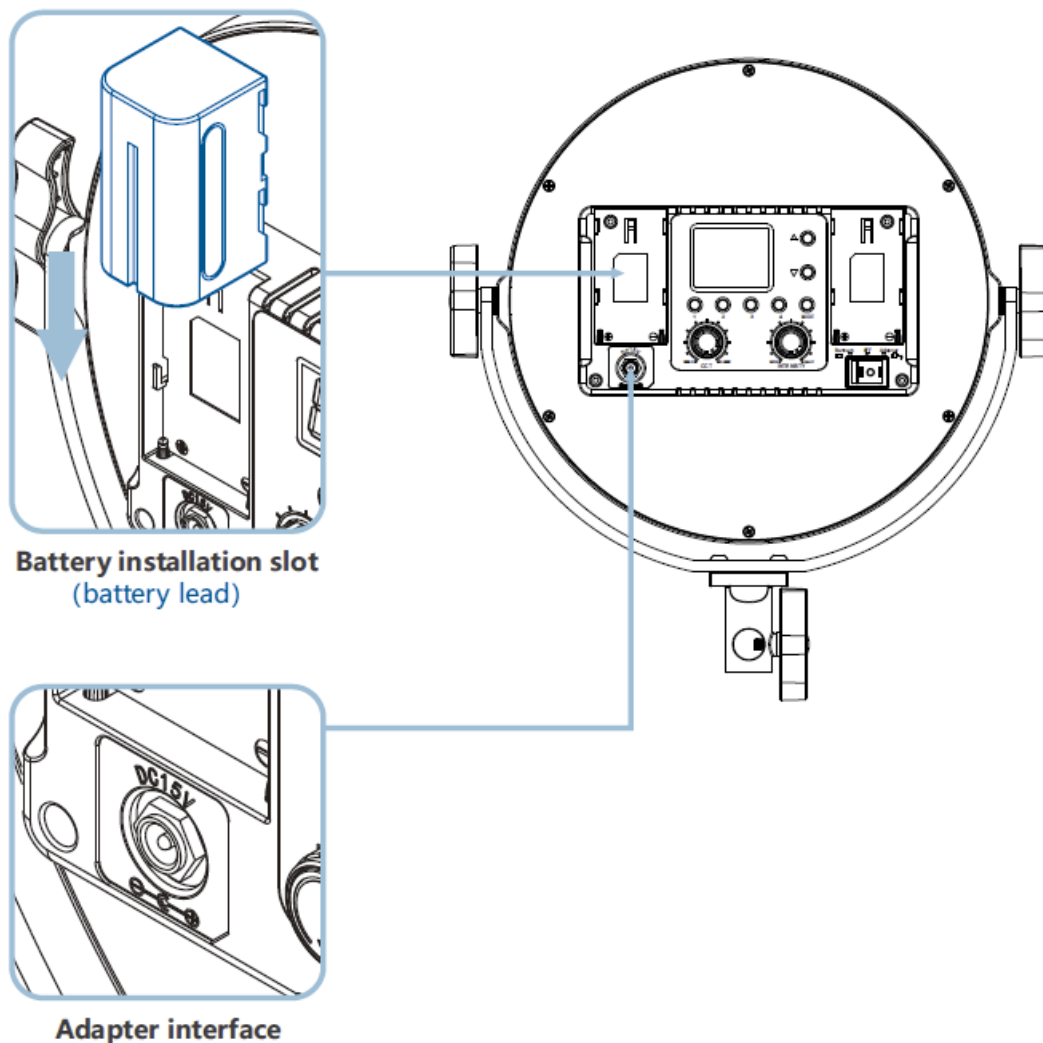

## DESCRIPTION OF PRODUCT CONTROL KEYS

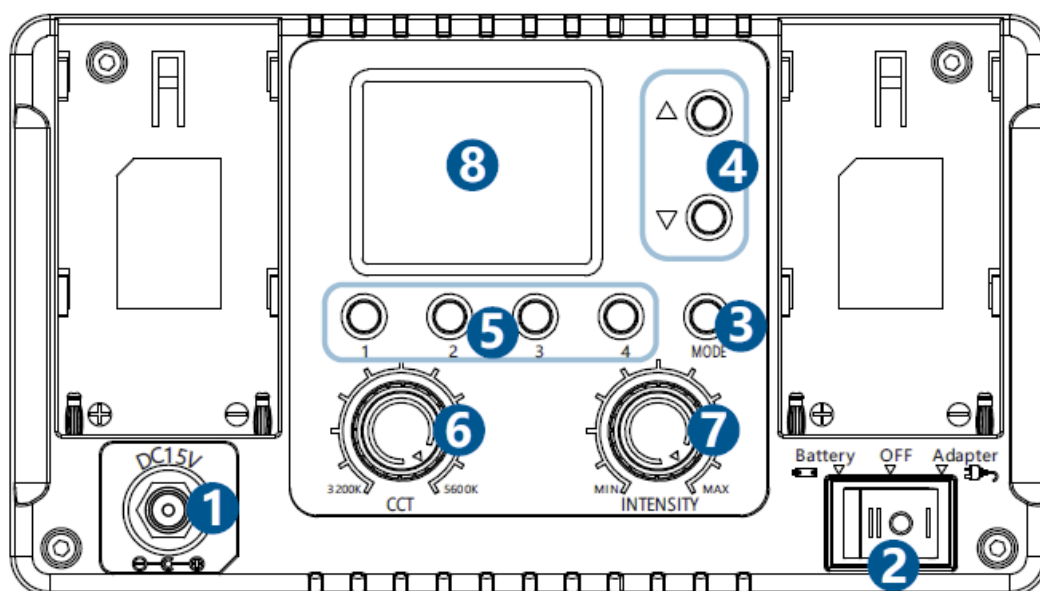

1. DC15V power input
2. Power switch
3. Mode key / WIFI reset key: Short press to switch modes: self-control, slave, master and WIFI mode; long press for more than 5 seconds to reset WIFI.
4. Channel Adjust key: Adjust the channel

5. Custom shortcut keys :Each button can be customized to store a set of light parameters.
6. Color temperature adjustment knob: Adjust color temperature
7. Brightness adjustment knob: Adjust the brightness
8. LCD screen: Display brightness, Color temperature, Mode, Channel value and other data.

## FUNCTION INTRODUCTION & INSTRUCTIONS FOR USE

### • Mode selection:

- Short press the mode button to switch modes, the modes include: self-control, slave, master and WIFI mode.
- Self-control mode (Rotate): Adjust the lights with the controller.
- Slave mode (Slave): The channel can only be adjusted by the ▲ and ▼ buttons of the controller. When the channel is the same as that of the master controller, it can be synchronously controlled by the master controller.
- Master mode (Master): Adjust the lights and channels through the controller, and the slaves of the same channel will be adjusted synchronously.
- WIFI mode (WIFI): Adjust the light through APP.

### • Adjustment channel (CH):

- In slave/master mode, use the ▲ and ▼ buttons to adjust the channel.
- In WIFI mode, connect to the APP and adjust the channel through the APP.

### • Adjust brightness (BRG):

- In slave/master mode, turn the brightness adjustment knob to adjust the brightness.
- In WIFI mode, connect to the APP and adjust the brightness through the APP.

### • Adjust color temperature (CCT):

- In slave/master mode, the color temperature can be adjusted by rotating the color temperature adjustment knob.
- In WIFI mode, connect to the APP and adjust the color temperature through the APP.

### • Custom shortcut keys:

- 1, 2, 3, 4 four custom shortcut keys can store four sets of brightness and color temperature data. In Rotate mode, adjust the brightness and color temperature to the parameters that need to be stored, and then press and hold one of the custom shortcut keys for 3 seconds, parameters saved til “Collected!” appears at the bottom of the screen. When the shortcut stores a new parameter, the old parameter saved on this shortcut will be automatically deleted.

### • Mesh control (Joint control between lamps and lamps):


- Prepare more than two video lights, set one as the master mode and the others as slave mode, and set all video lights on the same channel, so that the slaves can be synchronized by adjusting the light parameters of the master. You can also set the master to WIFI mode, use the APP to connect to the master, and use the APP to control all slaves.

## APP CONNECT

Scan the QR code on the back of the manual to download the APP


1. Press the mode button to switch the video light to WIFI mode;

2. Turn on the mobile phone system to set WiFi (Android mobile phones can click “Connect Device” in the upper right corner of the APP main interface to quickly enter), and find the WiFi named “GVM\_LED”;
3. Connect to WiFi, enter the initial password: gvm\_admin;

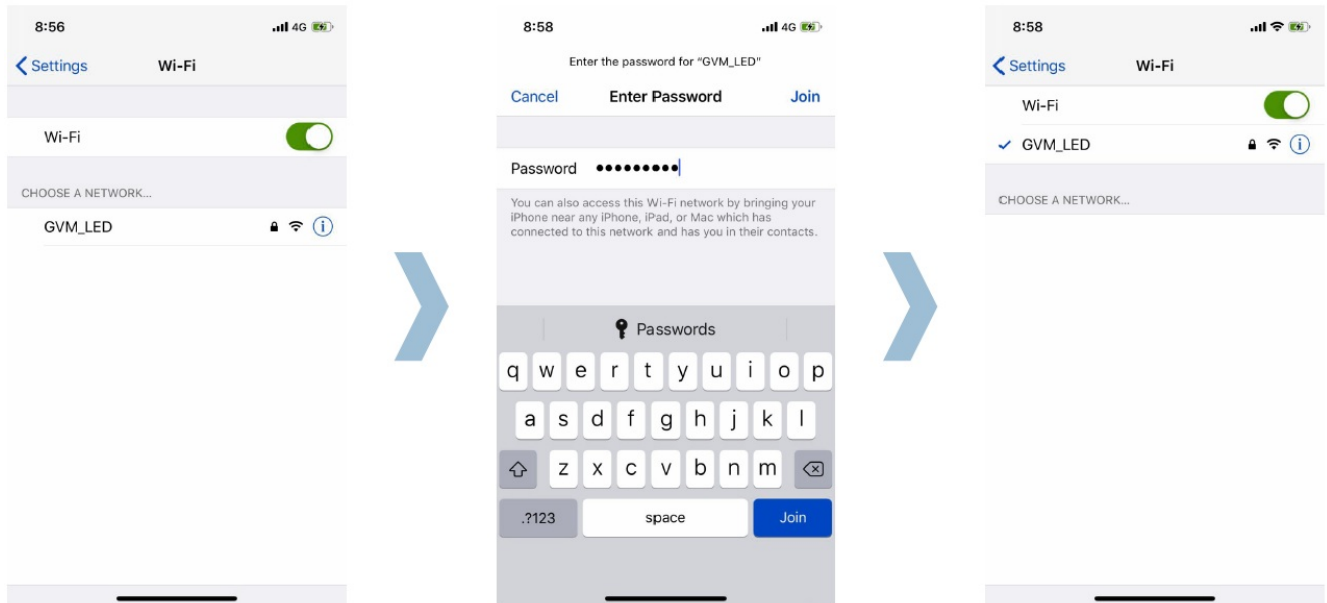


4. After ensuring WiFi connected, start APP, and when “device connected” displayed on the upper part of the main interface, you can start to control the video light.

**Note:** The WiFi hotspot of the device is a local area network, which cannot access the external network after connection, please connect and use it as needed. For iOS 11 and above, you can click “Connect to WiFi” in the upper right corner of the main interface to quickly connect to the device network. If you modify the WiFi name and password, this function will fail. You need to search for the modified WiFi in the settings interface to connect.

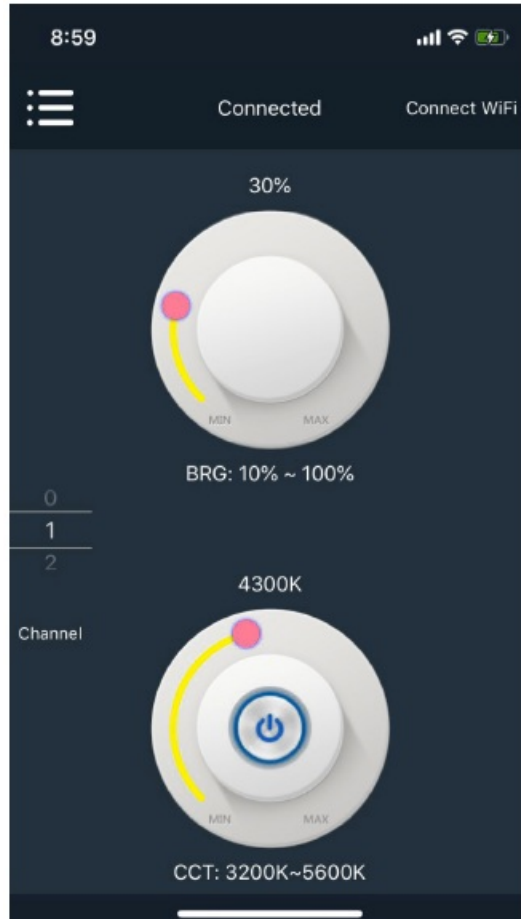


## APP INTRODUCTION

1. Brightness Adjustment: Adjust the brightness of the light through sliding the progress bar.
2. Color temperature Adjustment: Adjust the color temperature of the light through sliding the progress bar.
3. Channel Adjustment: Select the channel by sliding up and down, if there is a slave (Slave mode machine), it can be controlled by APP with WiFi mode machine on the same channel.
4. WiFi Custom Settings: enter the setting page through the menu bar in the upper left corner of the main interface, select "Modify WIFI ". When connecting to the WiFi of the light, you can modify the WiFi name and password. After modification, you need to reconnect to the WiFi to use APP to control.

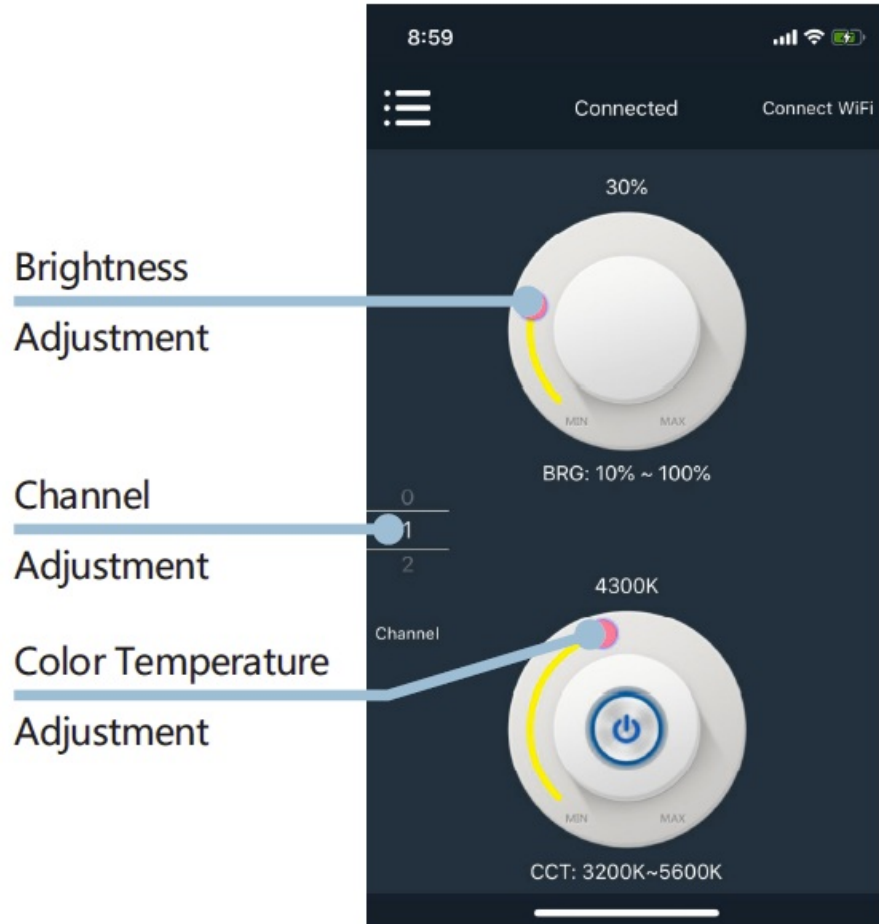

### WiFi name and password reset

Long press the video light mode button for more than 5 seconds to reset the WiFi to the initial state. (WiFi initial name: GVM\_LED, password: gvm\_admin)

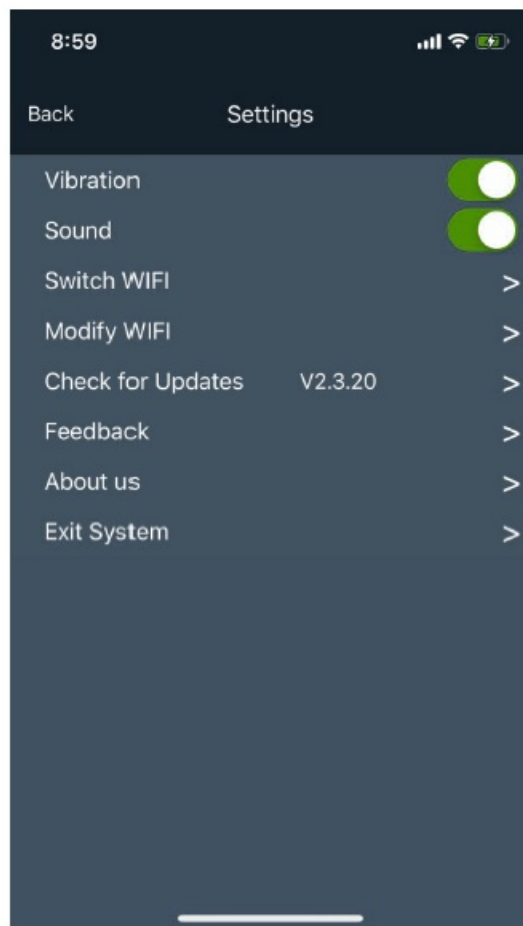

## QUICK TROUBLESHOOTING

| Phenomenon  | Check the product  | Troubleshooting   |
|---|--|---|
| The switch indicator does not light up.                                   | 1 Check the matching power adapter indicator light up or not.  | Make sure the adapter is well contacted with the power plug.  |
|   | 2 When using lithium battery, make sure there's no "low power" protection.   | Charge the battery before using it.   |
| The brightness / color temperature knob is out of control.                | Check if the mode were set as slave mode, lightness and color temperature of the products cannot be controlled in slave mode.                    | Press the "MODE" button for once, and switch the mode from slave mode to master mode.   |
| The product is in the "ON" state, the display and lights are not on.      | Check if the product is "OFF" because of the APP on the mobile phone.  | Press the "ON/OFF" button once again.   |
| APP can't connect / can't control.  | Check whether the WiFi is connected in master mode, whether the WiFi is successfully connected, and whether "Connected" is displayed on the APP. | Normal steps:<br>1 Switch to master mode after booting; 2 Successfully connect to WiFi; 3 Open the APP and the connection will be successful. |
| WiFi is successfully connected, but the device cannot connect to the APP. | Check if the "Switch Device" type in the APP main menu is switched to "Single/Double color temperature light".                                   | Click APP main menu → Switch device → Single/Double color temperature light.  |

## USE AND PRESERVATION

Do not place the product in a high humidity, strong electromagnetic field, direct sunlight, or high-temperature environment. If the product will not be used for a long time, please disconnect its power and remove the battery.

- **Clean:** Before cleaning, disconnect the power plug. And use a damp cloth instead of any detergent or soluble liquids to avoid damaging the surface layer.
- **Power:** Make sure the power is within the demanded range, not too high or too low. Correctly load the battery, in order not damage to the machine.
- **Repairing:** If there is a fault or performance degradation, do not unpack the shell by yourself, avoiding damage to the machine and losing the right of maintenance. When there is a fault, do not hesitate to contact us, and we will do our best to deal with the problem.
- **Accessories:** Please use the accessories provided by the manufacturer and approved ones, to maximize the performance.

- **Warranty:** Do not modify the product, or you will lose the right to maintenance.

## PRECAUTIONS

1. Please use the matching power adapter or lithium battery with the same specification to power the product. Do not use power adapter with different output voltage parameters.
2. The product is not waterproof, please use it in a rainproof environment.
3. The product is not anti-corrosion, therefore do not let the product touch any corrosive liquid.
4. When using the product, make sure the product is put firmly and prevents falling and damage.
5. If the product will not be used for a long time, please switch off the power to reduce energy loss.

## PACKING LIST

| Name              | Quantity |
|-------------------|----------|
| Photography Light | 1        |
| Power Cord        | 1        |
| Adapter           | 1        |
| Carrying Case     | 1        |
| Instructions      | 1        |

## PRODUCT WARRANTY

Dear user, this warranty card is important proof for applying for warranty service. Please cooperate with the salesperson to fill it out and keep it properly. Thank you!

|                     |                 |                 |
|---------------------|-----------------|-----------------|
| Product Information | Model Number    | Product Barcode |
| User Information    | Name            | Contact Number  |
|                     | Mailing Address |                 |
| Seller Information  | Name            |                 |
|                     | Contact Number  |                 |
|                     | Mailing Address |                 |
|                     | Sales Date      |                 |
| Remarks             |                 |                 |

**Note:** this form should be confirmed by the salesperson's stamp.

## **Applicable Products**

This document applies to the products listed in the relevant "Product Warranty Information" (see instructions below). Other products or components that do not fall within this scope (such as promotional products, gift items, and other components added after the factory) are not covered by this warranty promise.

## **Warranty Period**

The corresponding warranty period for products and components shall be executed according to the relevant "Product Warranty Information". The warranty period starts from the first day of purchase of the product, and the date of registration on the warranty card at the time of purchase shall prevail.

## **How to Obtain Warranty Service**

You can directly contact the product salesperson or authorized service agency, or call GVM's aftersales service hotline to contact us and have our service personnel arrange service for you. When applying for warranty service, you should provide a valid warranty card as a warranty certificate to be eligible for warranty service. If you cannot provide a valid warranty card, we may also provide you with warranty service under the circumstance that our products or components are confirmed to be within the warranty scope, but this is not our obligation.

## **Cases where warranty does not apply:**

If the product meets the following conditions, the warranty and service under this document will not apply:

1. The product or parts have exceeded the corresponding warranty period.
2. Malfunctions or damages caused by incorrect or improper use, maintenance, or storage, such as improper handling, use for purposes other than the reasonable expectations of the product, incorrect insertion or removal of external devices, falling or crushing due to external force, or exposure to inappropriate temperature, solvents, acids, alkalis, water immersion, or damp environments.
3. Malfunctions or damages caused by unauthorized installation, repair, modification, addition, or disassembly by institutions or personnel not authorized by GVM.
4. Modifications, changes, or removals of the original identification information of the product or its parts.
5. Lack of valid warranty card.
6. Malfunctions or damages caused by the use of unauthorized, non-standard or non-publicly released software.
7. Malfunctions or damages caused by force majeure or accidents. Other malfunctions or damages not caused by quality issues of the product itself. In such cases, you should seek solutions from the relevant responsible parties, and GVM will not be held liable. Malfunctions or damages caused by components, accessories, or software not covered by the warranty or beyond the warranty scope that renders the product unable to function properly are not covered by the warranty. Fading, wear, and consumption that is normal during the product usage process are not covered by the warranty.

## **Product Warranty and Service Support Information**

The product warranty period and service types are implemented according to the following "Product Warranty Information" for each product category, component, and optional equipment:

| Product Category | Accessories Name   | Warranty Period(Month) | Warranty Service Type   |
|------------------|--|------------------------|-------------------------|
| Component        | Circuit Board.   | 12 Month               | Customer service repair |
| Other            | Spotlight mount, softbox, adapter, Standard reflector, power cord, battery Handle, light stand, TYPE-C cable, battery slot, battery, Fresnel lens, grid, carrying bag and all other accessories, etc.<br><br>Consumable or electrically sensitive parts are not covered by the warranty. | None                   | No Warranty             |

## MORE INFORMATION



GVM Official website



Facebook



Download APP

Huizhou Latu Film Equipment Co., Ltd.

- Web: [www.gvmled.com](http://www.gvmled.com)
- B&H Email: [bh@gvmled.com](mailto:bh@gvmled.com)
- GVM Email: [support@gvmled.com](mailto:support@gvmled.com)
- Amazon Email: [amazonsupport@gvmled.com](mailto:amazonsupport@gvmled.com)
- Warehouse Address: 12285 MCNULTY RD, STE 105 PHILADELPHIA, Pennsylvania 19154, USA

## FAQs

- **Q: Can I use this product for outdoor photography?**
  - A: Yes, the product is suitable for outdoor photography along with live/studio photography and YouTube video shooting.
- **Q: What happens if I use non-original power cords?**
  - A: Damage caused by using non-original power cords is not covered by the repair service warranty.
- **Q: How long is the warranty period?**
  - A: The warranty lasts for one year, excluding consumables like batteries, adapters, and power cords.

## Documents / Resources



[GVM GVM-Y30D160 Great Video Maker](#) [pdf] Owner's Manual  
Y30D160, Y60D256, GVM-Y30D160 Great Video Maker, GVM-Y30D160, Great Video Maker, Video Maker, Maker

## References

- [GVM Lights Official Store - Great Video Maker - Video Lights](#)
- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.