

GYMAX UY10001 Multi Game Table



GYMAX UY10001 Multi Game Table User Manual

[Home](#) » [GYMAX](#) » GYMAX UY10001 Multi Game Table User Manual 

Contents

- [1 GYMAX UY10001 Multi Game Table](#)
- [2 Before You Start](#)
- [3 PARTS LIST](#)
- [4 ASSEMBLY INSTRUCTIONS](#)
- [5 Contact Us](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



GYMAX UY10001 Multi Game Table



THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better

- Contact our friendly customer service department for help first.
- Replacements for missing or damaged parts will be shipped ASAP!

Before You Start

Please read all instructions carefully and keep it for future reference.

WARNING

Attention: The Product is not suitable for children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

WARNING: CHOKING HAZARD-Small parts. Not for children under 3 years.

General Warnings





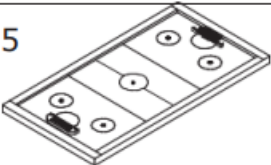







- The product must be installed and used under the supervision of an adult.
- Read through each step carefully and follow the proper order.
- Remove all packaging, separate and count all parts and hardware.
- Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.



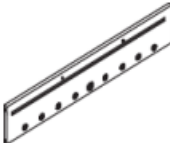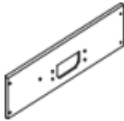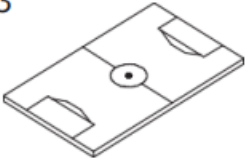










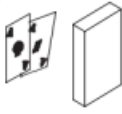


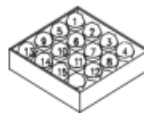



WARNING: Choking Hazard—Toy contains small balls and/or small parts. Not for children under 3 years.














IMPORTANT

Please Keep Your Instructions. Before attempting assembly, please read through this instruction book to familiarize yourself with all the parts and assembly steps. We recommend that two adults assemble this game. Please refer to the Parts List below and be sure that all parts have been included.

PARTS LIST

<p>1</p>  <p>SIDE APRON 2PCS</p>	<p>2</p>  <p>END APRON 2PCS</p>	<p>3</p>  <p>SOCCER PLAYFIELD 1PC</p>	<p>4</p>  <p>SUPPORT BRACE 2PCS</p>
<p>5</p>  <p>TT/HOCKEY PLAYFIELD 1PC</p>	<p>6</p>  <p>SUPPORT BRACE 2PCS</p>	<p>7</p>  <p>M6X28MM BOLT 16PCS</p>	<p>8</p>  <p>M6 WASHER 16PCS</p>
<p>9</p>  <p>3.5X12MM WASHER HEAD SCREW 16PCS</p>	<p>10</p>  <p>3.5X35MM WASHER HEAD SCREW 12PCS</p>	<p>11</p>  <p>4X20 TM 26PCS</p>	<p>12</p>  <p>NUT 26PCS</p>


<p>13</p>  <p>LEG LEVELER 4PCS</p>	<p>14</p>  <p>3 HOLES PLAYER ROD 4PCS</p>	<p>15</p>  <p>2 HOLES PLAYER ROD 2PCS</p>	<p>16</p>  <p>5 HOLES PLAYER ROD 2PCS</p>
<p>17</p>  <p>PLAYING CARD 1DECK</p>	<p>18</p>  <p>PLAYER BLACK 13PCS</p>	<p>19</p>  <p>PLAYER IVORY 13PCS</p>	<p>20</p>  <p>TABLE TENNIS PADDLE 2PCS</p>
<p>21</p>  <p>HAND GRIP 8PCS</p>	<p>22</p>  <p>END CAP 8PCS</p>	<p>23</p>  <p>RUBBER BUMPER 16PCS</p>	<p>24</p>  <p>CABINET FOR BILLIARD 1PC</p>
<p>25</p>  <p>LEFT LEG 2PCS</p>	<p>26</p>  <p>RIGHT LEG 2PCS</p>	<p>27</p>  <p>GOAL BOX 2PCS</p>	<p>28</p>  <p>SOCCER BALL 2PCS</p>
<p>29</p>  <p>BILLIARD BALLS 1PC</p>	<p>30</p>  <p>CUE STICK 2PCS</p>	<p>31</p>  <p>CHALK 2PCS</p>	<p>32</p>  <p>TRIANGLE 1PC</p>

33  HOCKEY PUSHER 2PCS	34  HOCKEY PUCK 2PCS	35  FELT PAD 2PCS	36  NET & POST SET 1SET
37  CHESS 1SET	38  BACKGAMMON 1SET	39  CHECKERS 1SET	40  BOWLING 1SET
41  SHUFFLE BALL 1SET	42  BRUSH 1PC	43  SAFETY LOCK 2PCS	44  MULTI-GAME BOARD 1PC
45  ALLEN KEY 1PC			

ASSEMBLY INSTRUCTIONS


We recommend that two adults work together to assemble this game.

1. Open the carton of your new table game near where you will play. Select a clear-level floor. This game requires at least two adults to assemble the table.
2. Remove all the contents from inside the carton and verify that you have all listed parts as shown on the Parts List. We suggest that you use the bottom carton as a clean flat working area to protect the game. Carefully cut or tear the four carton corners so that the bottom is now your work area.
3. Attach one end Apron (#2) between the Side Aprons (#1) using two Washer Head Screws (#10) per Side. See FIG.1.

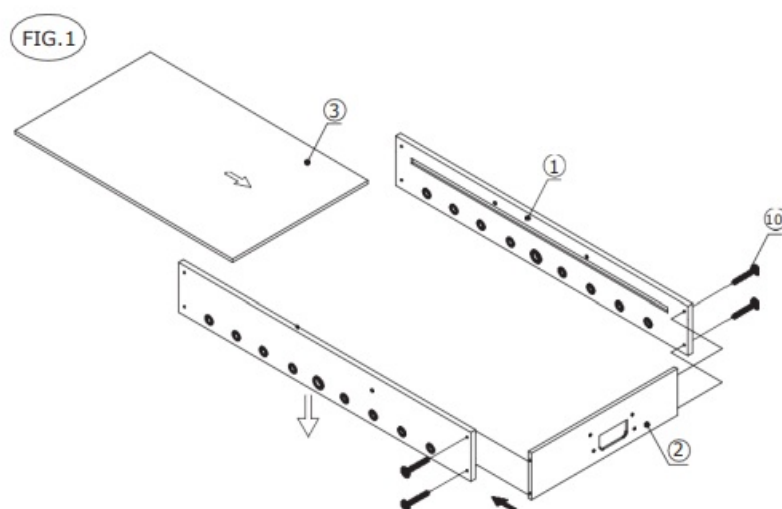


4. **NOTE:** Leave connections loose – Do not tighten screws securely at this time.

5. Slide the Playfield (#3) with graphics facing down as shown in FIG 1. If the field does not slide smoothly, check to be sure you have not over-tightened any screws or the Playfield is not caught by the slot.
6. Repeat the step to attach the other end Apron to the Side Aprons (#1).
7. Place two Support Braces (#4) on Playfield (#3) as shown in FIG.2. Attach them using two of Washer Head screws (#10) per side. See FIG.2.



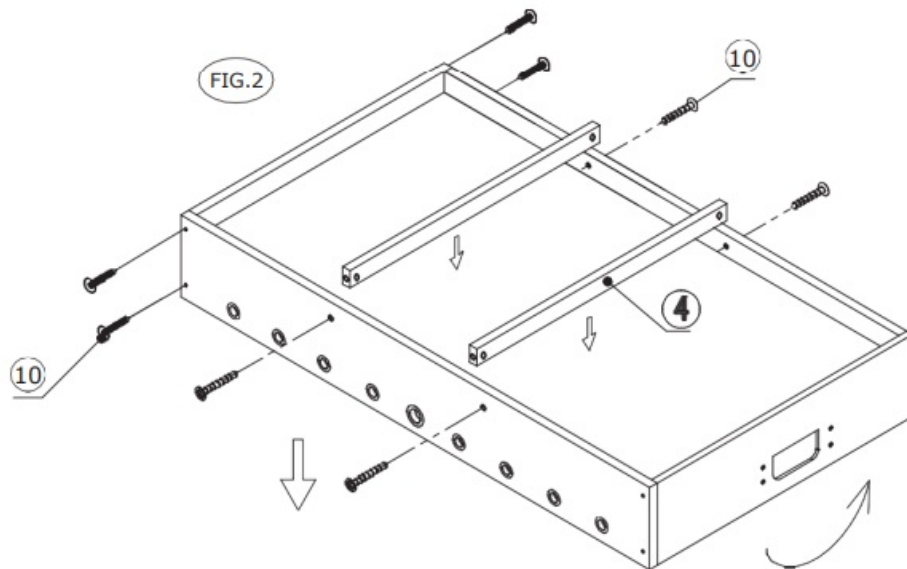


8. Attach the player rods (#14 – #16) into the side aprons as shown in FIG.3A. Attach the rubber bumper (#23) to the player rod, followed by the players (#18 & #19) and another rubber bumper (#23). See FIG 3-1
9. Attach Players (#18 & #19) to the player rods using one 4x20TM(#11) and one Nut(12). See FIG 3-2
10. Attach Goal Boxes (#27) to End Aprons using four of Washer Head Screws (#9) per Goal Box. See FIG.4.

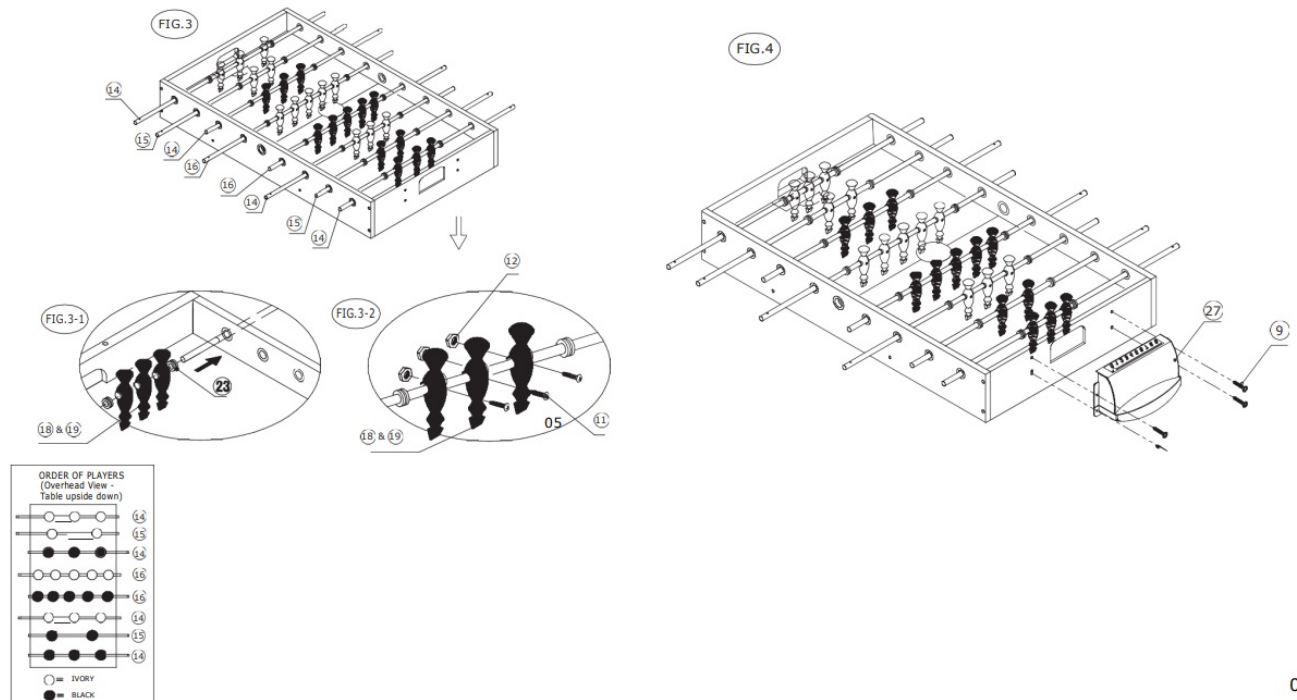

11. Put Hand Grips (#21) and End Caps (#22) on the player rods in order.
- NOTE:** To make the Handles easier to attach, spray a little window cleaner on the rod ends before installation and tap on gently with a hammer. See FIG.5.
12. Attach Legs (#25 & #26) to the cabinet (#24) using four Bolts (#7) and four Washers(#8) per Leg. See FIG.6.
13. Attach the two End Leg Braces (#6) to the legs using four Washer Head Screws (#9) per Leg. See FIG.6.
14. Locate Leg Leveler(#13) And Screw Into per Leg. See FIG.6.

FIG. 5

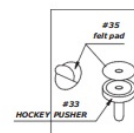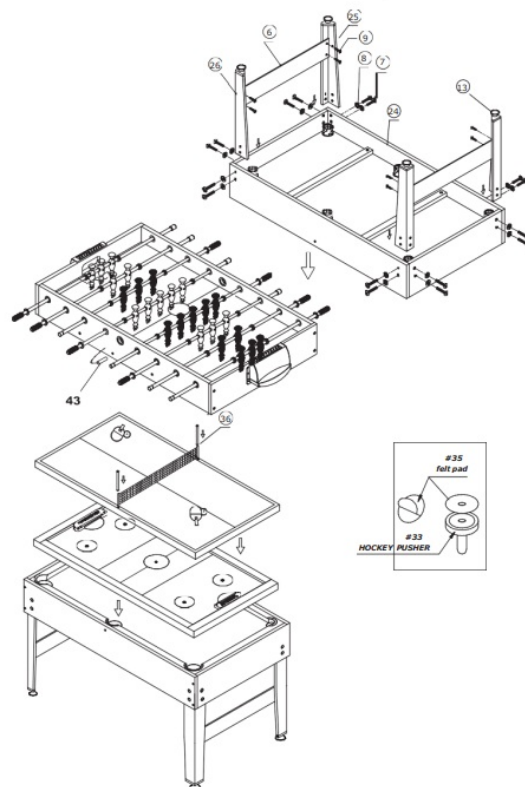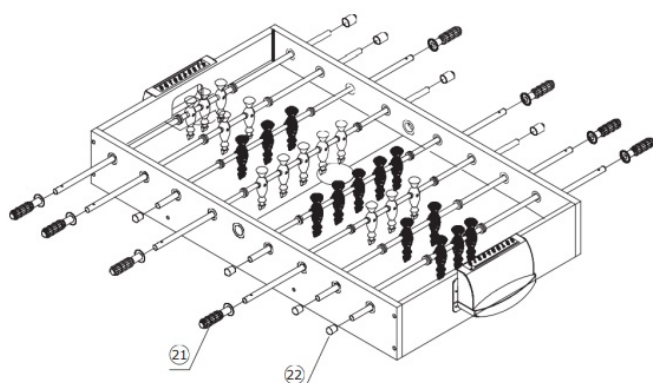

Contact Us

Do NOT return this item.

Contact our friendly customer service department for help first.

US: cs.us@costway.com

UK: cs.uk@costway.com

Documents / Resources

	<p>GYMAX UY10001 Multi Game Table [pdf] User Manual UY10001 Multi Game Table, UY10001, Multi Game Table, Game Table, Table</p>
--	--

References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.