


GYRATION Cyberview 2010 Wireless Smart Battery Camera User Manual

Home » Gyration » GYRATION Cyberview 2010 Wireless Smart Battery Camera User Manual



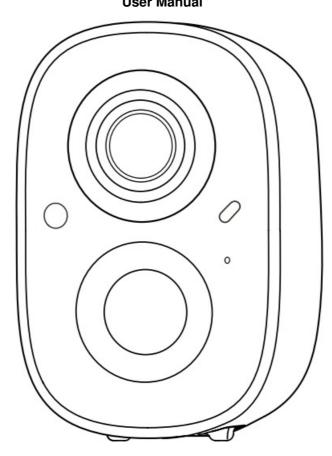

Contents

- 1 Packing list
- 2 Product appearance
- 3 Quick start
- 4 Bind the camera
- 5 Install the camera
- 6 Share the camera
- 7 Charge the camera
- 8 Indicator light status
- 9 Product specification
- 10 Firmware upgrade
- 11 FAQ
- 12 Disclaimer and Safety


Warnings


- 13 Documents / Resources
 - 13.1 References
- **14 Related Posts**

Packing list

- 1. Camera*1
- 2. Mounting bracket*1
- 3. Mounting screw kit*1
- 4. USB charging cable *1
- 5. Operation instruction*1

Product appearance

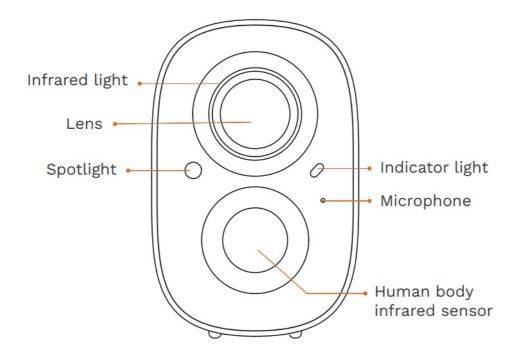

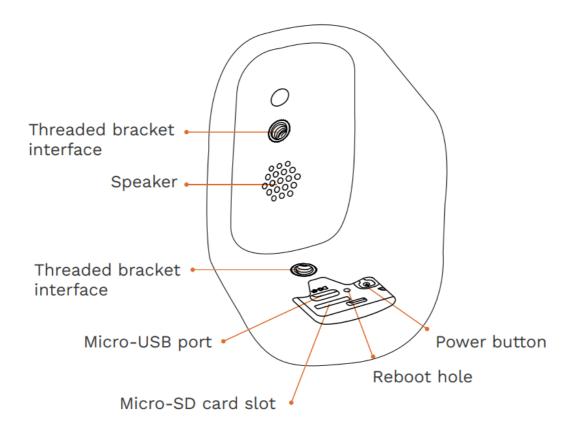

Quick start

The wireless smart battery camera supports battery powered supply and AC-powered supply.

Download and install the App

The wireless smart battery camera supports Android and iOS App.


For your best experience, please scan the QR code below with your mobile phone, install the app, and follow the instruction to complete the user registration.



https://www.cyberviewplus.com/download/

Scan QR code or go to the link to download and install the App https://www.cyberviewplus.com/download/ Add the device

Sign in to App connect to Wi-Fi and add the device according to the prompts (please bring the device close to the router when configuring).

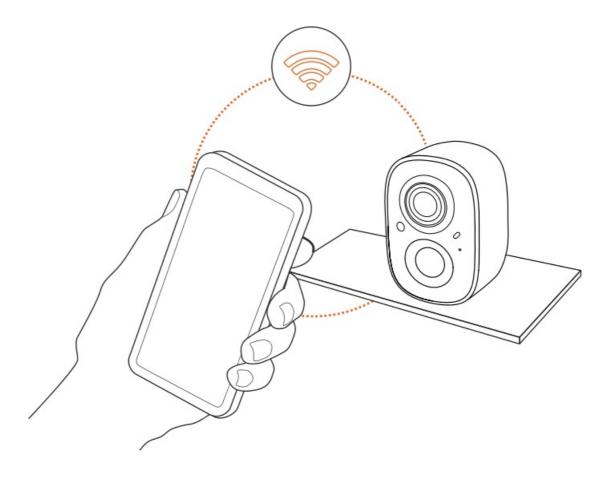

Power on/off and network configuration


Long press the power button for 3s to power on/off the device.

Double click the power button to enter the network configuration mode after the prompt tone.

When connecting the camera for the first time, use the App and follow the instruction to configure the camera network.


Bind the camera

1. Click the "Add Now" button in the app, press and hold the camera switch button for 3 seconds to turn on the camera, and the app will automatically search for devices that are on and not bound. Select the device you want to bind in the search results for the next step.

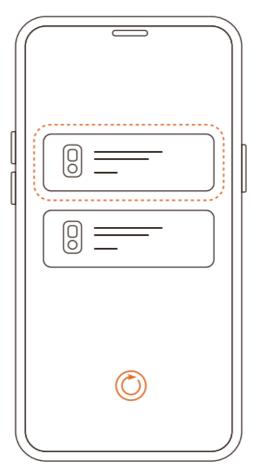

2. Enter the name and password of the Wi-Fi network you want the camera to connect to. To ensure longdistance connection, the camera only supports 2.4GHz WiFi network with stronger wall penetration capability and does not support Wi-Fi with enterprise level authentication.

Please make sure that the Wi-Fi meets the requirements, click Next after completion, and the app can try to connect the camera to the Wi-Fi.

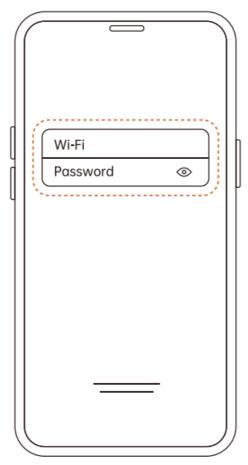

3. After a while, the camera will play a sound indicating that the connection is successful. At this point, please set a name for the camera on the app and select the location where you want to place the camera. Click Finish to complete the pairing.

Possible problems with binding:


- When you hear the "Wi-Fi Password Error", please check whether the Wi-Fi password you entered in the App is correct.
- When you hear the "Authentication error", please ensure that your
- Wi-Fi network is not an enterprise-level network, and the device supports only the network with the security level below WPA-2.
- When you hear the "Wi-Fi not found", please check whether you select or enter the correct Wi-Fi name, and
 place the device near the Wi-Fi router and ensure that the router is powered on. Please note that 5Ghz Wi-Fi
 cannot be searched by the device.
- When you hear the "Retrieving IP timeout", it indicates that the number of devices connected to the router in
 your home is too many to connect more devices. Please remove some of the connected devices that are not
 commonly used or restart the router to clear the unconnected devices. You may need to contact the router
 administrator.
- When you hear the "Cloud service connection fail", please check whether your router is connected properly to
 the external network. When you hear this error prompt, it is common on the condition of network disconnection
 or that the selected router in your home is a local area network server. Please ensure that the network
 connection is normal, and try to temporarily turn off the firewall to connect again.

Install the camera

You can place the camera on a shelf or other surfaces to use, or you can install it on a wall to use.

1. Select a good spot for your camera

Select a good spot for your camera, please install the camera in a position where its view is not blocked and ensure that it is within the coverage of the WiFi network. The PIR infrared sensor is more sensitive to movements across the camera's field of view than movements toward or away from the camera.

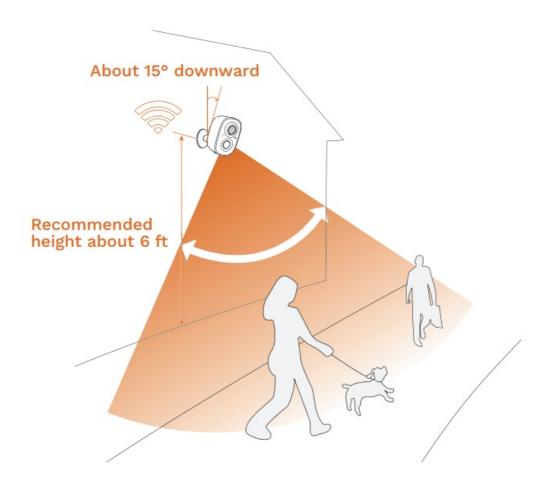

2. Install the bracket


1) Screw fixing

Use the drilling tool to punch holes on the wall according to the hole distance of the base. It is recommended to mark the holes on the wall with a pencil before drilling. Screw the expansion nut into the holes on the wall, and then connect the bracket to the expansion nut with screws to complete the fixing.




2) Fix the camera

Align the racket screw with the screw hole on the back or bottom of the camera, and then rotate it to the tightened state.

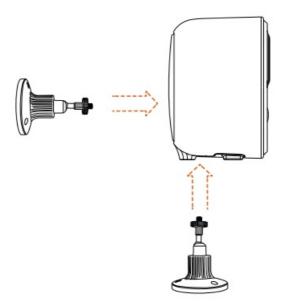

3) Adjust the angle

Adjust the camera to an appropriate angle, the best angle is about 15 degrees downward, and then tighten the base by rotating it in clockwise direction to fix the angle.

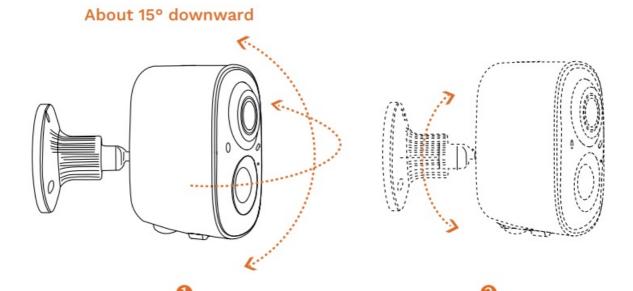

Share the camera


When you need to view the camera with other family members or friends, you can use this function. Only the administrator whose account is bound with the camera for the first time can share and set the device. Other members can only view the live or playbacks of the device.

- 1. Find the camera you want to share on the App homepage or camera setting page. Find the button and enter the sharing page.
- 2. Click "Invite", and a QR code will be generated for sharing.
- 3. For the members you need to share, find "Add Friend' s Camera" in the "User" page to enter the scanning page.








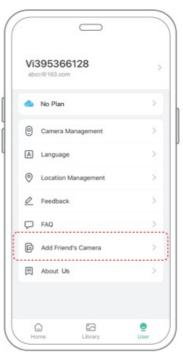

4. Scan the QR code on your mobile phone, and you will receive the confirmation notification after success. The sharing will be completed after you agree.

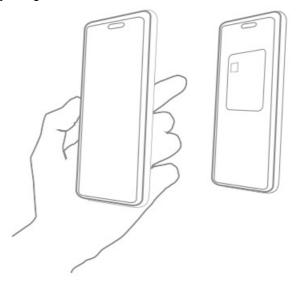

Charge the camera

App will remind you to charge your camera when the battery is low.

Please use the Micro USB cable to plug into the 5V/1.5A charging adapter to charge the camera. During charging, the camera's indicator light is solid yellow, and when the camera is fully charged, the indicator light will turn into solid green. It will take 10 hours to fully charge the camera.

Indicator light status

Mode	Status
Working mode	Blue
Sleep mode	Off
Charging mode	Yellow
Fully charged mode	Green

Product specification

Item	Specification
Field of view	95° horizontal, 55° vertical
Image resolution	1920 X 1080
Video bit rate	Adaptive
Storage media	Micro SD card (Up to 128GB)
Battery capacity	5200mAh
Adapter requirement	5V/1.5A
Size	65 X 58 X 89 (mm)

Firmware upgrade

When you connect your camera through the App, it will prompt you if the latest firmware is available. You can also manually check the firmware upgrade in the settings of the App.

Please make sure that your camera is fully charged or connected to the power adapter before upgrading the firmware, please do not cut off the power supply duringthe upgrading

FCC warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference. (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FAQ

- 1. Q: Camera permission management: How to invite family and friends to use my camera together?
 - A: Open the App and select your camera on the home page. Click the share button on the home page or the "Share" in the camera settings to enter the sharing page, and then click "Invite" to generate a QR code. Your friends can now get some of the access rights by scanning the QR code in your phone.
- 2. Q: Why doesn't the Wi-Fi name appear when I connect to Wi-Fi?
 - A: On Apple devices with iOS 13 and above, you need to turn on the "location permission" for the app in the system settings and change it to "allow when using".
- 3. Q: Will the camera show red lights when night vision is activated?
 - A: The built-in infrared lamp beads make the camera only show some dim red lights when night vision is activated, but the image quality is still clear under no light environment.
- 4. Q: What are the requirements for Wi-Fi?
 - A: Please use a 2.4GHz wireless network. The device does not support the 5GHz wireless network. Meanwhile, please set the Wi-Fi authentication method to WPA2- PSK or other lower level of security method. A password is required.
- 5. Q:How far should the camera be placed from the router?
 - A: After testing, the Wi-Fi connection distance can normally reach up to 150 meters in the open area. However, the actual situation depends on the strength of Wi-Fi and its surrounding environment (thick walls, electromagnetic devices, large metal objects will all cause interference to the Wi-Fi signals). If the camera connection signal is weak or unstable, please place the camera as close to the router as possible.
- 6. Q: What is the maximum length of recording time?
 - A: If you set the duration as "Auto", when someone occurs in the view of the camera, it will start recording a video for up to 3 minutes.
- 7. Q: How to quickly view videos by category?
 - A: Click the icon in the upper left corner of the "Library" page to start filtering videos by category. Select the category you want to see and then click "Save" to view the video playbacks.
- 8. Q: What should I do when the device is in malfunction?
 - A: Long press the power button to restart it. If there is no response, you can remove the rubber plug at the bottom of the camera. Press the reboot hole for 3 seconds with a pointed object to restart the camera.

Disclaimer and Safety Warnings

Copyright Statement

No part of this manual may be copied, reproduced, translated or distributed in any form by any means without prior content in writing from our company (referred to as us hereafter).

The product described in this manual may contain proprietary software owned by our company and its possible licensors. Unless permitted, no one is allowed to copy, distribute, modify, abstract, decompile, disassemble, decrypt, reverse engineer, rent, transfer, or sublicense the software in any form by any means.

Export Compliance Statement

Our company complies with applicable export control laws and regulations worldwide, including that of the People's Republic of China and the United States, and abides by relevant regulations relating to the export, reexport and transfer of hardware, software and technology. Regarding the product described in this manual, our company asks you to fully understand and strictly abide by the applicable export laws and regulations worldwide.

Privacy Protection Reminder

Our company complies with appropriate privacy protection laws and is committed to protecting user privacy. You may want to read our full privacy policy at our website and get to know the ways we process your personal information. Please be aware, using the product described in this manual may involve the collection of personal information such as face, fingerprint, license plate number, email, phone number, GPS. Please abide by your local laws and regulations while using the product.

Power Requirements

- Installation and use of the device must be in strict accordance with your local electrical safety regulations.
- Use a UL certified power supply that meets LPS requirements if an adapter is used.
- Use the recommended cordset (power cord) in accordance with the specified ratings.
- Only use the power adapter supplied with your device.
- Use a mains socket outlet with a protective earthing (grounding) connection.
- Ground your device properly if the device is intended to be grounded.

Battery Use Caution

- · When battery is used, avoid.
- High or low extreme temperatures during use, storage and transportation.
- Extremely low air pressure, or low air pressure at high altitude.
- Battery replacement.
- Use the battery properly. Improper use of the battery such as the following may cause risks of fire, explosion or leakage of flammable liquid or gas.
- Replace battery with an incorrect type.
- Dispose of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery.
- Dispose the used battery according to your local regulations or the battery manufacturer's instructions.



Documents / Resources



GYRATION Cyberview 2010 Wireless Smart Battery Camera [pdf] User Manual Cyberview 2010 Wireless Smart Battery Camera, Cyberview 2010, Wireless Smart Battery Camera, Smart Battery Camera, Camera

References

• Ocyberviewplus.com/download/

Manuals+,