



H Koenig Weasy igloo8 Ice Maker Instruction Manual

[Home](#) » [H Koenig](#) » H Koenig Weasy igloo8 Ice Maker Instruction Manual 

Contents

- [1 H Koenig Weasy igloo8 Ice Maker](#)
- [2 IMPORTANT NOTICES](#)
- [3 DESCRIPTION](#)
- [4 FEATURE](#)
- [5 CONTROL PANEL OPERATION](#)
- [6 OPERATION INSTRUCTIONS](#)
- [7 CLEANING & USE GUIDANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 WARRANTY](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

H Koenig
WE TAKE CARE.

H Koenig Weasy igloo8 Ice Maker



IMPORTANT NOTICES

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before Using.
2. Remove all packing material and carefully check your ice maker to ensure it is in good condition and that there is no damage to the ice maker or power cord and plug.
3. Before using the Ice maker for the first time, please wait 2 hours after positioning it, and keep the transparent lid open for at least 2 hours
4. Pure water is not allowed to be used on this unit, spring water is recommended.
5. Ensure the voltage is compliant with the voltage range stated on the rating label, and ensure the earthing of the socket is in good condition.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. Do not upend this product or incline it over a 45°C
8. To protect against the risk of electric shock, do not pour water on the cord, plug, and ventilation, and immerse the appliance in water or any other liquid.
9. Unplug the appliance after using or before
10. Keep the appliance 8cm from other objects to ensure good heat release.
11. Do not use the accessories which are not recommended by the Manufacturer.
12. This appliance may be used by persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge, provided that they are supervised or instructed in the safe use of the appliance and that they fully understand the potential hazards.
13. Do not use the appliance close by flames, hot plates or stoves.
14. Do not switch on the power button frequently (ensure 5min. interval at least) to avoid the damage of

compressor.

15. Metal sheet or other electric objects are not allowed to be inserted into the appliance to avoid fire and short circuit.
16. Do not use outdoors.
17. Never clean with scouring powders or hard implements.
18. Please keep the instruction manual.
19. Warning: Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
20. This appliance is intended for use in domestic and similar applications such as
 1. kitchen areas in shops, offices and other working environments
 2. farmhouses
 3. in hotels, motels and other residential environments
 4. guest rooms.
21. When positioning the appliance, ensure the supply cord is not trapped or damaged.
22. Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance
23. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
24. The refrigerant and insulation blowing gas is flammable, when disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.

This symbol indicates the refrigerant R600a and the non-metallic materials of the appliance are flammable. It's a warning symbol. Warning: Risk of fire / flammable materials.

Warning

Risk of fire/flammable materials. **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged. Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance. To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regular surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mold from developing within the appliance. Regarding the information pertaining to the use of the appliance, thanks to referring to the below paragraph of the manual. This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely, and are fully aware of the dangers involved.

Cleaning and maintenance should not be carried out by children unless they are at least 8 years of age and are supervised by an adult. Keep the appliance and its power cord out of reach of children under 8 years of age. – When using electrical equipment, safety precautions must always be taken to prevent the risk of fire, electric shock and/or injury in the event of misuse. Make sure that the voltage rating on the type plate corresponds to the main voltage of your installation. If this is not the case, contact the dealer and do not connect the unit. Never leave the unit unattended while in operation. The device must not be used if it has been dropped, it obvious signs of damage are visible or if it has leaks. Please keep this document at hand and give it to the future owner in case of transfer of your device

Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or a similarly qualified person in order to avoid a hazard. This device is not intended for use by persons with reduced capacity on the physical, mental or sensory or lack of experience and knowledge (including children), unless he has them was asked to monitor or if they have had instructions on the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the device. The device is not intended to be operated by external timer means or a remote control system Never immerse the appliance, its power cord or plug in water or any other liquid.

Refrigerant

The refrigerant gas contained in the circuit of this appliance is isobutane (R 600a), a low-polluting but flammable gas.


- When transporting and installing the appliance, take care not to damage any part of the refrigerant circuit.
- Do not use any sharp or pointed tools to defrost the unit.
- Do not use any electrical appliances inside the unit.

If the refrigeration system is damaged:

Do not use a flame near the appliance. Avoid sparks – do not light any electrical appliance or electric lamp. Ventilate the room immediately.

- Voltage: 120V
- Power Consumption: 120 W
- Daily Ice Output 12kg / 24 hours
- Ice Storage Capacity 1.6L/850 g
- Water Reservoir Capacity 1.5 L
- N.W 8.6KG
- G.W 7.75KG
- Compression-type refrigeration:120/60Hz
- Cooling agent: R600a environmental friendly refrigerant
- Max overall dimensions(W XD XH) 224X 308X283mm
- Packing Dimensions 342X 260X 382mm

DESCRIPTION

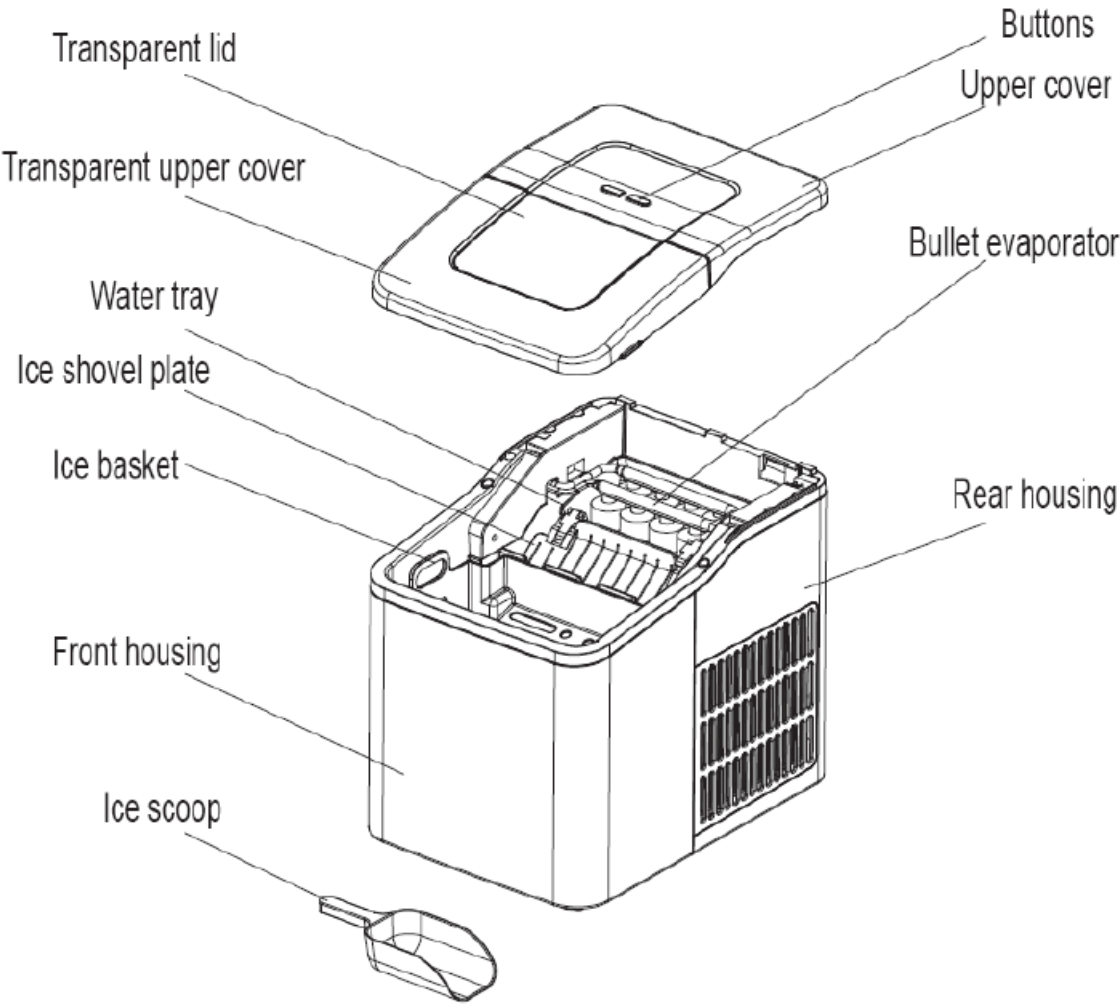

1. Transparent lid	6. Ice scoop
2. Transparent upper cover	7. Buttons
3. Water tray	8. Upper cover
4. Ice shovel plate	9. Bullet evaporator
5. Ice basket	10. Rear housing
11. Front housing	

FEATURE

- Quick ice making
- Prompt when the ice is full and water is insufficient
- Bullet ice
- 9 pcs ice can be made in 8 minutes.
- Automatic cleaning function

WARNING

1. During transportation, do not tilt the machine more than 45 degrees, and do not reverse the machine. This may damage the compressor and the sealing system.

2. Remove all packing materials, check the machine carefully and make sure that the machine, power cord, and plug are normal.
3. The machine should be on a level surface. To ensure sufficient ventilation, the distance of the back of the ice maker to the wall should be at least 150 mm, it should be away from the oven, radiator, or another heat source.
4. Before using the machine for the first time, place the machine and leave the transparent cover open for at least two hours.
5. Make sure that the home voltage is consistent with the voltage indicated by the machine.
6. Distilled water is not allowed. Mineral water is recommended.

CONTROL PANEL OPERATION



- ON/OFF Power Supply
 - CLEAN: CLEAN button
 - ICE FULL: water full alarm
 - ADD WATER: water shortage alarm
 - ICE MAKING: ice making
1. Plug in the power supply, the “ICE MAKING” indicator flashes and the machine will start the deicing function. Press the ON/OFF button, the “ICE MAKING” indicator light is always on and then the ice block will be made automatically. After the ice making is completed, the deicing will be carried out, and then the ice shoveling function will be entered, and so on.
 2. ADD WATER: water shortage alarm: when the light is red, it means a water shortage in the water tank. You need to add water and press the POWER button to restart the machine.
 3. ICE FULL: ice full alarm. When the ice reaches the maximum amount of ice storage container, the “ICE FULL” light flashes and the machine stops. At this time, the ice needs to be poured out. When the ice position is lower than the full sensor position, the machine will restart automatically.
 4. ICE MAKING: Ice making
When this light is always on, it means that the ice maker is making ice.
 5. CLEAN: Plug in the power supply, and the “ICE MAKING” indicator flashes. Pressing the CLEAN button, start the cleaning function. The cleaning duration is 150 seconds. Do not disconnect the power supply during cleaning. After cleaning, the product will automatically enter standby mode.

OPERATION INSTRUCTIONS

Step 1

Open the lid and take out the basket and add water to the reservoir.

Note:

There is a maximum scale MAX in the reservoir. The water should not exceed the MAX position. If the water exceeds the maximum scale MAX, you need to open the bottom drain plug, release the excess water, and cover it with a transparent cover.

Step 2

Plug in the power and press the ON/OFF button to start the machine.

CAUTION

1. When the indoor temperature is lower than 15 degrees, please choose small ice. When the indoor temperature is higher than 30 degrees, it is recommended to choose big ice.
2. The three cycles used for the first time, the ice produced is small and irregular.
3. When the ice basket is full, please take out the ice immediately, do not let the ice overflow the ice basket.

CLEANING & USE GUIDANCE

1. Clean the inner liner, ice collecting tray, water box, ice shovel, and evaporator frequently. When cleaning, unplug the unit and remove the ice cubes. Use a diluted solution of water and vinegar to clean the inside and the outside surface of the Ice maker. Do not spray the Ice maker with chemicals or diluted agents such as acids, gasoline or oil. Rinse thoroughly before starting.
2. Keep ventilation openings in the appliance enclosure, or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
3. Reuse the machine after being idle for a period of time, it may not have enough water to pump for air retard, in this case, the water shortage indicator "ADD WATER" will be on. Repressing the POWER button to restart the ice maker is okay.
4. To ensure the cleanness of ice, please change the water for the water reservoir at least once one day. If do not use it for a long time, please drain the water out and clean it up.
5. If the compressor takes a strike action for shortage water, fully water, or interruption of power supply, it will delay for 3mins to start up after restart.
6. Always use fresh water before starting ice production either at initial installation or after a long shut-off period.

TROUBLESHOOTING

1. Please note, if a power failure occurs due to disconnection of the power cord, or the power button has been pushed off during an ice-making cycle, small ice chips may form and lodge in the automatic shovel causing it to jam. If this occurs, the ice chips may be removed by disconnecting the power cord and gently pushing the shovel to the rear of the cabinet and removing the ice chips, then restarting.
2. Please check if the water reservoir is flat when the ice shovel can not remove the ice-to-ice basket. If not, please push the ice shovel gently with a finger, then press the POWER button to restart.

PROBLEM	POSSIBLE CAUSE	SUGGESTED SOLUTIONS
The compressor works abnormally with a buzzing noise	The voltage is lower than recommended	Stop the Ice maker and do not restart until the voltage is normal.
The water shortage indicator light is on	1. There is no water 2. The pump is full of air	1. Add some water until it reaches the MAX position 2. Press the POWER button to restart
Indicator lights on display are not on	Blown fuse/ No power	Replace fuse / Turn power on
The Ice made is too large and with pieces sticking together.	1. Ice of previous cycles left in the water tray	1. Take out the ice under the standby state
The ice-making process was correct, but no ice came out ?	1. The compressor has no refrigerant 2. Compressor damaged 3. Fan motor damaged	Call the service hotline
All indicators flash at the same time.	1. The water box is blocked by ice. 2. The motor is stuck, or the motor falls off, or the motor is damaged 3. Micro switch damaged	1. Take out the ice under the ice shovel, plug in the power again, and press the POWER button. After 3 minutes, the machine will restart automatically. 2. Call the service hotline
The machine has been working, but the water has been warming	Solenoid broke down	Replace the solenoid valve
When the ice is full, the machine does not display the ice full icon	Ice full sensor damaged Solar light interference	1. Replace the ice full sensor 2. Move indoors to make ice 3. Call the service hotline

WARNING

1. If the power cord is damaged; it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
2. Fill with potable water only.
3. It is normal for the compressor and condenser surface to reach temperatures between 70°C and 90°C during operation and surrounding areas may be very hot.
4. Due to fast freezing, ice cubes may appear “Cloudy”. This is air trapped in the water and will not affect the quality or taste of ice.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Do not immerse in water.

WARRANTY

The warranty period for our products is 2 years unless otherwise stated, starting from the date of initial purchase or the date of delivery. If you have any problems or questions, you can easily access our help pages, troubleshooting tips, FAQ, and user manuals on our service site: <https://sav.hkoenig.com>. By typing the reference name of your device in the search bar, you can access all available online support, designed to best meet your needs. If you still cannot find an answer to your question or problem, then click on “Did the answer solve your problem?”. This will direct you to the Customer Support Request Form, which you can fill out to validate your request and get help.

WARRANTY CONDITIONS

The warranty covers all failures occurring under normal use, in accordance with the usage and specifications in the user’s manual.

This warranty does not apply to packaging or transportation problems during the shipment of the product by the owner. It also does not include normal wear and tear of the product, nor maintenance or replacement of consumable parts.

EXCLUSION OF WARRANTY


- Accessories and wearing parts (*).
- Normal maintenance of the device.
- All breakdowns result from improper use (shocks, failure to comply with power supply recommendations, poor conditions of use, etc.), insufficient maintenance or misuse of the device, as well as the use of unsuitable accessories.
- Damage of external origin: fire, water damage, electrical surge, etc.
- Any equipment that has been disassembled, even partially, by persons other than those authorized to do so (notably the user).
- The products whose serial numbers would be missing, deteriorated, or illegible would not allow identification.
- The products are subjected to leasing, demonstration, or exhibition.

Some parts of your device, called wear parts or consumables, deteriorate with time and frequency of use of your device. This wear and tear are normal but can be accentuated by poor conditions of use or maintenance of your device. These parts are therefore not covered by the warranty. The accessories supplied with the device are also excluded from the warranty. They cannot be exchanged or refunded. However, some accessories can be purchased directly through our website: <https://sav.hkoenig.com/>.

ENVIRONMENT CAUTION:

Do not dispose of this product as it has with other household products. There is a separation of this waste product into communities, you will need to inform your local authorities about the places where you can return this product. In fact, electrical and electronic products contain hazardous substances that have harmful effects on the environment or human health and should be recycled. The symbol here indicates that electrical and electronic equipment should be chosen carefully, a wheeled waste container is marked with a cross. Adeva SAS / H.Koenig Europe – 8 rue Marc Seguin, 77290 Mitry-Mory, France www.hkoenig.com – <https://en.hkoenig.com> – Tél: +33 1 64 67 00 05.

Documents / Resources

	<p>H Koenig Weasy igloo8 Ice Maker [pdf] Instruction Manual Weasy igloo8, Ice Maker, Weasy igloo8 Ice Maker</p>
---	---

References

-  [H.Koenig : Le spécialiste du petit électroménager](#)
-  [HKOENIG SAV: Pezzi di ricambio, accessori, FAQ](#)
-  [H.Koenig customer support](#)
-  [HKOENIG SAV: Ersatzteile, Zubehör, FAQ](#)
-  [HKOENIG SAV: Repuestos, accesorios, FAQ](#)
-  [HKOENIG SAV: Pièces détachées ,accessoires, FAQ](#)
-  [HKOENIG SAV: Pièces détachées ,accessoires, FAQ](#)