 




HACHANLUN B085LXCFSM RFID NFC Card Copier Reader Writer Duplicator User Manual

[Home](#) » [HACHANLUN](#) » HACHANLUN B085LXCFSM RFID NFC Card Copier Reader Writer Duplicator User Manual

HACHANLUN B085LXCFSM RFID NFC Card Copier Reader Writer Duplicator User Manual

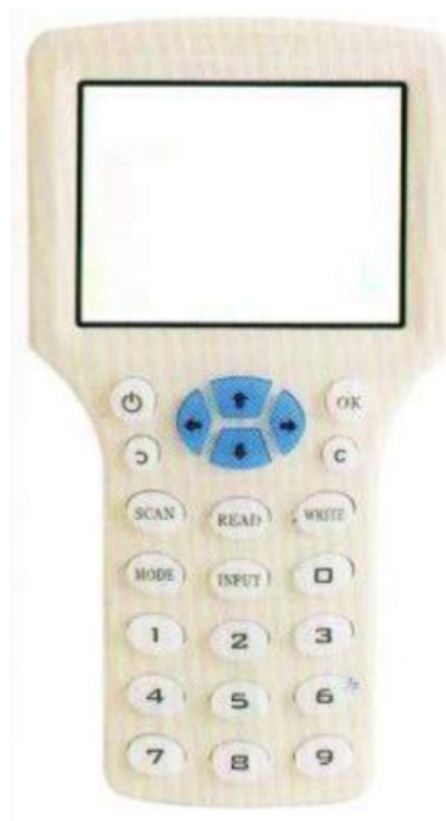



China association of locksmith designated recommended products
Designed specifically for Locksmiths
USER MENU

Important Note for Device Users: please read the instruction before operating. If you do not use this product for a long time, please remove the battery and keep it cool and dry where they are stored.

Contents [[hide](#)

- [1 Function](#)
- [2 Parameters](#)
- [3 Instructions](#)
- [4 Decode](#)
- [5 Connection](#)
- [6 Functions diagram](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

Function

Support read-write Frequency:
125KHz.250KHz, 375K1-1z.500KHz,
13.56MHz(ISO1443A/B)
Voice prompt
2.8' LCD display
Internet upgrade

Parameters

Input voltage : MICRO USB DCSV or 4AA batteries
Standby power consumption: 50uA
Working power consumption: 120uA
Size: 180X70X30mm

Instructions

Press Scan and enter the 'smart cards page', The key card in the induction area, press 'scan, the reader successfully.
Replace the blank card with the induction area, Press.' write' Copied successfully

Decode

 
Use ZX-COPY decoding software IC card: The device is turned into the 'disclaimer page', the Micro USB cable to

connect the device with the PC. PC appears U disk, open U disk inside the ZX-COPY decoding software, and press 'OK' to enter the main interface of the device.



For the IC card on the induction area, click on the Start decoding software. After decoding is successful, the replacement of a blank card to the induction area, according to the 'Write' success writing cards, is copied successfully.


Connection

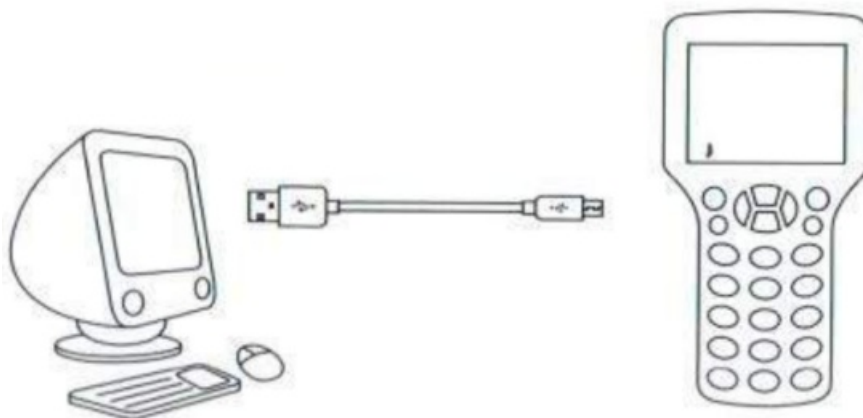


With a Micro USB cable to connect the device with the PC. When PC lower-left corner decoding mode, the device indicates a successful connection. Click 'start' to oper decoded.

After the device is connected PC, click on the bottom right corner of the upgraded version. Automatically searches for the new version, click Upgrade. Click the lower right corner of PC Help to learn more information about this device.

 Functions diagram

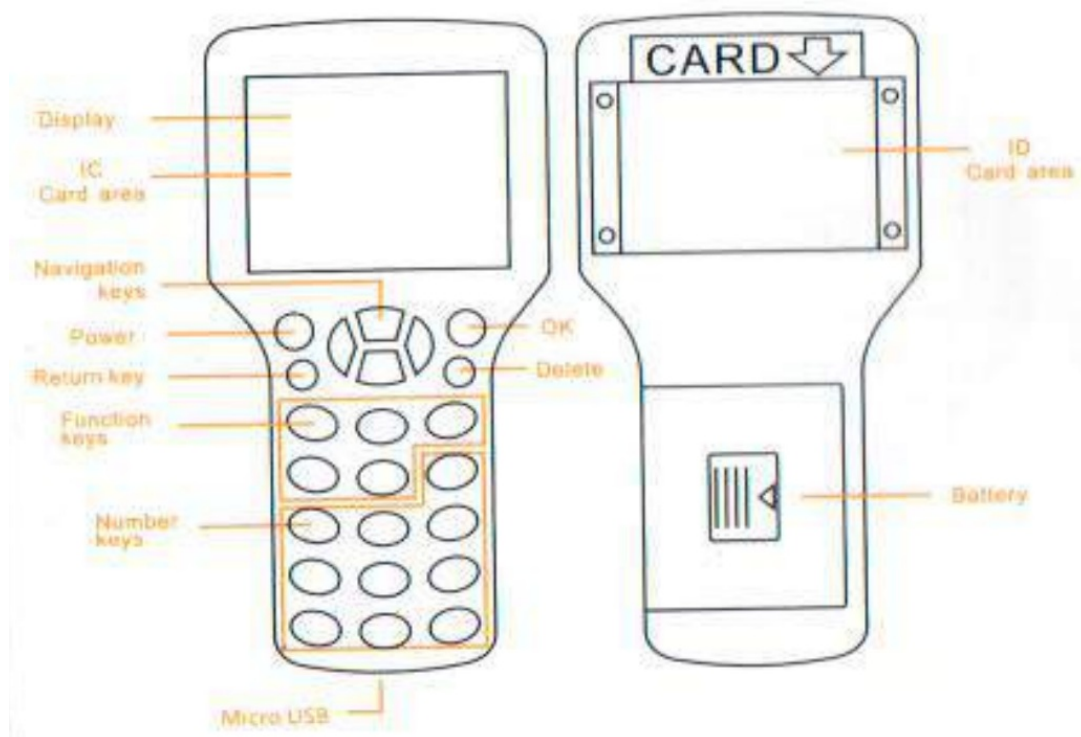

Documents / Resources

	<p>HACHANLUN B085LXCFSM RFID NFC Card Copier Reader Writer Duplicator [pdf] User Manual</p> <p>RFID NFC Card Copier Reader Writer Duplicator, B085LXCFSM, Copier Reader Writer Duplicator</p>
--	---