
 


## hager TYA604A Output module 4-fold 4A User Manual

[Home](#) » [hager](#) » hager TYA604A Output module 4-fold 4A User Manual 

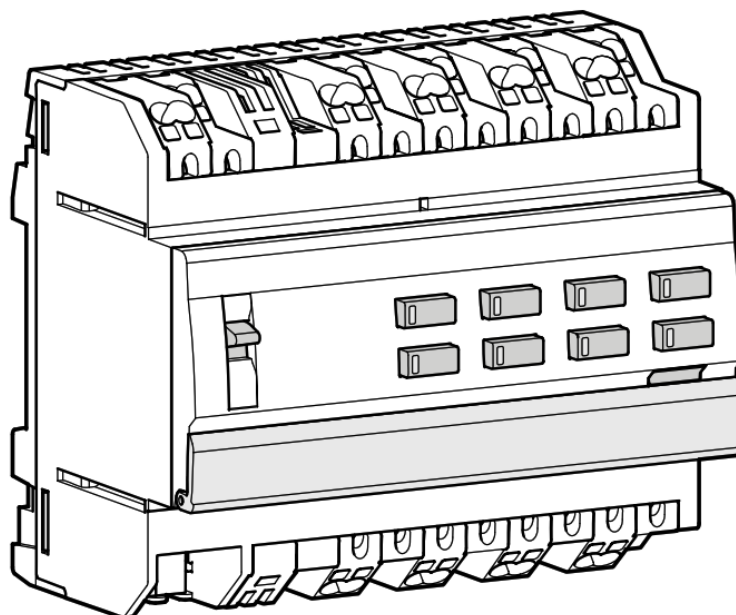

6LE008011A



#### **TYA604A**

Output module 4-fold 4 A

#### **TYA606 A**

Output module 6-fold 4 A

#### **TYA608A**

Output module 8-fold 4 A

#### **TYA610 A**

Output module 10-fold 4 A

### **Contents**

- [1 Safety instructions](#)
- [2 Function](#)
- [3 Operation](#)
- [4 Information for electricians](#)
- [5 Start-up](#)
- [6 Appendix](#)
- [7 Troubleshooting](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

## **Safety instructions**

Electrical equipment may only be installed and assembled by a qualified electrician in accordance with the relevant installation standards, guidelines, regulations, directives, safety and accident prevention regulations of the country.

Failure to comply with these installation instructions may result in damage to the device, fire or other hazards.

Hazard due to electric shock. Disconnect before working on the device or load.

Take into account all circuit breakers that supply dangerous voltages to the device or load.

Hazard due to electric shock. The device is not suited for safe disconnection of the main supply.

Hazard due to electric shock on the SELV/PELV installation. Not suitable for switching SELV/ PELV voltages.


Connect one motor per output only. If several motors are connected, motors or devices might be destroyed.

Use drives with mechanical or electrical final position switch only. Check final position switches for correct adjustment. Observe motor manufacturer's data. The device could get damaged.


Do not connect any three-phase motors. The device could get damaged. Observe the motor manufacturer's data regarding change-over time and max. switch-on time (ED).

These instructions are an integral component of the product and must be retained by the end user.

### **Design and layout of the device**

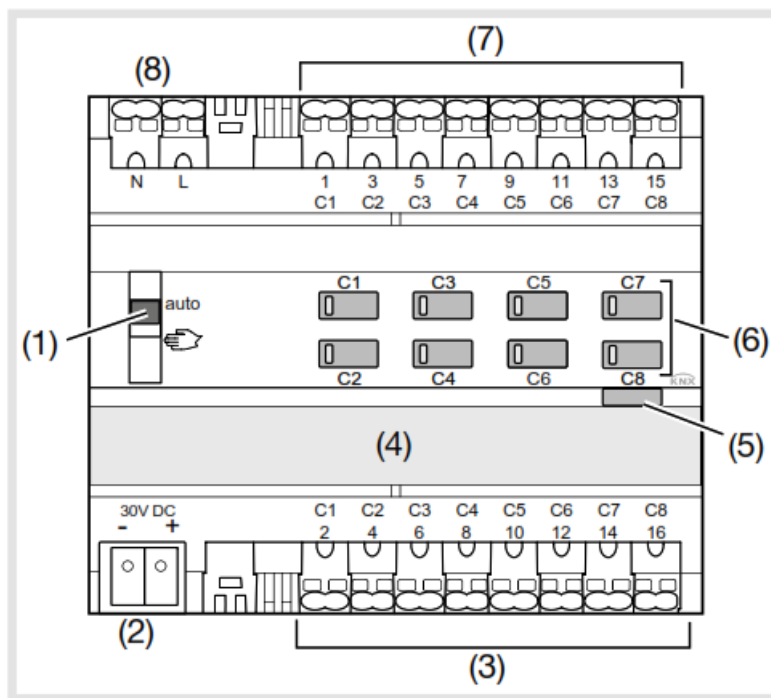

**Fig. 1: example device variant 8/4gang**

1. Slide switch auto/ 
2. KNX bus connection terminal
3. Connections of loads
4. Labeling field
5. Illuminated programming button
6. Operation button for manual operation per output with status LED
7. Connections for switching voltage
8. Mains power supply connections (only 8gang) With variants 4/2gang, 6/3gang and 10/5gang the basic design corresponds to the 8/4gang device variant.

## Function

### System information

This device is a product of KNX system and corresponds to the KNX guidelines. Detailed specialized knowledge obtained from KNX training courses is required for comprehension. The planning, installation, and commissioning of the device is carried out with the help of KNX-certified software.

### System link commissioning

The function of the device is software-dependent. The software is to be taken from the product database.

You can find the latest version of the product database, technical descriptions as well as conversion and additional support programs on our website.

### Functional description

The device receives telegrams from sensors or other controllers via the KNX installation bus and switches electrical loads with its independent relay contacts.

### Correct use

- Switch electrical loads of 230 V AC with potential-free contacts.
- Switching electrically operated motors of 230 V AC for blinds, shutters, awnings and similar hangings.
- Mounting on DIN rail according to DIN EN 60715 in the distribution box.

## Product characteristics


- Manual activation of the outputs on the device possible, building site operation.
- Status display of the outputs on the device.
- Scene function
- Forced position by the higher-level controller.
- Connection of various external conductors is possible.


## Functions in switch operation

- Time switching functions.  
Functions in roller shutter/blind operation
- The position can be started directly.
- Slat position directly controllable.
- Feedback of operating state, shutter position, and slat adjustment.
- 3 Alarms.


## Operation

### The manual operation switch on/off

 With the 8/4gang variants, control of the outputs is possible even without bus voltage when the mains voltage is connected e.g. for operation at building sites.  
Bus or mains power supply is present.

Push switch (1) to the position. 

Manual operation is switched on, the outputs can be controlled using the operation buttons (6) independently of each other.

 During manual operation, the controller is deactivated via the KNX bus.

 **System link commissioning:**


depending on the programming, the manual operation is activated permanently or for a time period configured via the application software.


If the manual operation is blocked via the application software, no activation takes place. Or Move switch (1) to position auto.

The manual operation is switched off. The operation takes place solely via the KNX bus. The output adopts the position predefined by the bus controller.

### Operating outputs in manual operation

The operation takes place per output by briefly pressing the operation button repeatedly (Table 1).

 **CAUTION!** Risk of destruction due to the simultaneous pressing of the buttons for UP and DOWN if a motor is connected when the motor is in an unprogrammed state! Motors, hangings and the device may be destroyed! Always only press one button in manual operation for unprogrammed devices.

Status	Behavior when button pressed briefly
Switching operation	
Load is switched off, status LED of button (6) is off.	Switch ON the connected load. Status LED of a button (6) lights up.
Load is switched on, status LED of the button (6) lights up.	Switch OFF the connected load. The LED goes out.
Roller shutter/blind operation	
Output is in stand-by, status LED of the button (6) is off.	Movement operation starts. Status LED of button (6) lights up1).  When the roller shutter/ blind is in the final position, the button opposite must be pressed to move the shutter/blind.
Output active, status LED of the button (6) lights up).	Movement operation stops, LED goes out.

1. LED lights up red with TYA6.. devices. LED lights up red while moving up and green while moving down with TXA6.. devices.

Table 1: manual operation

## Information for electricians

### Installation and electrical connection



**DANGER!** Touching live parts can result in an electric shock!

An electric shock can be lethal! Disconnect the connecting cables before working on the device and cover all live parts in the area!



**CAUTION!** Impermissible heating if the load of the device is too high! The device and the connected cables may get damaged in the connection area!

Do not exceed the maximum current carrying capacity!



**CAUTION!** Risk of destruction if the parallel connection of several motors on one output! Final position switches could fuse together. Motors, hangings and the device may be destroyed! Only connect one motor per output!

### Installing the appliance



Observe temperature range. Provide sufficient cooling.

Mount device onto DIN rail in accordance with DIN EN 60715.

### Connect device

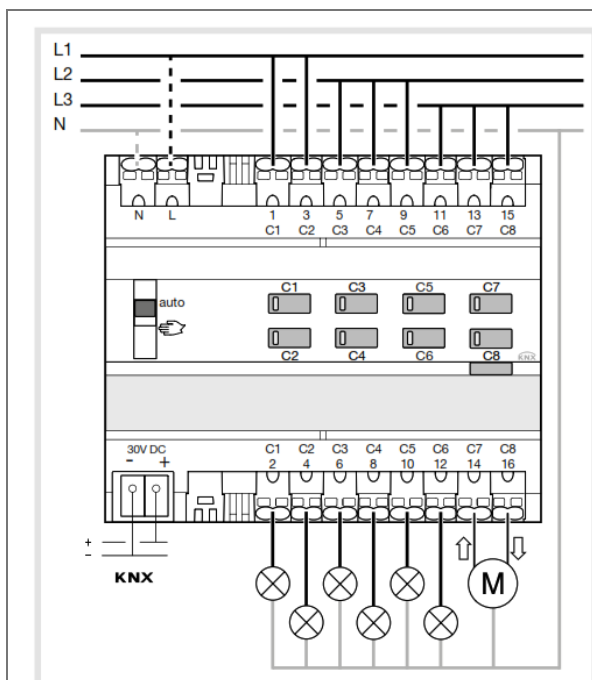


Fig 2: Device connection


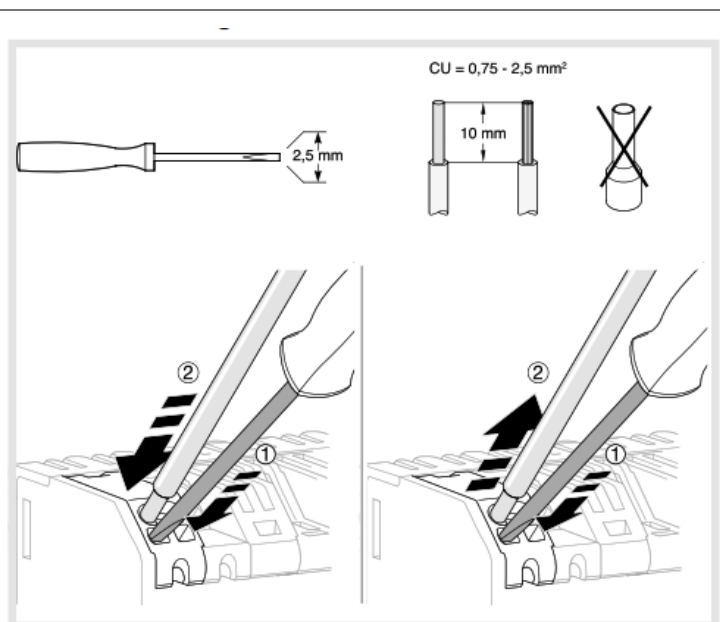


Fig 3: installation/deinstallation with plug-in terminals



Connect bus cable via connecting terminal (2).

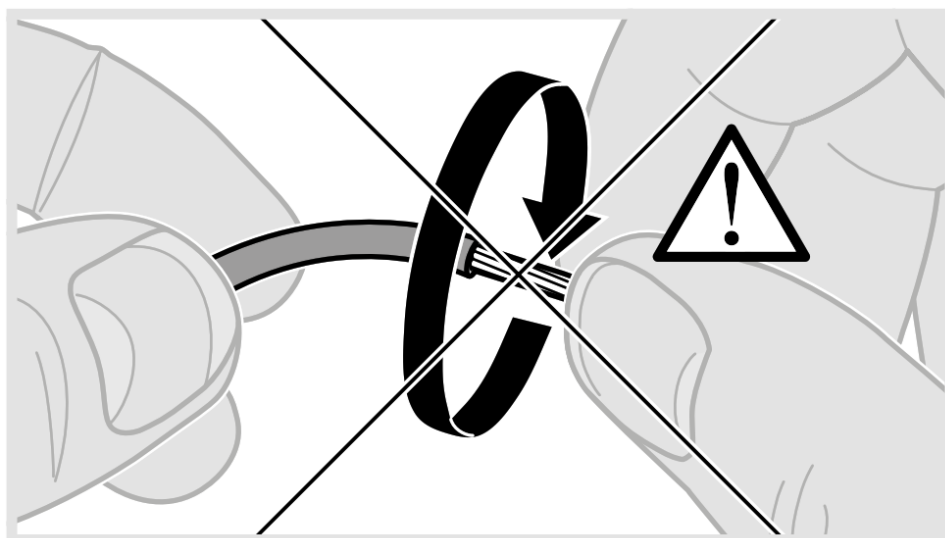

Mains voltage can be connected optionally for device variants 8/4gang (8). Reduction of the power supply load is possible (see Technical data).

#### Connecting loads to be switched

The output is configured as switching output.

- Connect switching voltage on the upper terminal strip (7) of the device.
- Connect load on the lower terminal strip (3) of the device.

#### Connecting blind drives

The two adjacent relay outputs C1/C2, C3/C4, C5/ C6, C7/C8 each form one blind output for blind operations. Each left relay output C1, C3, C5, C7 is intended for the direction UP, and each right relay output C2, C4, C6, C8 is intended for the direction DOWN. In manual operation, the blind is moved UP and DOWN using the corresponding operation buttons.

Two outputs are configured as a blind outputs.

Connect supply voltage of the drives on the upper terminal strip (7). While doing so, use the same phase (external conductors).

Connect drives on the lower terminal strip (3).

## Start-up

System link: loading physical address and application software

- The switch (1) is in position auto.
- Switch on bus voltage.
- Press the programming button (5). The button lights up.



**If the button does not light up, no bus voltage is present.**

- Load the physical address into the device.
- The status LED of the button goes out.
- Load application software.
- Note down the physical address on the labeling field (4).

## Start up the device

- Switch on mains voltage on the outputs.
- Switch on main power supply (8gang variant).

## Determine operation time and slat adjusting time

In blind/roller shutter operation, the operation time for positioning the sunshade is important. The position is calculated based on the operation time. The slat adjusting time for slat blinds, determined by the design, is part of the total operation time.

The opening angle of the slats is therefore set as operation time between opened and closed positions.



The operation time for UP is normally longer than the operation time for DOWN and must be measured separately if necessary.


- Measure UP and DOWN operation time of the hanging.
- Measure slat adjusting time between OPEN and CLOSED.
- Enter measured values into the parameter setting – running time... or slat step time.

## Functional test

The functionality of the outputs is displayed via the status LED of the operation button (6).

## Appendix

### Technical data

Supply voltage KNX	21-32V  SELV
Breaking capacity	μ 10A AC1 230V~
Incandescent lamps	800 W
HV halogen lamps	800 W
Conventional transformers	800 W
electronic transformers	800 W
Fluorescent lamps: – without ballast – with electronic ballast (mono/duo)	800 W  12 x 36 W

Energy-saving/LED lamps	12 x 23 W
Switching current at $\cos \Phi = 0.6$	max. 2,5 A
Upstream protection: circuit breaker	10:00 AM
Minimum switching current	100 mA

#### Interlock time for

changing direction of travel	software-dependent
Operating altitude	max. 2000 m
Degree of contamination	12:00 AM
Surge voltage	4 kV
Degree of protection of housing	IP20
Degree of protection of housing under front panel	IP30

Impact protection	IK 04
Overvoltage class	III
Operating temperature	-5° ... +45°C
Storage/transport temperature	-20 ... +70 °C

#### Maximum switching cycle rate

at full load	6 switching cycle/minute
Connection capacity	0.75 mm²...2.5 mm²
Communication media KNX	TP 1
Configuration mode	S-Mode



## Variants 4/2gang

Energy dissipation	1 W
Permissible highest current strength per device	max. 16 A
Own consumption on the KNX bus: – typical	4 mA (TYA..)
– in standby	3,3 mA (TYA..)
Dimension	4 TE, 4 x 17.5 mm

## Variants 6/3gang

Energy dissipation	1 W
Permissible highest current strength per device	max. 24 A
Own consumption on the KNX bus: – typical	4,3 mA (TYA..)
– in standby	3,3 mA (TYA..)
Dimension	4 TE, 4 x 17.5 mm


## Variants 8/4gang

Auxiliary voltage	230V~ +10/-15%240V~ +/- 6%
Energy dissipation	2 W
Permissible highest current strength per device	max. 32 A
Own consumption on the KNX bus: – typical	15,2 mA (TYA..)
– in standby	8,6 mA (TYA..)
Own consumption on the KNX bus with mains connection: – typical – in standby	2 mA (TXA.., TYA..) 2 mA (TXA.., TYA..)

Dimension	6 TE, 6 x 17.5 mm
Variants 10/5gang Energy dissipation	3 W
Permissible highest current strength per device	max. 40 A
Own consumption on the KNX bus: – typical	15,9 mA (TYA..)
– in standby	7,5 mA (TYA..)
Dimension	6 TE, 6 x 17.5 mm

## Troubleshooting

### Manual operation not possible

Cause 1: switch (1) not moved to . 

Move the switch to . 

Cause 2: manual operation has not been enabled (System link).

Enable manual operation via the application software.


### Bus operation is not possible

Cause 1: bus voltage is not present.

Check bus connection terminals for correct polarity.

Check bus voltage by briefly pressing the programming button (5), a red LED lights up if bus voltage is present.

8gang: If mains voltage without bus voltage is present – the red LED of programming button (5) flashes.

Cause 2: manual operation is active. Switch (1) is in position.  Move switch (1) to position auto.

Shutters/blinds do not move to the final position Cause: operation time for the shutters/blinds set incorrectly.

Check operation times. Measure again and reprogram if necessary.



### WARNING!


The supply voltages of the electric circuits connected to the product must always all fall within the same voltage range (LV (low voltage), VLV (very-low voltage) or SELV (safety extra-low voltage)). Connecting voltages of different ranges is strictly prohibited.



■ Correct Disposal of This product (Waste Electrical & Electronic Equipment).

(Applicable in the European Union and other European countries with separate collection systems).

This marking shown on the product or its literature indicates that it should not be disposed of with other households' waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their suppliers and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes of disposal. Usable in all Europe  and in Switzerland

## Documents / Resources



[hager TYA604A Output module 4-fold 4A](#) [pdf] User Manual

TYA604A, TYA606 A, Output module 4-fold 4A, 4-fold 4A, Output module

## References

- [:h Hager worldwide](#)