



HAIDEMU Intelligent HDM-H21 Remote Control Instruction Manual

[Home](#) » [HAIDEMU Intelligent](#) » HAIDEMU Intelligent HDM-H21 Remote Control Instruction Manual 

HAIDEMU Intelligent HDM-H21 Remote Control Instruction Manual




H21 Remote Control System Instrution Manual

2024.06.27

Contents

- [1 A. Remote Control Function Explanation](#)
- [2 B. Detailed description](#)
- [3 C System connection diagram](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

A. Remote Control Function Explanation

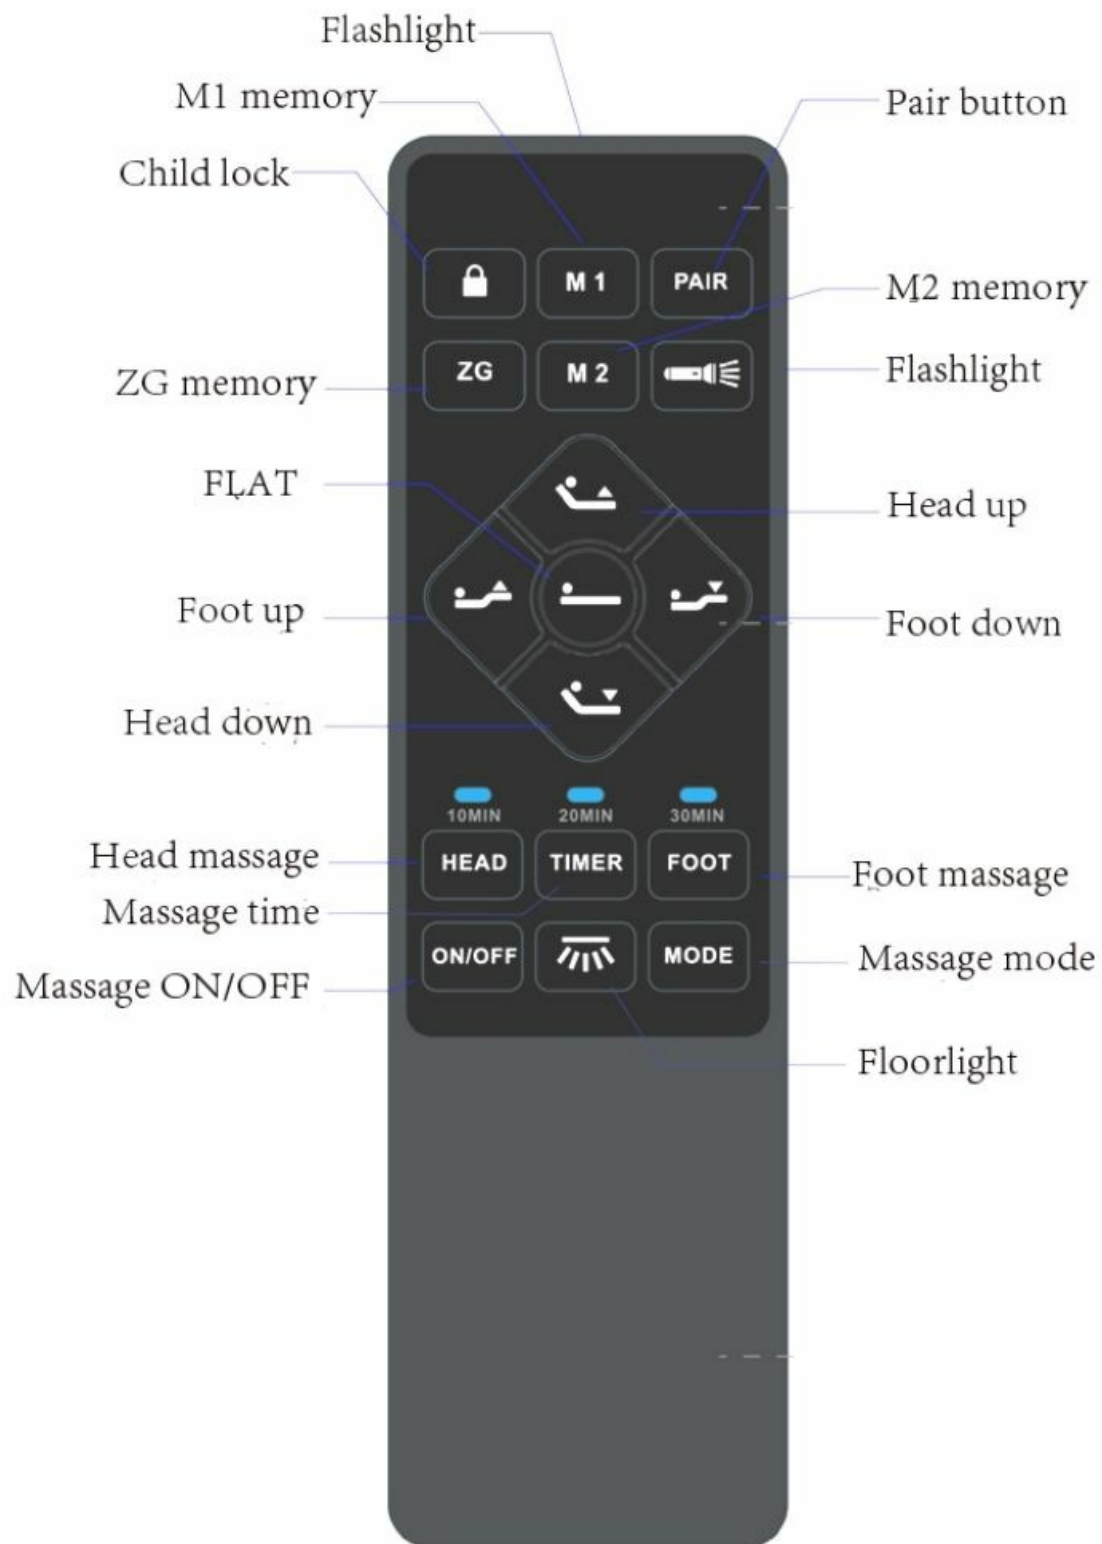

B. Detailed description

1 Connection and startup

1. The actuator and massage motor are inserted into the corresponding socket according to the text instructions on the control box.
2. Connect the control box with the SMPS with the connecting cable, and then the SMPS is powered on.
At this time, the control box detects and automatically runs the head and feet to the flat position, then the buzzer beep and the ambient light flashes. At this time, the control box is in the code matching state.
3. The code matching state of the control box lasts about 10 seconds. During this time, operate the remote control


PAIR


for pairing. When the buzzer beep and the ambient light goes out, it indicates that the pairing is successful; If code match is not required, the ambient light will be off after 10 seconds, indicating that the control box enters the standby state.


4. When the remote control is successfully paired with the control box, it can be used normally.


2 Buttons description


- ① **M 1 ZG M 2**: Click the button and release it, the head and feet will automatically run to the set position. During the operation, press any button to stop the operation.


1. : Child lock, Hold for 3 seconds, the buzzer will sound once, the child lock will be locked, Hold for 3 seconds again, the child lock will be unlocked.


2. : Press and hold the button, the head will rise. Release the button to stop the operation.


3. : Press and hold the button, the head will lower. Release the button to stop the operation.


4. : Press and hold the button, the feet will rise. Release the button to stop the operation.


5. : Click the button to release it, the head and feet will automatically lower to the flat position. During the operation, press any button to stop the operation.


6. : Press and hold the button, the feet will lower. Release the button to stop the operation.


7. : Press and hold the button, the flashlight on the top of the remote control will light up. Release the button, and the flashlight will [turn](#) off.


8. : Click the button, head massage vibrating intensity will raise up one level, total 4 levels. When it reaches the 3rd level, click again, head massage will turn off.

9. : Click the button, choose massage time 10min/20min/30min/all off.

10. : Click the button, Foot massage vibrating intensity will raise up one level, total 4 levels. When it reaches the 3rd level, click again, head massage will turn off.

11. : Massage ON/OFF.

12. : Click the button, the floorlight will turn on, about 5 min later or Click the button, the floorlight will turn off.

13. : Click the button, change circularly the massage mode of the motors by one level once, total 4 levels: Work and rest intervals: continuously working / 0.3s / 0.6s / 1s.

3 Other instructions

1. When you press any button on the remote, the backlight of the remote will turn on for about 3 seconds and then turn off automatically.
2. When the massage motor is running, if the actuator is operated, the massage will keep normal operation during

the operation of the actuator.

3. The control box is designed with overload protection function, and the overload protection current is 4.5A.



4. Operation method of one remote controlling two beds at the same time

1. Operate the control box of the first bed according to steps 1-2 in “connection and startup”. When the

control box is in the code matching state, hold  on the remote for about 3 seconds.



When the buzzer beep and the ambient light goes out, it means that it is correctly paired with the control box of the first bed.

2. Operate the control box of the second bed according to steps 1-2 in “connection and start-up”.

When the control box is in the code matching state, hold the  +  buttons on the remote for about 3 seconds. When the buzzer beep and the ambient light goes out, it means that it is correctly paired with the control box of the second bed.



5. Operation method of decoupling the remote and control box

1. Release the pairing of one bed controlled by one remote: Follow steps 1-2 in “connection and startup”.

When the control box is in the code matching state, hold the  +  button on the remote for about 3 seconds. When the buzzer beep and the ambient light goes out, the remote successfully cancels the pairing relationship with the control box.


2. Release the pairing of two beds controlled by one remote: Follow steps 1-2 in “Connection and Power

On” for the control box that was paired with the “ ” key for both beds. When the control box is in

the code matching state, hold the  +  button on the remote for about 3 seconds. When the buzzer beep and the ambient light goes out, the remote control successfully cancels the pairing relationship with the two beds.

3. When the remote is unmatched with the control box, the Bluetooth device paired with the control box is also unmatched.

C System connection diagram

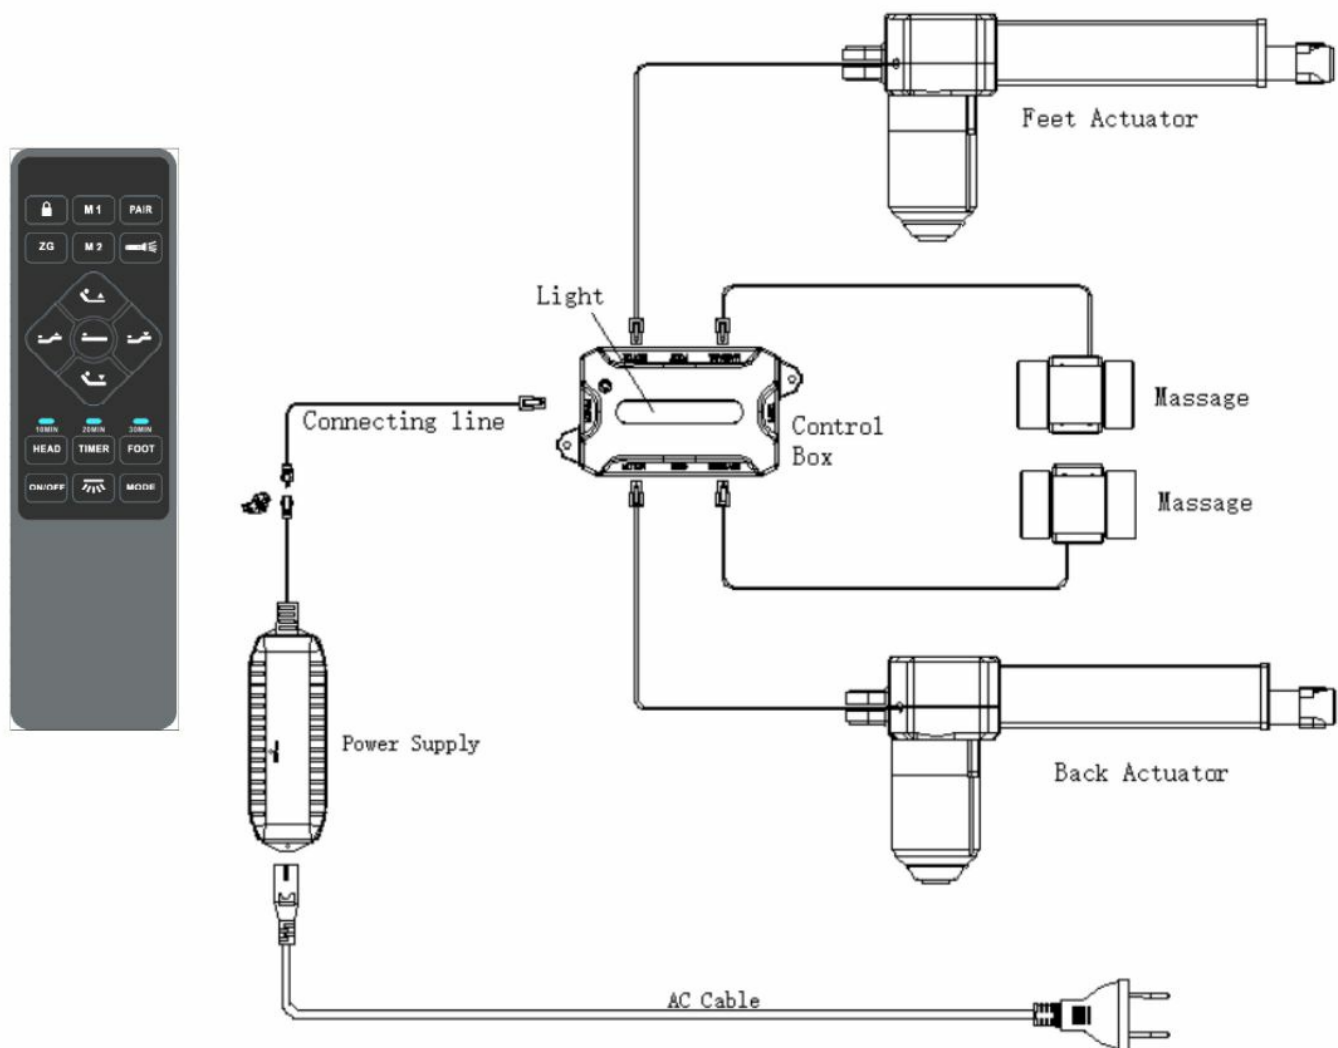

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

 
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition, compliance with exposure requirements.

Documents / Resources



- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.