

Haier

Tablet P20
Octa Core
Processor



Haier Tablet P20 Octa Core Processor User Manual

[Home](#) » [Haier](#) » Haier Tablet P20 Octa Core Processor User Manual 

Contents

- [1 Haier Tablet P20 Octa Core Processo](#)
- [2 SPECIFICATIONS](#)
- [3 GETTING STARTED](#)
- [4 Power On/Of](#)
- [5 SETTING BASICS](#)
- [6 SAFETY INSTRUCTIONS](#)
- [7 TROUBLESHOOTING](#)
- [8 FAQs](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Haier

Haier Tablet P20 Octa Core Processo



WELCOME

Thank you for purchasing the Haier P20 tablet. This tablet is designed to provide distinct and different experiences for both study and entertainment.


- Please read these instructions carefully before using the tablet. The instructions contain important information that will help you get the best out of the tablet and ensure safe and proper installation, use, and maintenance.
- Keep this manual in a convenient place so you can always refer to it for the safe and proper use of the tablet.
- If you sell the tablet, give it away, or leave it behind when you move house, make sure you also pass this manual so that the new owner can become familiar with the tablet and safety warnings.

SPECIFICATIONS

Size	10.1 inch	Display	800*1280
RAM	6G	ROM	128G
Front Camera	5.0MP	Rear Camera	8.0MP
Battery	5000mAh	Ports	Nano SIM/TF

GETTING STARTED

Before Power Up The Tablet, Ensure That It Is Fully Charged.

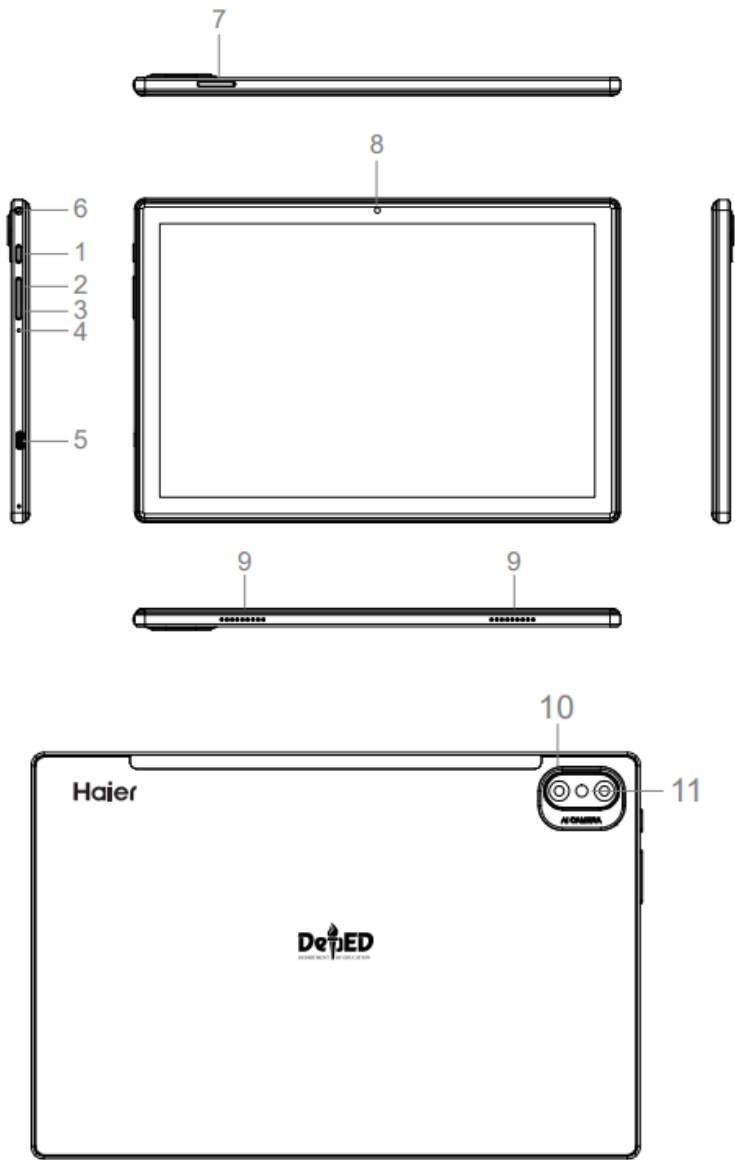

1. Reset
2. Power On/Off
3. Volume +
4. Volume –
5. USB Type-C Interface
6. 3.5mm AUX Slot
7. SIM Card/TF Card Slot
8. Front Camera
9. Double Speaker
10. Flash Light
11. Rear Camera

Power On/Of

- Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide.
- Press and hold the power button for 2s, then release it. It will show Power Off and Restart on the screen. Tap Power Off to turn off the tablet.
- Press and hold the power button for 5s to do a forced shutdown when it's frozen.

Battery


- A rechargeable Lithium-ion polymer ("Li-polymer") battery is installed in the tablet.
- We suggest you drain the battery completely once a month if you only use your tablet occasionally.
- DO NOT dispose of the tablet in a fire








Tip

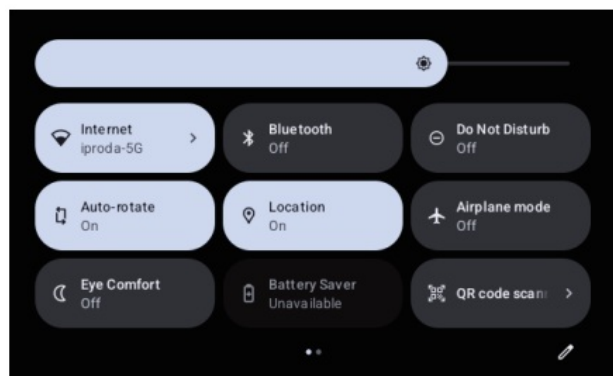Go to Settings>Display>Sleep to set the time of Sleep Mode.

SETTING BASICS

Swipe down from the top of the screen to access Quick Settings



-  Wi-fi. Tap to connect to a wireless network.
-  Bluetooth. Enable/disable the Bluetooth on the tablet; pair with other Bluetooth devices or view paired devices.
-  Do Not Disturb. Block sounds or vibrations according to the different modes (Total silence, Alarms only, and Priority only).
-  Portrait /Auto-rotate/ Landscape.
-  Battery Saver. Enable/disable the low power mode.
-  Airplane Mode. Turn on/ off all the network connectivity.
- Tap the  icon to change the options in the Quick Settings.

More Settings

Swipe down from the top of the screen, then tap the icon  to enter the detailed Setting interface. Or, tap the Setting icon on the Home screen to enter.

Network & Internet

- Connect to any working Wi-Fi
- Enable/disable the Airplane Mode
- Monitor the data usage

SAFETY INSTRUCTIONS

Important Safety Instructions

1. Do not install near any heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
2. **WARNING:** Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery, etc).
3. **WARNING:** The mains plug should be kept in a state that can be disconnected at any time to avoid emergency.
4. **WARNING:** The apparatus should not be exposed to dripping or splashing. Objects filled with liquids, such as vases or drinking glasses, should not be placed on the apparatus.
5. **WARNING: Please refer** to the electrical and safety information on the tablet and user manual before installing or operating the apparatus. Use the device where the ambient temperature is between 0° and 35° C (32° to 95° F). Low or high-temperature conditions might cause the device to change its behavior to regulate its temperature. Using your tablet in very cold conditions outside of its operating range might temporarily shorten the battery life and could cause the device to turn off. Battery life will return to normal when you bring the device back to higher ambient temperatures. Using the device in very hot conditions can permanently shorten battery life.

WARRANTY

Customer Name	
Phone No.	
Address	
Product Model	
Serial No.	
Purchase Date	
Warranty Date	
Authorized Dealer Signature & Stamp	

TROUBLESHOOTING

Q1. The Tablet Doesn't Powe On.

- Reboot your tablet after charging for 30 minutes;
- Press the power button to check if the tablet is in the Sleep Mode;
- Press and hold the power button for 55to turn the tablet on, then reboot it;
- Press the Reset button with a pin to reboot the tablet.

Q2. The Tablet Doesn't Charge.

- Make sure the USB cable is properly plugged into the charging port;
- Try another compatible USB cable and adapter.

Q3. Error Message Occurs During The Operation

- Uninstall the APP with the error message, then download and install again;
- Press the Reset button with a pin to reboot the tablet.

Q4. The Tablet Cannot Be Detected By The Computer.

- Make sure the tablet is powered on;
- Try another USB cable;
- Try another USB port on the computer;
- Instead of Charge this device, choose Transfer files or Transfer photos (PTP)
- when connecting the tablet to the computer.

Q5. The Tablet Cannot Connect To The Wi-Fi.

- Make sure the Wi-Fi in your tablet is ON;
- Make sure you input the correct password when connecting to the Wi-Fi;
- Restart the router;
- Make sure there is no filter setting or device connection limitation in the setting of the router;
- Forget the current Wi-Fi, reset the route,r, and connect the Wi-Fi again.

Remarks

To fulfill Haier's service commitment and solve your concern after purchase, our authorized service provider might create customer information in our customer service system, if your warranty card or proof of purchase is missing, we can query the customer information database to guarantee your service request is well satisfied.

FAQs

Q: How do I change the language on my Haier P20 tablet?

A: To change the language, go to Settings, then Language & Input. Select your preferred language from the list of available options. **Q: Can I expand the storage on the Haier P20 tablet?**


A: Yes, you can expand the storage using a TF card in the designated slot on the tablet. **Q: How do I take a screenshot on the Haier P20 tablet?**

A: To take a screenshot, simultaneously press the Power button and Volume Down button on your tablet.

Q: How do I enable Developer Options on my Haier P20 tablet?

A: To enable Developer Options, go to Settings, About Tablet, and tap on Build Number seven times. Developer Options will then be accessible in the Settings menu.

Documents / Resources

	Haier Tablet P20 Octa Core Processor [pdf] User Manual P20, T1085M4LE, 711-T1085-M4001, Tablet P20 Octa Core Processor, Tablet P20, Octa Core Processor, Core Processor
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.