



Halla Lipo45 Variants Lamp Instruction Manual

[Home](#) » [Halla](#) » Halla Lipo45 Variants Lamp Instruction Manual 


 

AJAX Life Quality Jeweller CO2 Sensor User Guide AJAX Life Quality Jeweller CO2 Sensor












Contents

- [1 Installation instruction](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

Installation instruction

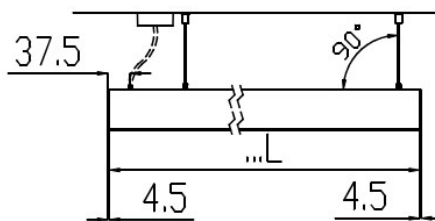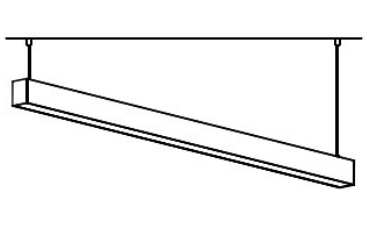


45-501x-10Gxx	L = 561mm
45-501x-15Gxx	L = 842mm
45-501x-20Gxx	L = 1122mm
45-501x-25Gxx	L = 1403mm
45-501x-30Gxx	L = 1683mm
45-501x-35Gxx	L = 1964mm
45-501x-40Gxx	L = 2244mm

  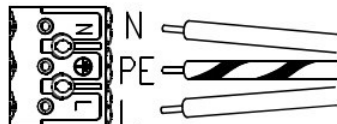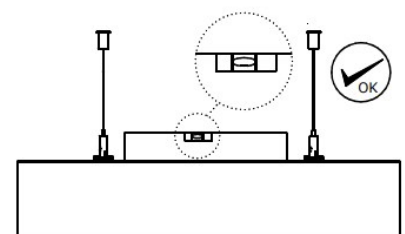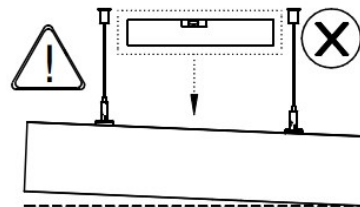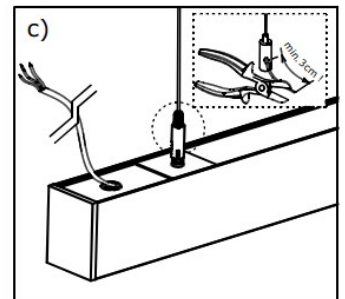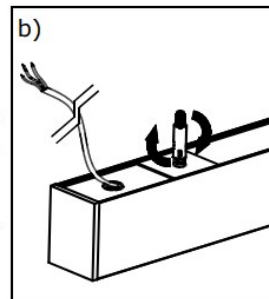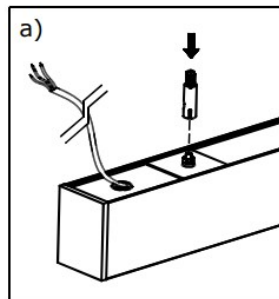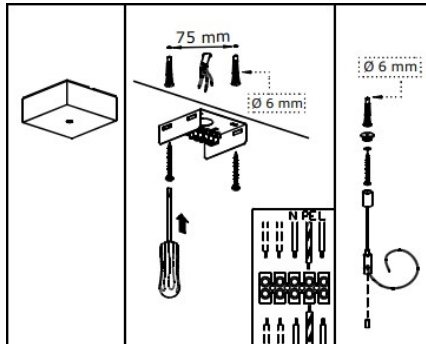

Dim

brown
/blue/
'yellow/
colourless
/white/

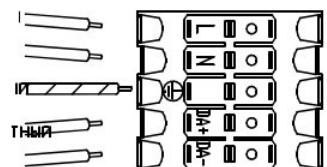


The light source in this luminaire may be replaced only by the manufacturer or its contractual service technician or a similarly qualified person!

The installation may only be carried by authorised specialist. Always switch-off the power supply before carrying out any maintenance.

The manufacturer is not responsible for the incorrect use and assembly of its products.

Documents / Resources

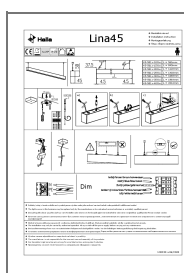

[Halla Lipo45 Variants Lamp](#) [pdf] Instruction Manual
Lipo45, Variants Lamp, Lipo45 Variants Lamp

