

  
HALO®  
HALO RapidPack  
SOURCE 200 182Wh  
Portable Power  
Station with LCD  
Display



 
# HALO RapidPack SOURCE 200 182Wh Portable Power Station with LCD Display User Manual

[Home](#) » [HALO](#) » HALO RapidPack SOURCE 200 182Wh Portable Power Station with LCD Display User Manual 

## Contents

- [1 HALO RapidPack SOURCE 200 182Wh Portable Power Station with LCD Display](#)
- [2 Product Usage Instructions](#)
- [3 SAFETY INSTRUCTIONS](#)
- [4 PRODUCT MAINTENANCE](#)
- [5 PRODUCT OVERVIEW](#)
- [6 LCD DISPLAY](#)
- [7 CHARGE YOUR RAPIDPACK SOURCE 200](#)
- [8 CHARGING A LAPTOP](#)
- [9 CHARGE YOUR DEVICES](#)
- [10 WIRELESS CHARGING](#)
- [11 HOW TO USE THE LANTERN](#)
- [12 TROUBLESHOOTING](#)
- [13 TECHNICAL SPECIFICATIONS](#)
- [14 FCC NOTE](#)
- [15 TRANSPORTING DANGEROUS GOODS](#)
- [16 Frequently Asked Questions \(FAQ\)](#)
- [17 Documents / Resources](#)
  - [17.1 References](#)
- [18 Related Posts](#)



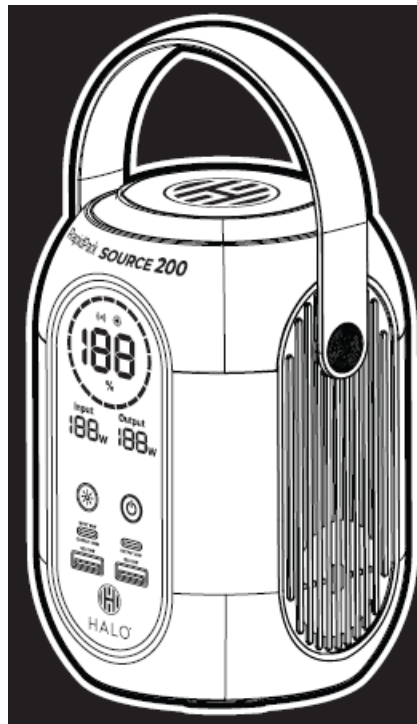

## Product Information

### Specifications

- Dimensions: 89mm x 145mm
- Model Number: HPB-RP200000F
- Part Number: 2BASY-HPBRP200
- Manufacture Date: 2024-12-05
- Serial Number: C909.PD140
- Reference Number: C912-M5348D
- Expiration Date: 2024-12-14
- Document Number: D 2024-12-14 T-MF-CAD-538A

## Product Usage Instructions

### Unpacking and Inspection

Upon receiving the product, carefully unpack it and inspect for any visible damage or missing components.

### Assembly

Follow the assembly instructions provided in the manual. Ensure all parts are securely connected.

### Operating the Product

Turn on the product using the designated power button or switch. Follow the operational guidelines for optimal performance.

## SAFETY INSTRUCTIONS

FOR ALL QUESTIONS RELATED TO SAFETY, WARRANTY OR EXCHANGE REQUESTS, PLEASE CONTACT US.

## **YOUR SAFETY IS IMPORTANT TO US.**

Please read instructions carefully and utilize the proper precautions before operating this equipment. Save instructions for future reference.

- When used correctly, lithiumion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire, or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your power bank may cause electric shock to users and damage equipment.
- Keep your power bank dry and away from moisture, water, and corrosive materials.
- Do not expose your power bank to moisture, water, rain, or snow.
- Keep your power bank away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Your power bank may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict air flow around the jump starter during operation.
- Do not disassemble your power bank. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate your power bank if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush, or subject to mechanical shock.
- Keep away from children and pets. The power bank, along with its accessories are not toys.

## **PRODUCT MAINTENANCE**

### **WARNING**

IF THE JUMP STARTER OVERHEATS, BECOMES SWOLLEN, OR IS DEFORMED IN ANY WAY, IMMEDIATELY STOP USING THE PRODUCT AND CONTACT CUSTOMER SERVICE.

### **EQUIPMENT CLEANING:**

- Please make sure that the device is disconnected from all input power and output devices.
- Wipe with a clean, dry cloth.
- Do not use corrosive cleaners or solvents.
- Do not insert metal objects into the ports to clean them as this could cause electrical shock. Blow any debris out with a canned-air type of product.

 


### **DISPOSAL/RECYCLING:**

Do not put the device and its accessories in the trash can. Items must be properly handled in accordance with local laws and regulations. For additional information, please see [www.epa.gov](http://www.epa.gov).


### **WARNING**

## PRODUCT OVERVIEW

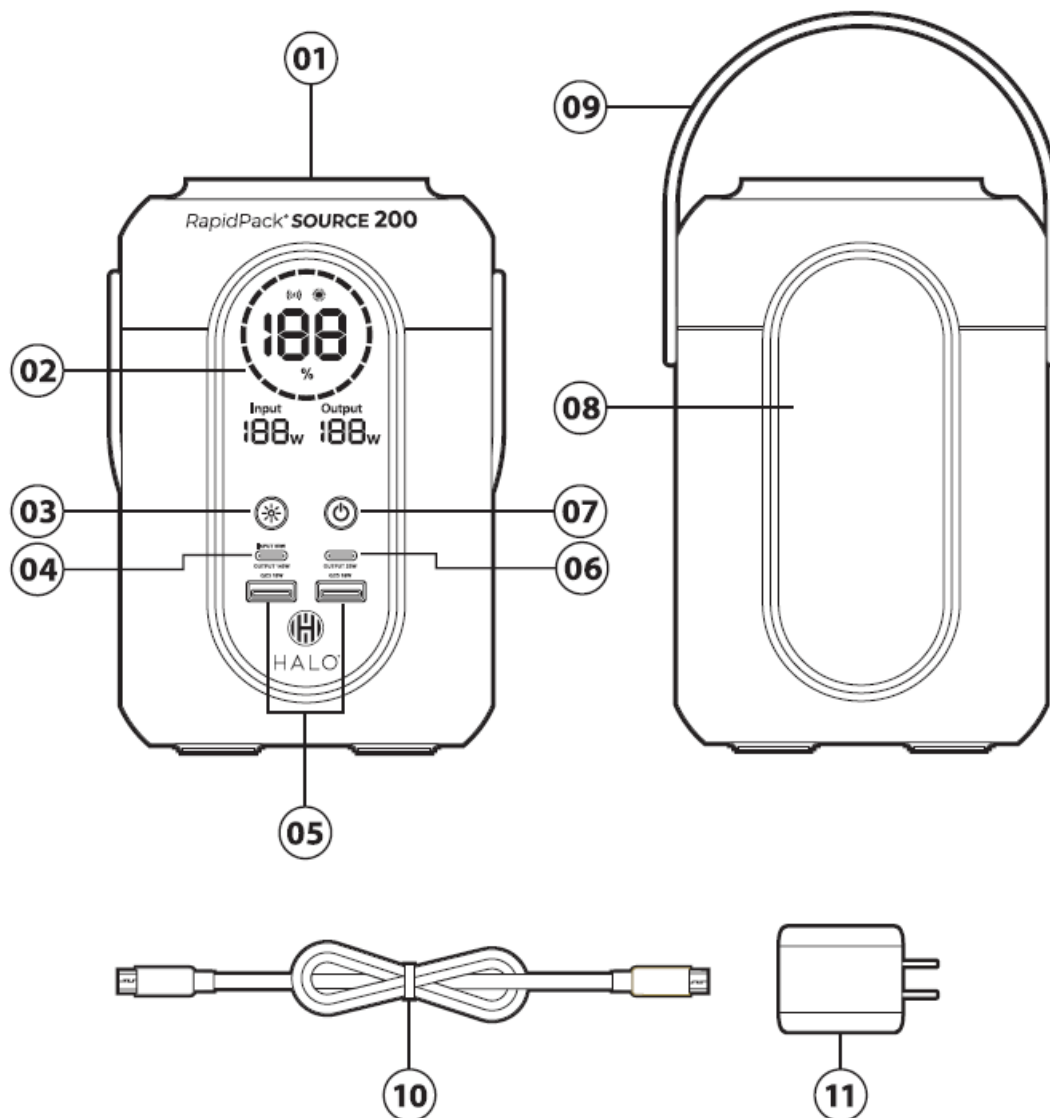

1. Magnetic Wireless 15W Output
2. LCD Display
3. Lantern ON/OFF Button
4. USB-C 60W Input/140W Output
5. USB-A 18W Outputs
6. USB-C 20W Output
7. Power ON/OFF Button
8. 10-Mode LED Lantern
9. Convenient Carrying Handle
10. 40" USB-C to USB-C Cable
11. 20W USB-C Adapter

## LCD DISPLAY

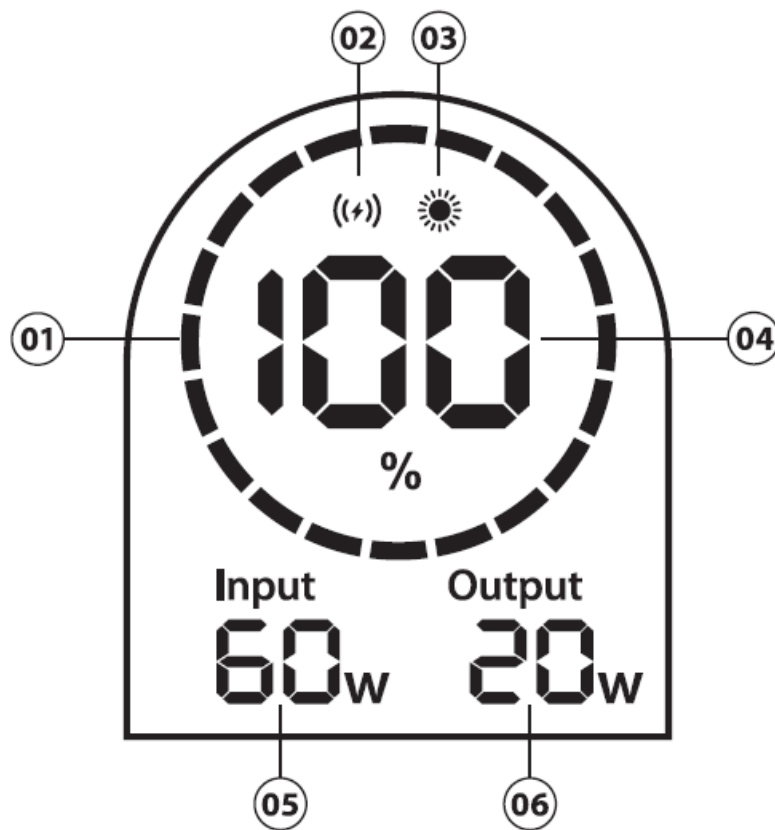 

#### 1. BATTERY FUEL GAUGE INDICATORS

Each bar presents 5% of the charge capacity.

#### 2. WIRELESS CHARGING INDICATOR

Displays when wireless charging is in use...

#### 3. LANTERN INDICATOR

Displays when the lantern is on and in use.

#### 4. BATTERY PERCENTAGE

Displays the current battery level.

#### 5. INPUT INDICATOR

When on, this indicates the unit is plugged in and charging.

#### 6. OUTPUT INDICATOR

When on, this indicates that the unit is charging external devices.

## CHARGE YOUR RAPIDPACK SOURCE 200

### BEFORE YOU GET STARTED

 
Fully charge the Rapid Pack Source 200.

1. Plug the included USB-C to USB-C cable into the USB-C1 Input/Output port.
2. Connect the USB-C to USB-C cable into the included USB-C wall adapter.
3. Plug the USB-C wall adapter into a wall outlet. Charging will begin and the LCD display will display the current battery level.

The included wall adapter is rated for 20W and should fully charge in 11 hours.

**NOTE:** Using a higher wattage adapter (up to 60W) can recharge in as little as 3.5 hrs.\* \*60W adapter not


included.

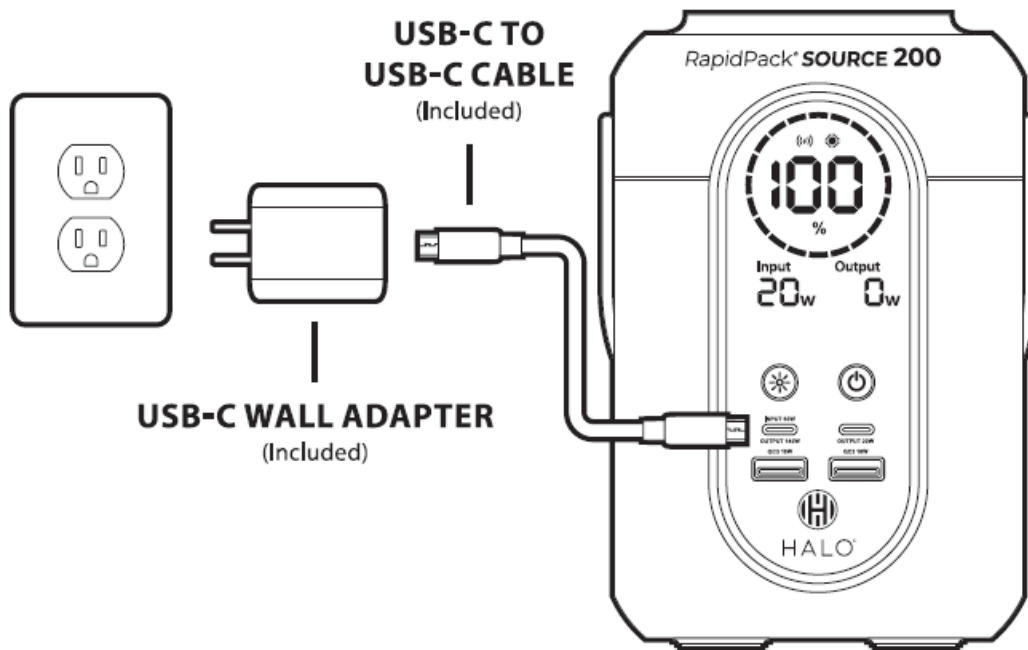

## CHARGING A LAPTOP

1. Press the Power ON/OFF Button.
2. Plug the included USB-C to USB-C cable into the USB-C1 Output port (rated for up to 140W output).
3. Plug the USB-C to USB-C cable to the laptop.

 **NOTE:** The Rapid Pack Source 200 will automatically power off after 30 seconds of inactivity.

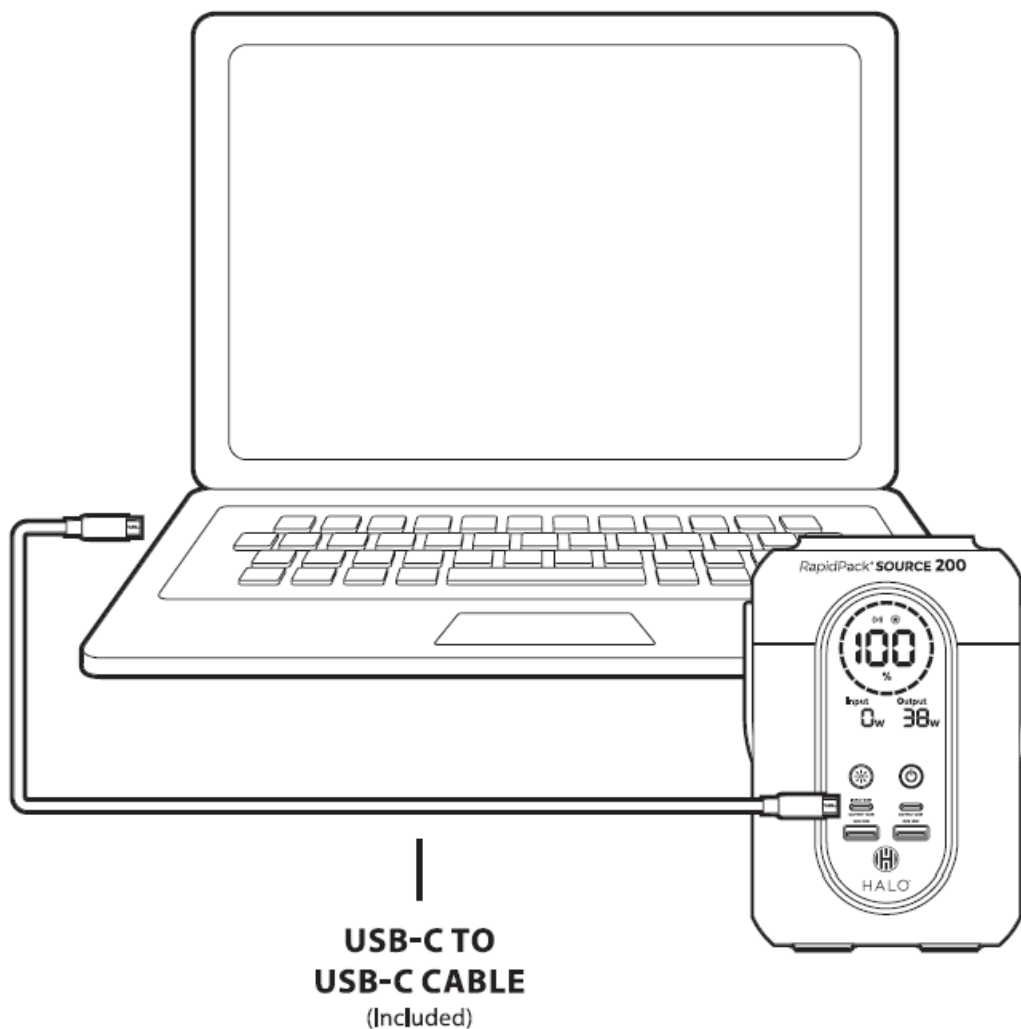


## CHARGE YOUR DEVICES

USB-A output ports are rated for up to 18W.  
USB-C 2 output port is rated for up to 20W.

1. Connect the appropriate cable to your device.
2. Plug the cable into the appropriate USB output port.
3. Press the Power ON/OFF Button to begin charging your device.

 **NOTE:** It is recommended to use charging cables provided by the manufacturer of your devices.

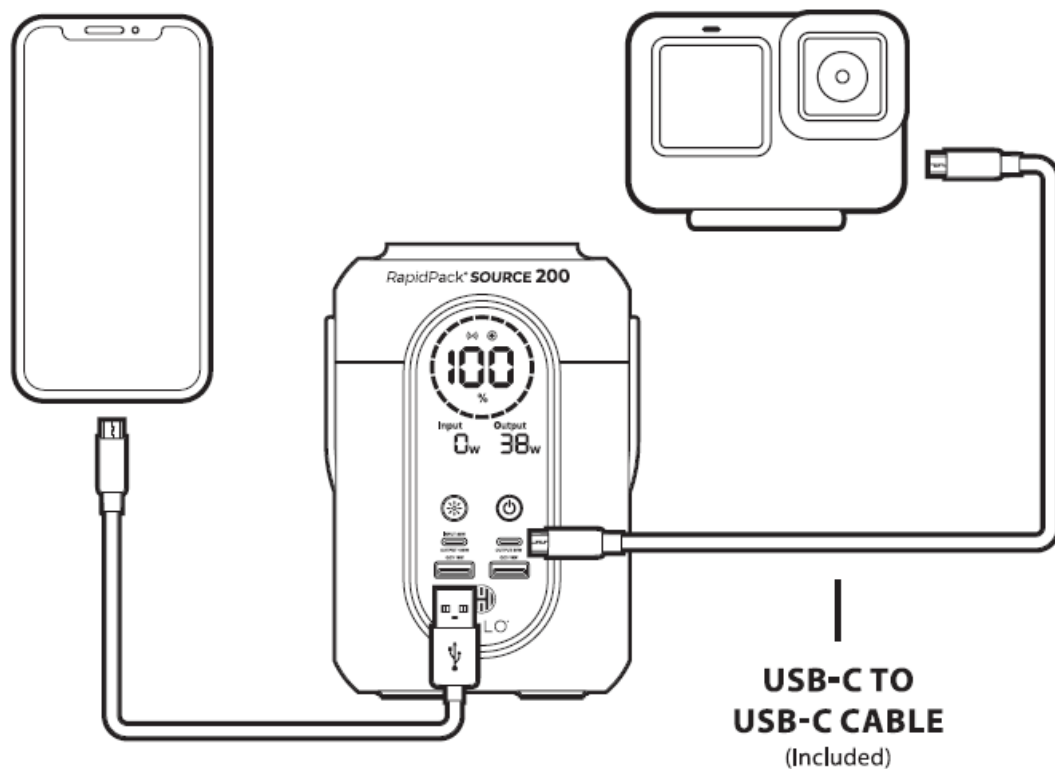

## WIRELESS CHARGING

 
Magnetic wireless charging pad is rated for up to 15W.

1. Place your wireless compatible device onto the wireless charging pad. The magnetic charging pad will help align your device for a proper connection.
2. Press the Power ON/OFF to begin charging. The “wireless” icon will display on the LCD display

**NOTE:** Make sure the device is aligned in the center of the wireless charging surface and that no gaps or obstructions are in between.

- Some phone cases may reduce the strength of the magnet to the point that they will prevent the phone from aligning properly. For best results, use a phone case specifically designed for magnetic accessories or remove your case to use the magnetic wireless charging pad.



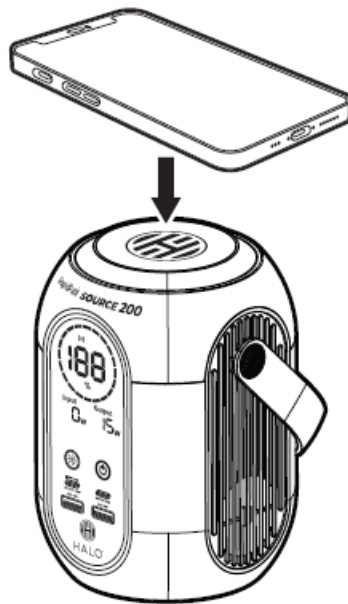


## HOW TO USE THE LANTERN

The LED lantern offers 10 modes with 3 brightness settings for each of its 3 light colors and an Orange SOS mode.

1. Turn on the lantern by pressing the Lantern Control Button. The “light” icon will display on the LCD display.
2. To change your light color, press and hold the Lantern Control Button until the color changes. Hold down again to change to the next color – Warm > Bright White > Orange. OR Short press the Lantern Control Button cycle through the light’s brightness levels – High > Medium > Low.
3. The Orange SOS mode can be accessed by double-pressing the Lantern Control Button. This can be done whether the light is off or in use.

 **NOTE:** The lantern default mode is Warm/Medium.

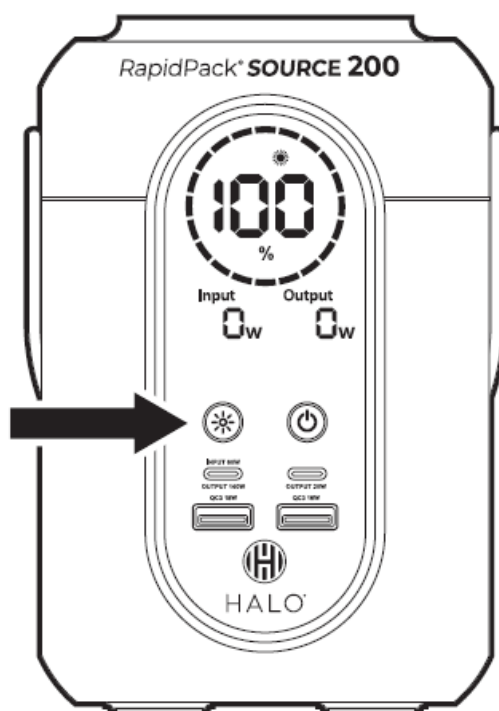

## CAUTION

LOOKING DIRECTLY INTO THE LANTERN CAN RESULT IN MINOR OR MODERATE INJURY.

## TROUBLESHOOTING

FOR ALL QUESTIONS RELATED TO SAFETY, WARRANTY OR EXCHANGE REQUESTS, PLEASE CONTACT US.

1-[800-255-6061](tel:800-255-6061)

ISSUE	POTENTIAL CAUSE	SOLUTION
Unit does not appear to charge items, or charges items slower than expected.	Cable or device may not be compatible, or too many items maybe plugged in at once.	Try charging fewer devices, or using the original cable for that device.
Unit does not appear to charge items (Power ON/OFF Button has no affect or LCD Display does not turn on).	Unit may need to be charged.	Use the supplied cable to connect to a USB power source.
Unit does not appear to recharge (LCD Display still turns on when the Power ON/OFF Button is pressed).	Cable or USB source may not be compatible.	Try charging with the supplied cable or from a different USB source.
When plugging a device in to charge, the unit appears to charge momentarily, then charging stops.	Overload detected or defective device.	Try plugging in fewer devices, a different device, or a different cable.
Unit will not charge or discharge in cold/hot environments.	Temperature protection has been triggered.	Move the unit to a room temperature environment for at least an hour and try again.

## PRODUCT REGISTRATION

Scan the QR code below to register your product.

For product information and videos, visit [HALOPWR.COM](https://www.halopwr.com)



## **PRODUCT REGISTRATION**

### **ACTIVATE YOUR WARRANTY TODAY**

Your HALO Rapid Pack Source 200 has a 90 day warranty from the date of purchase. By registering your warranty, you will help protect your investment and save a record of your purchase with our customer service team.

## **TECHNICAL SPECIFICATIONS**

- USB-C1 Input 60W Max
- USB-C1 Output 140W Max
- USB-C2 Output 20W
- USB-A Outputs 18W
- Wireless Output 15W
- Floodlight Output 50lm
- Battery Capacity 199.8 Wh
- Operating Temperature
- Charge: 32°-95°F (0°-35°C)
- Discharge: 32°-95°F (0°-35°C)
- Dimensions 5.6 x 3.7 x 3.8 in, (142 x 93 x 96mm)
- Weight 2.7 lb. (1240g)

## **FCC NOTE**

### **COMPLIANCE WITH FCC REGULATION**

This device complies with part 15 of the FCC Rules.

#### **Operation is subject to the following two conditions:**

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **FCC RF exposure statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### **ALLIANCE CONSUMER GROUP**

700 Henrietta Creek Rd, Roanoke, Texas 76262

- Toll-Free: 800.255.6061
- [www.acgbrands.com](http://www.acgbrands.com)

### **TRANSPORTING DANGEROUS GOODS**

**NOTE:** Any changes or modifications of this device could void the warranty.



Fully charge before using



Use original or certified charger or cable



Avoid extreme temperature



Avoid dropping



Do not disassemble



It's not waterproof, do not expose to liquids



Dispose of batteries and electronic goods in accordance with local regulations

This jump starter meets all legal requirements for the transportation of dangerous goods. According to international standards, if the jump starter is transported by air, it must be transported in accordance with IATA standard packaging. The instructions and labeling requirements of the International Air Transport Association and related declarations must be completed.

### **Frequently Asked Questions (FAQ)**

• **Q: What is the warranty period for this product?**

A: The warranty period for this product is one year from the date of purchase.


• **Q: Can this product be used outdoors?**

A: This product is designed for indoor use only and should not be exposed to outdoor elements.

• **Q: How do I troubleshoot if the product malfunctions?**

A: Refer to the troubleshooting section in the manual for step-by-step instructions. If issues persist, contact customer support for assistance.

### **Documents / Resources**

	<a href="#">HALO RapidPack SOURCE 200 182Wh Portable Power Station with LCD Display</a> [pdf] User Manual HPB-RP200000F, 2BASY-HPBRP200, RapidPack SOURCE 200 182Wh Portable Power Station with LCD Display, RapidPack SOURCE 200, 182Wh Portable Power Station with LCD Display, Portable Power Station with LCD Display, Power Station with LCD Display, LCD Display
-----------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.