



HALONIX B07NBW5TT6 Smart IOT Fan Kit Instruction Manual

[Home](#) » [HALONIX](#) » HALONIX B07NBW5TT6 Smart IOT Fan Kit Instruction Manual 

Contents

- [1 HALONIX B07NBW5TT6 Smart IOT Fan Kit](#)
- [2 INSTALLATION STEPS OF IOT RECEIVER TO CEILING FAN](#)
- [3 WIRING DIAGRAM](#)
- [4 HALO IOT FAN MOBILE APP INSTALLATION GUIDE](#)
- [5 INSTALLATION INSTRUCTIONS](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



HALONIX B07NBW5TT6 Smart IOT Fan Kit



INSTALLATION STEPS OF IOT RECEIVER TO CEILING FAN

1. Install ceiling fan by assembling blades, canopy, and downrod to ceiling fan motor.
2. Now connect IOT receiver to ceiling fan as per written diagram.
3. Now put the IOT receiver kit safely to the top canopy of a ceiling fan.

Note: Make sure that the TSOP sensor of the IOT receiver remains outside from the top canopy of the ceiling fan for better connectivity.

WIRING DIAGRAM

There are 4 connections that need to be made. Two will be connected to the mains and two will be connected to the fan

1. Line (Red)
2. Neutral (Black)
3. Fan Line (Pink)
4. Fan Neutral (White)



HALO IOT FAN MOBILE APP INSTALLATION GUIDE

1. Go to Google Play on your smartphone and search for “Halo-1OT Fan” and click on install as shown in the image.
2. Once the App is installed, click open.
3. After opening the App, a Sign-In screen will appear. Click on the “Sign-In” button as shown below to proceed.
4. Enter your mobile no. and click on the “Request OTP” button.
5. Enter the OTP received and click on “Sign-In”.
6. To add your smart fan, click on the (+) sign on the top right corner as shown in the image.
7. When you click on the (+)sign to add your device, a new device available will be scanned either by using QR Code or Wi-Fi as shown in the image.
8. To check smart fans available in your home, click on the “Home” tab in the bottom-left corner and to check smart fans available in your rooms, click on the “Room” tab.
9. The device name will appear on the screen as shown in the image.
10. Now the device which was added after scanning QR Code can be connected in 2 ways,
 1. By adding the Wi-Fi name and password of the external source of Wi-Fi signal coming out from the router or hot spot.
 2. By using Wi-Fi direct option shown in the image.
11. To alter changes to the device, click on the connected device. A screen named dashboard will appear as shown below where you can adjust the device settings.
12. Click on the “Schedule” tab to adjust the schedule of the smart fan as shown below. To add one more to the schedule click on the (+) button
13. To adjust the device setting click on the “Setting” tab where you can alter information such as device name, device ID, and Wi-Fi setting as shown.
14. To log out click on the “Profile” tab and click on the “Log Out” button as shown below.


Connect to the power source (230V AC 50Hz)

1. ON/OFF: To switch on the fan and also to select the speed of the fan.
2. Turbo Mode: Instant relief with 10% Higher delivery
3. Nature Mode: Imitate the blow of natural wind based on the strong and soft wind.
4. Sleep Mode: Auto Speed Control for uninterrupted comfortable sleep.
5. Intelligent Mode: The temperature and humidity sensor controls and adjusts the speed according to your room temperature.
6. Built-in Timer: 1, 2,4,6 Hours

INSTALLATION INSTRUCTIONS

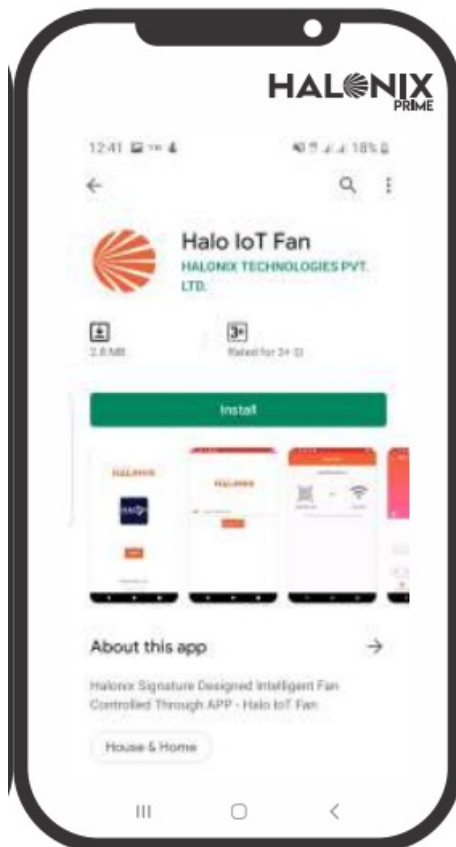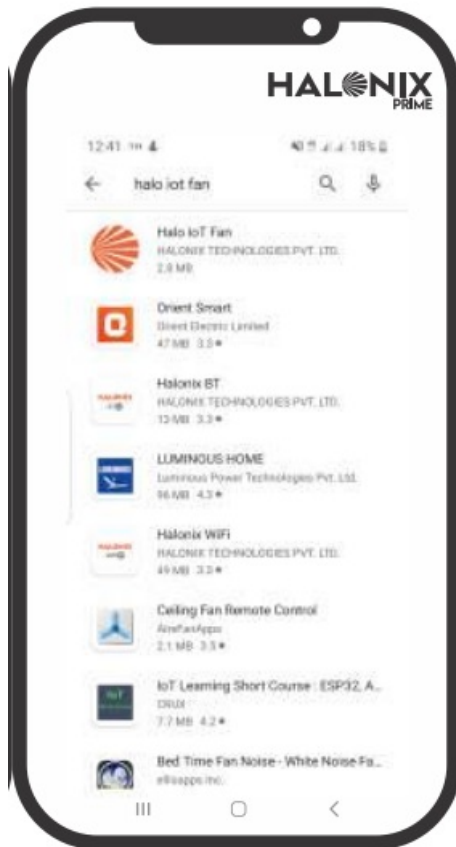



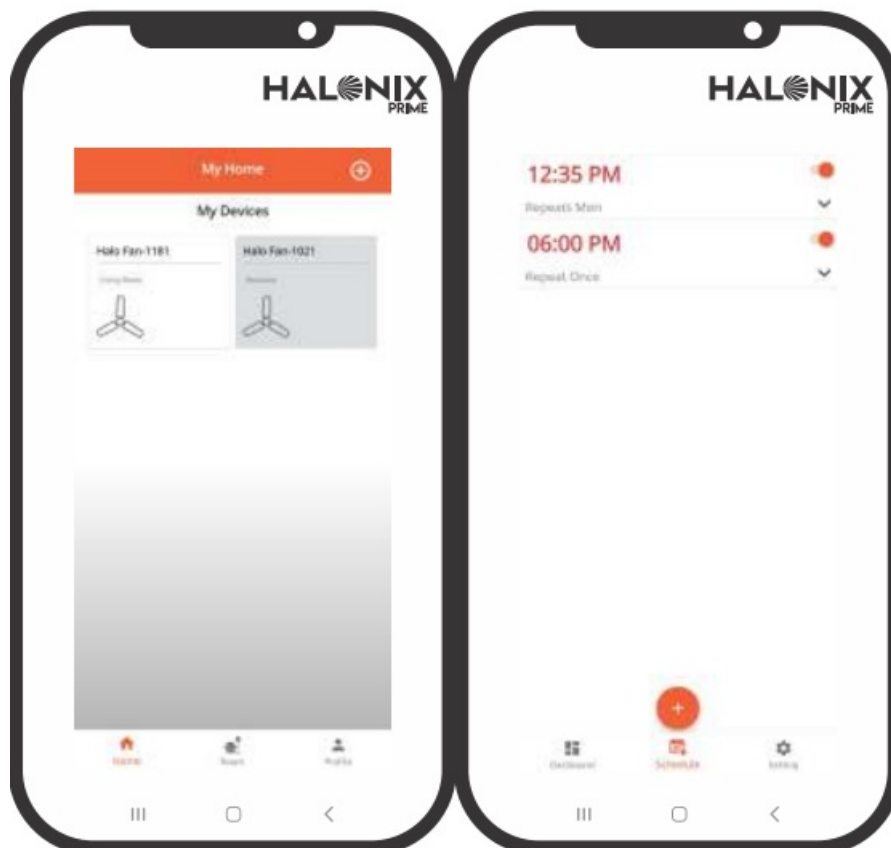



Documents / Resources

	<p>HALONIX B07NBW5TT6 Smart IOT Fan Kit [pdf] Instruction Manual B07NBW5TT6 Smart IOT Fan Kit, B07NBW5TT6, Smart IOT Fan Kit</p>
---	--

[Manuals+.](#)