




hama 00054119 Nano Notebook Combination Lock Instruction Manual


[Home](#) » [Hama](#) » hama 00054119 Nano Notebook Combination Lock Instruction Manual 

hama

00
054119

Nano Notebook Combination Lock

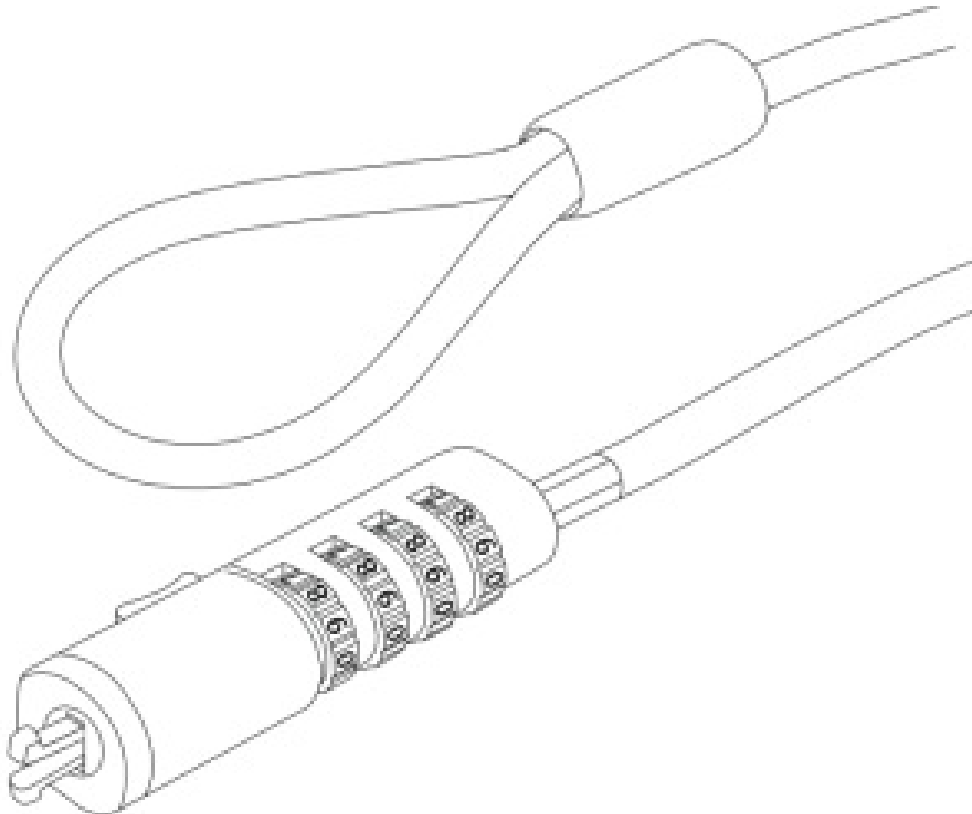

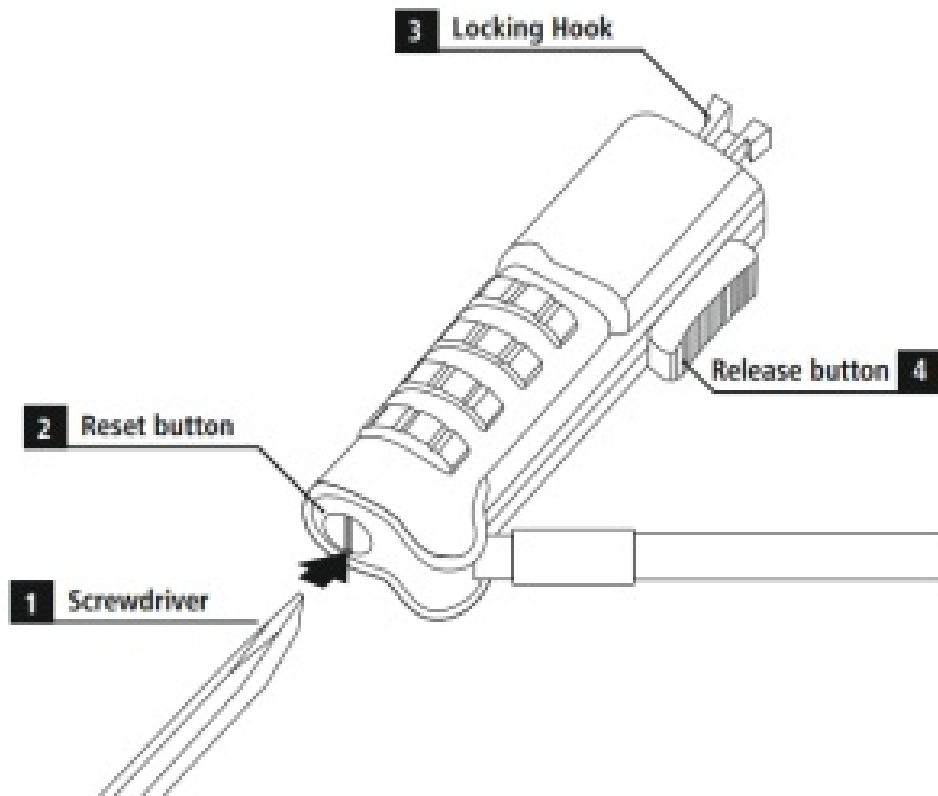

Contents

- [1 Operating instruction](#)
- [2 Setting the combination number](#)
- [3 Connection and locking of Notebook lock](#)
- [4 Warranty Disclaimer](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Operating instruction

Thank you for choosing the Hama product. Take your time and read the following instructions and information completely. Please keep these instructions in a safe place for future reference.

Explanation of Warning Symbols and Notes



Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



Note

This symbol is used to indicate additional information or important notes.

Package Contents

- „Nano“ Notebook Lock
- These operating instructions

Safety notes



Warning

Run the cable of the Notebook lock so that it does not pose a tripping hazard or block emergency exits.

- Keep this product, like all electrical products, out of the reach of children!
- Do not modify the product in any way. Doing so voids the warranty.

Setting the combination number



Note

The combination is factory-set to '0000'.

- With a valid combination selected (factory-set „0000“ or personally stored code), push the reset button down with a screwdriver and turn it 90° to the right.
- Set your new personal combination using the number wheels.
- Now turn the reset button 90° to the left to return it to its starting position.



Note

- We expressly recommend writing the new combination down and storing it in a safe place.
- We accept no liability for any damages resulting from lost or forgotten combinations.

Connection and locking of Notebook lock

- Attach the cable to a fixed object, e.g. foot of the table, cupboard.
- Push the unlocking button on the lockdown and hold the button in this position.
- Insert the lock into the locking slot of the device to be secured.
- Let go of the unlocking button.
- Now adjust the number combination.

Open the Notebook lock

- Enter the correct combination number.
- Push the unlocking button on the lockdown and hold the button in this position.
- Pull the lockout of the locking slot.

Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/ mounting, improper use of the product, or from failure to observe the operating instructions and/or safety notes.

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

Service & Support





www.hama.com



+49 9091 502-0

00054119/07.21

Documents / Resources

	hama 00054119 Nano Notebook Combination Lock [pdf] Instruction Manual 00054119, Nano Notebook Combination Lock
	hama 00054119 Nano Notebook Combination Lock [pdf] Instruction Manual 00054119, Nano Notebook Combination Lock, 00054119 Nano Notebook Combination Lock

References

- hama.com