

 


hama 00139915 X-Pointer Wireless Laser Presenter Instruction Manual

[Home](#) » [Hama](#) » hama 00139915 X-Pointer Wireless Laser Presenter Instruction Manual 

hama

**X-Pointer
Wireless Laser Presenter**

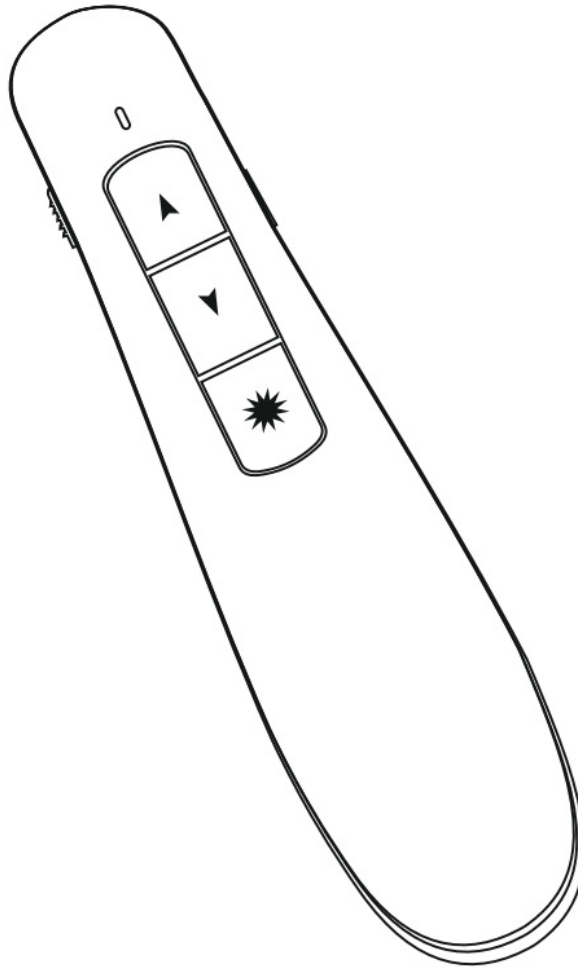

V2 00
139915

Operating Instructions




Contents


- [1 00139915 X-Pointer Wireless Laser Presenter](#)
- [2 Explanation of Warning Symbols and Notes](#)
- [3 Package Contents](#)
- [4 Safety Notes](#)
- [5 Operation](#)
- [6 Controls](#)
- [7 Care and Maintenance](#)
- [8 Warranty Disclaimer](#)
- [9 Technical Data](#)
- [10 Declaration of Conformity](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)


00139915 X-Pointer Wireless Laser Presenter

 Pic. 1

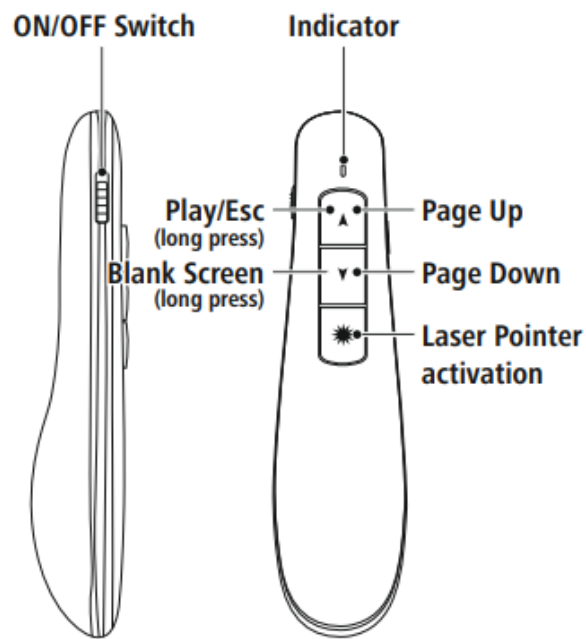

Battery and receiver operation

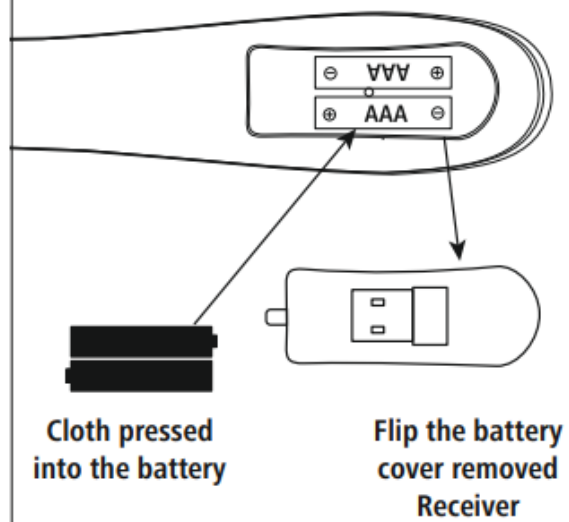 

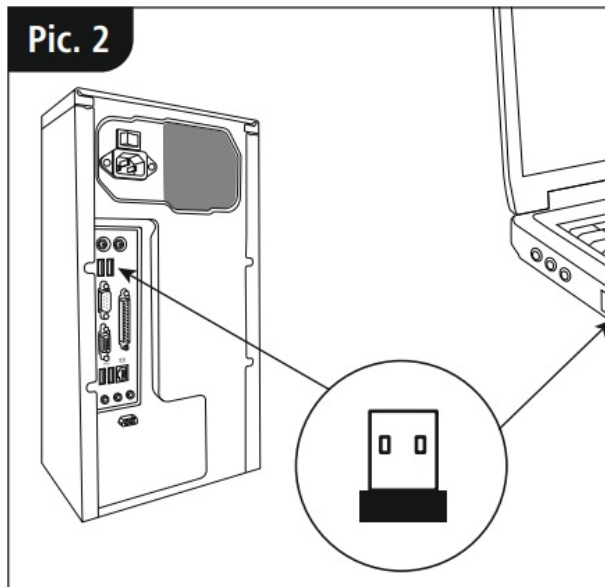 

Thank you for choosing a Hama product.

Take your time and read the following instructions and information completely. Please keep these instructions in a safe place for future reference. If you sell the device please pass these operating instructions on to the new owner.

Explanation of Warning Symbols and Notes

Warning



This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.

Note



This symbol is used to indicate additional information or important notes.

Package Contents

- 'X-Pointer' laser presenter
- 2 AAA batteries
- Set with warning labels
- These operating instructions

Safety Notes

- The product is intended for private, non-commercial use only.
- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not drop the product and do not expose it to any major shocks.
- Do not operate the product outside the power limits given in the specifications.
- Do not continue to operate the device if it becomes visibly damaged.
- **Children** are not permitted to play with the device.
- Dispose of packaging material immediately according to locally applicable regulations.
- Do not modify the product in any way. Doing so voids the warranty.

Warning – Batteries

- When inserting batteries, note the correct polarity (+ and – markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Always choose the battery size and grade that best suits the intended purpose. Keep these operating instructions in a safe place for future reference, as they provide information about choosing the right battery.
- Replace all the batteries in a set at the same time.
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not throw batteries in a fire.
- Keep batteries out of the reach of children.
- Do not allow children to change batteries without supervision.
- Remove the batteries from products that are not being used for an extended period.
- Immediately remove and dispose of dead batteries from the product.
- Before you insert the batteries, clean the battery contacts and the polar contacts.

Warning – Laser




- Do not look directly at the laser beam! Close your eyes and turn your head away if your eyes meet the laser beam.
- Do not shine light at persons using binoculars or telescopes!
- Do not look directly at the laser beam! Do not look directly at the laser beam using optical instruments!
- This product contains a class 1 consumer laser in accordance with EN50689:2021.

Operation

Inserting the battery (Fig. 1)

- Use only AAA batteries (alkaline / zinc carbon).
- To insert or change the battery/batteries, insert the AAA battery/batteries with the correct polarity into the battery compartment.

Operation

- Insert the USB receiver into an unused USB port on your PC.
- Press the laser button  to activate the built-in laser.

Controls

Care and Maintenance

Only clean this product with a slightly damp, lint-free cloth and do not use aggressive cleaning agents. Make sure that water does not get into the product.

Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/ or safety notes.

Technical Data

Connection	2.4 Ghz
Operating range	< 12 m
Laser output power	< 0,39 mW
Wavelength	650nm
Connection	USB Type-A
Power supply	2 AAA batteries
Size	120 x 30 x 22 mm
Weight	Approx. 40g
System requirements	Windows 11 / 10 / 8, MAC OS 10.10 or higher

Declaration of Conformity



Hereby, Hama GmbH & Co KG declares that the radio equipment type [00139915] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.hama.com -> 00139915 -> Downloads.

Frequency band(s)	2403 – 2447 MHz
Maximum radio-frequency power transmitted	-3.88 dBm e.i.r.p

hama

Hama GmbH & Co KG
86652 Monheim / Germany

Service & Support



www.hama.com



+49 9091 502-0




www.hama.com/nep

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

00139915/11.22

Documents / Resources

	<p>hama 00139915 X-Pointer Wireless Laser Presenter [pdf] Instruction Manual 00139915, 00139915 X-Pointer Wireless Laser Presenter, X-Pointer Wireless Laser Presenter, Wireless Laser Presenter, Laser Presenter, Presenter</p>
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- hama.com
- [Recycling Information hama.com](#)