

 


hama 00139917 8-In-1 Wireless Laser Presenter Spot-Pointer Instruction Manual

[Home](#) » [Hama](#) » hama 00139917 8-In-1 Wireless Laser Presenter Spot-Pointer Instruction Manual 

 
 


Wireless Laser Presenter Spot-Pointer 8in1
Wireless Laser Presenter

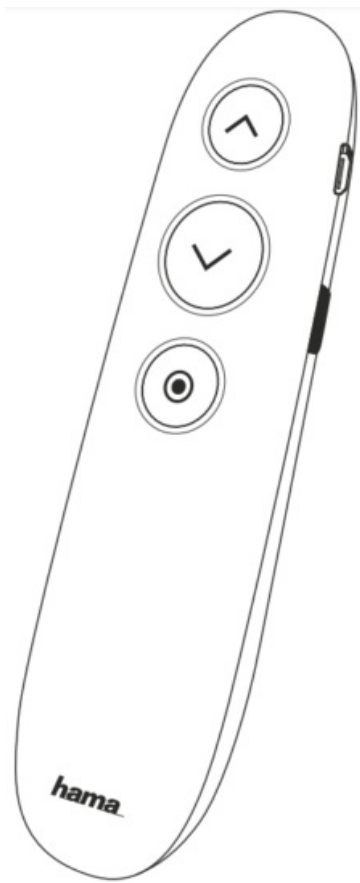

Operating Instructions



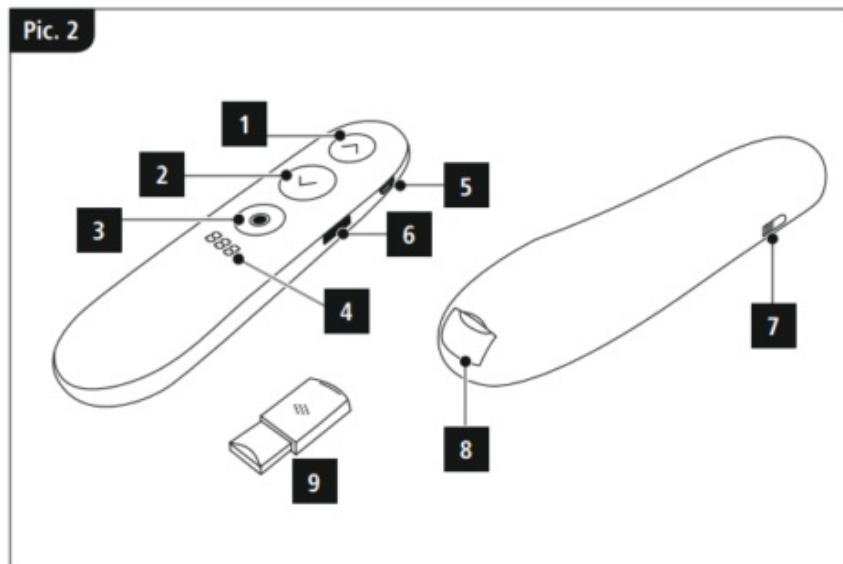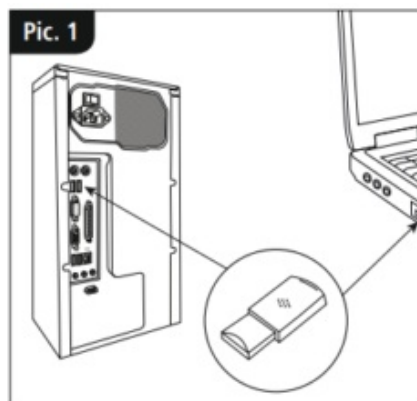



Contents

- 1 Operating instruction
- 2 Explanation of warning symbols and notes
- 3 Package contents
- 4 Safety instructions
- 5 Operation
- 6 Function types
- 7 Software functions
- 8 Care and Maintenance
- 9 Warranty Disclaimer
- 10 Technical data
- 11 Declaration of Conformity
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

Operating instruction

Controls

1.  **“Back”** button, when the button is held: black screen
2.  **“Next”** button, when the button is held: Play / Exit the PowerPoint
3. **Button:** • Activation of hyperlinks -when the button is held: Size change Double-click: change of the function types, see “5. Function types”.

4. Display: Timer display -Remaining presentation time
5. USB connection
6. Timer button: activate and display the preset timer when the button is held: Timer display Double-click: Start the timer
7. On/Off switch
8. Storage compartment for the receiver (dongle)
9. Micro-SD card slot

Thank you for choosing Hama product. Take your time and read the following instructions and information altogether. Please keep these instructions in a safe place for future reference. Please pass these operating instructions on to the new owner if you sell the device.

Explanation of warning symbols and notes



Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



Note

This symbol is used to indicate additional information or important notes.

Package contents

- “Spot-Pointer 8in1” Wireless Digital Presenter
- USB receiver
- Micro-SD card with software
- USB charging cable
- Transport bag
- These operating instructions

Safety instructions

- The product is intended for private, non-commercial use only.
- Do not use the product in the immediate vicinity of heaters, other heat sources, or in direct sunlight.
- As with all electrical products, this device should be kept out of the reach of children.
- Do not drop the product and do not expose it to major shocks.
- Do not operate the product outside the power limits specified in the technical data.
- Do not use the product in areas in which electronic products are not permitted.
- Do not open the device or continue to operate it if it becomes damaged.
- The battery is permanently installed and cannot be removed; dispose of the product as a whole in accordance with the statutory regulations.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately in accordance with the locally applicable regulations.

- Do not modify the product in any way. Doing so voids the warranty.
- Do not incinerate the battery or the product.
- Do not tamper with or damage/heat/disassemble the batteries/rechargeable batteries.

Operation

4.1 Charge the Spotlight Presenter

If the following symbol appears on the display: the battery status is low. Connect the supplied USB charging cable to the micro-USB port (5). Connect the free plug on the USB charging cable to a suitable USB charger. A complete charging cycle takes about 2hours.

 


Warning –rechargeable battery

- Only use suitable charging devices or USB connections to charge the product.
- Do not use defective chargers or USB ports and do not attempt to repair them.
- Avoid storing, charging, and using in extreme temperatures and at extremely low atmospheric pressures (such as at high altitudes).
- Charge regularly (at least quarterly) during periods of prolonged storage.

4.2 Quickstart

1. Plug the receiver into an available USB port on your device.
2. After automatic driver installation, the removable data medium opens.

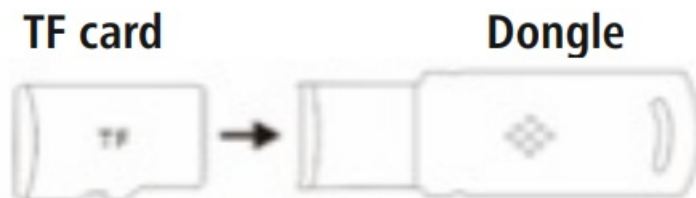

3. Install the required Spot-Pointer software
4. Switch the Presenter on following successful installation (7).

The following symbol now appears in the taskbar:



Note

If the Presenter is switched off, or if the receiver is not connected to the computer, this will be indicated by a colorless symbol.

Function types

1. Spot illumination mode



2. Magnifying glass function

 


3. Digital laser pointer



- Pressing the button (3) twice allows you to toggle between the function types
- By pressing and holding the button (3), you can change the size of the laser pointer, spot, and a magnifying glass with the two function keys (1) and (2)

Software functions

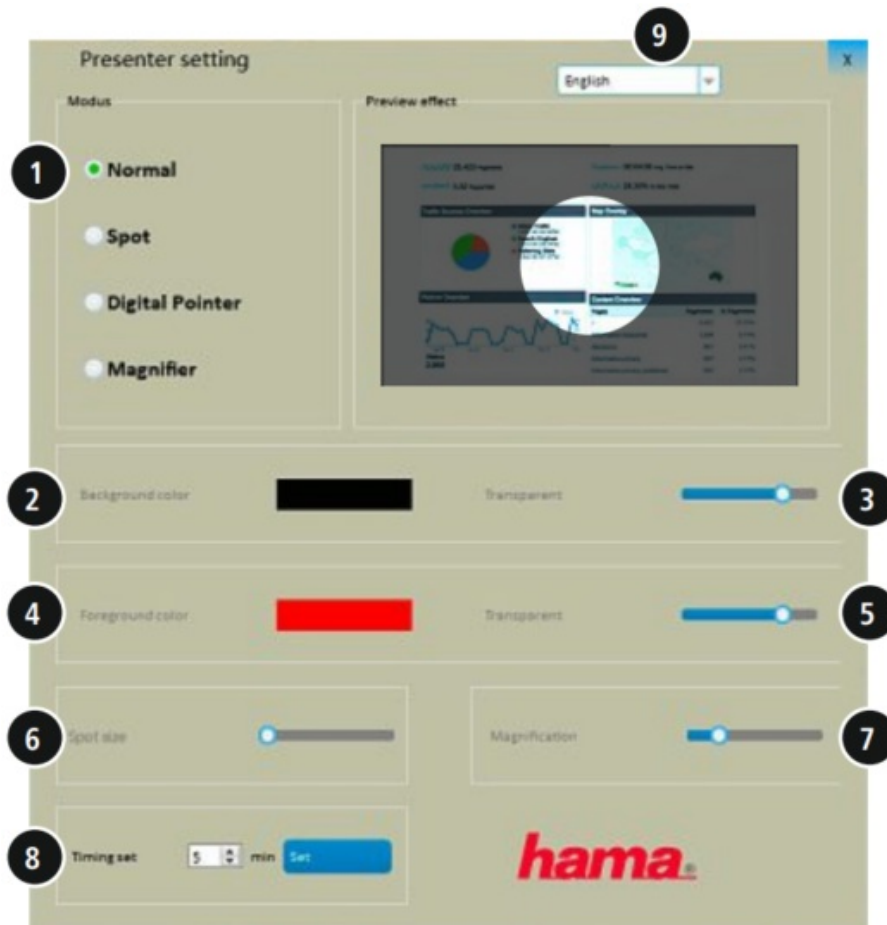

1. Selection to set the function type
2. Individual setting of the background shading when spot illumination mode is active
3. The setting of the background transparency when spot illumination mode is active
4. Individual setting of the color of the digital pointer
5. Setting the transparency of the digital pointer
6. Setting the size of the modes used
7. The setting of the magnifying glass's zoom function
8. Timer: Before the meeting, set a time for the vibration alarm (maximum alarm time: 199 minutes).

The display allows you to keep an eye on the presentation time.

TACTILE FEEDBACK

Receive a silent alarm when using the timer and when the battery level is low.

9. Software-language selection

Care and Maintenance

Clean this product only using a lint-free, slightly damp cloth, and do not use any harsh cleaners. Take care to ensure that no water enters the product.

Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product, or failure to observe the operating instructions and/ or safety

notes.

Technical data

Connection	Wireless, 2.4 GHz connection
Function range	< 20 m*
Battery 0.925Wh	Li-Ion 3.7V 250mAh /0 Battery Use Time (rechargeable): 3 months*
Connection	Micro-USB as a charging function
Power supply	5V= 300mA
Size	130 x 22 x 35 mm
Weight	approx. 40g
System requirements	Windows 10/ 8/ 7Mac OS X 10 or higher Restricted functionality (no software): Chrome OSTm, Linux, AndroidT M

*Depending on the conditions of use

Declaration of Conformity



Hereby, Hama GmbH & CoKG declares that the radio equipment type [00139917] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.hama.com -> 00139917 -> Downloads.

Frequency band(s)	2402 –2480 MHz
Maximum radio-frequency power transmitted	-1.8 dBm e.i.r.p.

hama®
THE SMART SOLUTION

Hama GmbH & Co KG
86652 Monheim /Germany

Service & Support



www.hama.com



+49 9091 502-0

 


www.hama.com/nep

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

00139917/12.20

Documents / Resources

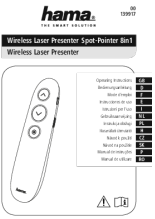	<p>hama 00139917 8-In-1 Wireless Laser Presenter Spot-Pointer [pdf] Instruction Manual 00139917, 8-In-1 Wireless Laser Presenter Spot-Pointer, 00139917 8-In-1 Wireless Laser Presenter Spot-Pointer</p>
--	--

References

- hama.com
- [Recycling Information hama.com](#)