



hama 00139919 Spot Pointer V2 Presenter Instruction Manual

[Home](#) » [Hama](#) » hama 00139919 Spot Pointer V2 Presenter Instruction Manual 

hama

00

139919

WirelessLaser Presenter
Spot-Pointer V2

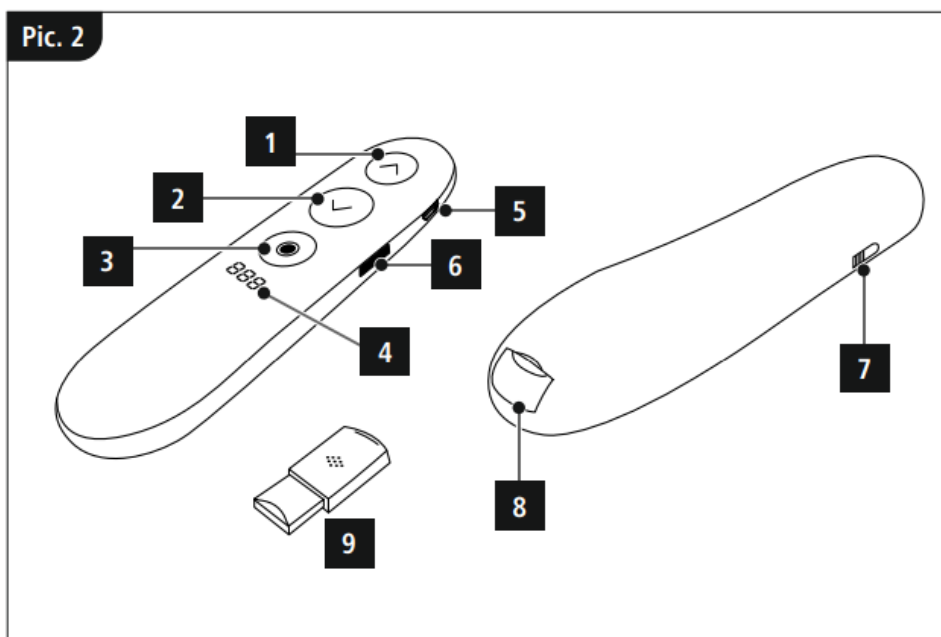 
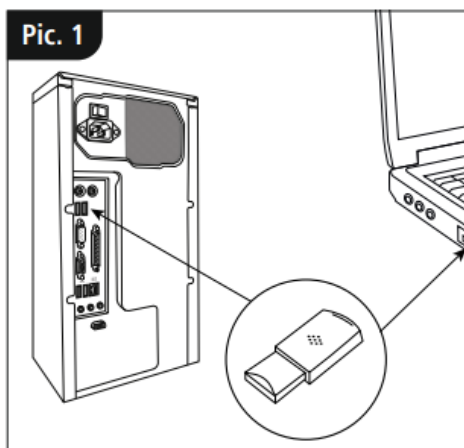 


  **Operating Instructions**


Contents



- 1 00139919 Spot Pointer V2 Presenter
- 2 Controls
- 3 Explanation of warning symbols and notes
- 4 Explanation of product marking symbols
- 5 Package contents
- 6 Safety instructions
- 7 Operation
- 8 Function types
- 9 Software functions
- 10 Care and Maintenance
- 11 Warranty Disclaimer
- 12 Technical data
- 13 Declaration of Conformity
- 14 Documents / Resources
 - 14.1 References

00139919 Spot Pointer V2 Presenter



Controls

1.  "Back" button, when the button is held: black screen

2.  “Next” button, when the button is held: Play/Exit the PowerPoint
3. Button : Activation of hyperlinks - when the button is held: Size change
Double-click: change of the function types, see “6. Function types”.
4. Display: Timer display - Remaining presentation time



5. USB connection
6. Timer button: activate and display the preset timer - when the button is held: Timer display
Double-click: Start timer
7. On/Off switch
8. Storage compartment for receiver (dongle)
9. Micro-SD card slot

Thank you for choosing a Hamaproduct. Take your time and read the following instructions and information completely. Please keep these instructions in a safe place for future reference. If you sell the device, please pass these operating instructions on to the new owner.

Explanation of warning symbols and notes

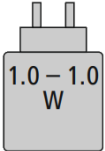
Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.

Note

This symbol is used to indicate additional information or important notes.

Explanation of product marking symbols

	The power delivered by the charger must be between min 1.0 Watts required by the radio equipment, and max 1.0 Watts in order to achieve the maximum charging speed.
	The standardised USB interface means that a charger with a higher output power can also be used.

Package contents

- “Spot-Pointer V2” Wireless Digital Presenter
- USB receiver
- Micro-SD card with software
- USB charging cable
- Transport bag
- These operating instructions

Safety instructions

- The product is intended for private, non-commercial use only.
- Do not use the product in the immediate vicinity of heaters, other heat sources or in direct sunlight.
- As with all electrical products, this device should be kept out of the reach of children.

- Do not drop the product and do not expose it to any major shocks.
- Do not operate the product outside the power limits specified in the technical data.
- Do not use the product in areas in which electronic products are not permitted.
- Do not open the device or continue to operate it if it becomes damaged.
- The battery is permanently installed and cannot be removed; dispose of the product as a whole in accordance with the statutory regulations.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately in accordance with the locally applicable regulations.
- Do not modify the product in any way. Doing so voids the warranty.
- Do not incinerate the battery or the product.
- Do not tamper with or damage/heat/disassemble the batteries/ rechargeable batteries.
- Use the product for its intended purpose only.
- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Use the item only in moderate climatic conditions.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.

Operation

5.1 Charge the Spotlight Presenter

If the following symbol appears on the display: “LO”

the battery status is low. Connect the supplied USB charging cable to the USB-C port (5). Connect the free plug on the USB charging cable to a suitable USB charger.

A complete charging cycle takes about 2 hours.

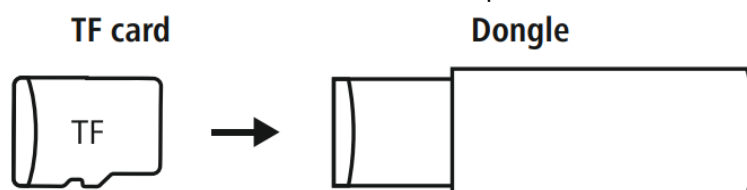 


Warning –rechargeable battery

- Only use suitable charging devices or USB connections to charge the product.
- Do not use defective chargers or USB ports and do not attempt to repair them.
- Avoid storing, charging and using in extreme temperatures and at extremely low atmospheric pressures (such as at high altitudes).
- Charge regularly (at least quarterly) during periods of prolonged storage.
- Do not overcharge the product or allow the battery to completely discharge.

5.2 Quick start

1. Plug the receiver into an available USB port on your device.
2. After automatic driver installation, the removable data medium opens



3. Install the required Spot-Pointer software
4. Switch the Presenter on following successful installation (7).

The following symbol now appears in the task bar:

hama

Note

If the Presenter is switched off, or if the receiver is not connected to the computer, this will be indicated by a colourless symbol.

Function types

1. Spot illumination mode



2. Magnifying glass function

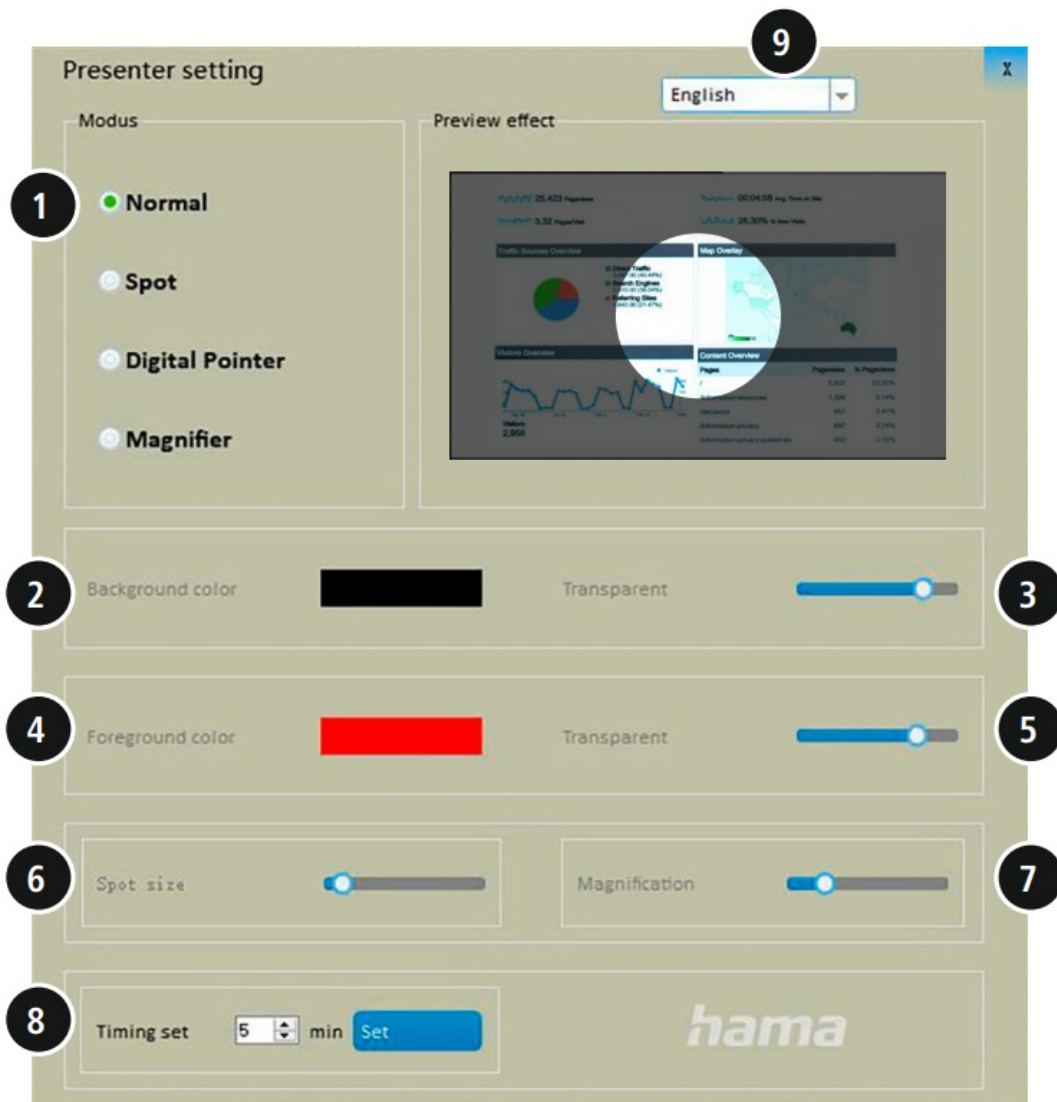 


3. Digital laser pointer



- Pressing the button (3) twice allows you to toggle between the function types
- By pressing and holding the button (3), you can change the size of the laser pointer, spot and magnifying glass with the two function keys (1) and (2)

Software functions



1. Selection to set the function type
2. Individual setting of the background shading when spot illumination mode is active
3. Setting of the background transparency when spot illumination mode is active
4. Individual setting of the colour of the digital pointer
5. Setting of the transparency of the digital pointer
6. Setting of the size of the modes used
7. Setting of the magnifying glass's zoom function
8. Timer: Before the meeting, set a time for the vibrational alarm (maximum alarm time: 199 minutes). The display allows you to keep an eye on the presentation time.

TACTILE FEEDBACK

Receive a silent alarm when using the timer and when the battery level is low.

9. Software-language selection

Care and Maintenance

Clean this product only using a lint-free, slightly damp cloth and do not use any harsh cleaners. Take care to ensure that no water enters the product.

Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes.

Technical data

Connection	Wireless, 2.4 GHz connection
Function range	<20m*
Battery	Li-Ion 3.7V 250mAh / 0.925Wh Battery Use Time (rechargeable): 3 months*
Connection	USB-C as a charging function
Power supply	5V --- 240mA
Size	130 x 22 x 35mm
Weight	approx. 40g
System requirements	Windows 10 / 8/7 Mac OS X 10 or higher Restricted functionality (no software): Chrome OS™, Linux®, Android™

*Depending on the conditions of use

Declaration of Conformity

CE Hereby, Hama GmbH & Co KG declares that the radio equipment type [00139919] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://uk.hama.com> ➔ **00139919** ➔ Downloads

Frequency band(s)	2402 – 2480 MHz
Maximum radio-frequency power transmitted	-1.8 dBm e.i.r.p.


hama

Hama GmbH & Co KG

86652 Monheim / Germany

Service & Support

 www.hama.com

 +49 9091 502-0



www.hama.com/nep


All listed brands are trademarks of the corresponding companies.

Errors and omissions excepted, and subject to technical changes.

Our general terms of delivery and payment are applied.

00139919/03.24

Documents / Resources

	<p>hama 00139919 Spot Pointer V2 Presenter [pdf] Instruction Manual 00139919 Spot Pointer V2 Presenter, 00139919, Spot Pointer V2 Presenter, Pointer V2 Presenter, V2 Presenter, Presenter</p>
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [h hama.com](#)
- [h Recycling Information hama.com](#)
- [h Offizieller Hama Onlineshop | Hama DE](#)
- [h Accueil | Hama FR](#)
- [h Home | Hama](#)
- [h Home](#)
- [h Home](#)
- [h Home](#)
- [h Kategorie | HAMA B2C - foto, video, elektro, brašny a príslušenství](#)
- [h Műszaki és Elektronika területén az okos megoldás! | Hama](#)
- [h Kategória | HAMA - foto, video, elektro, tašky a príslušenstvo](#)
- [User Manual](#)

Manuals+, [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.