



hama 00178116 Bicycle Chain Lock with Illuminated Key Instruction Manual

[Home](#) » [Hama](#) » hama 00178116 Bicycle Chain Lock with Illuminated Key Instruction Manual 

hama

00178116 Bicycle Chain Lock with Illuminated Key Instruction Manual

Contents

- [1 Explanation of warning symbols and notes](#)
- [2 Package contents](#)
- [3 Safety instructions](#)
- [4 Changing the battery](#)
- [5 Warranty Disclaimer](#)
- [6 Technical data](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Explanation of warning symbols and notes



Warning


This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



Note

This symbol is used to indicate additional information or important notes.

Package contents

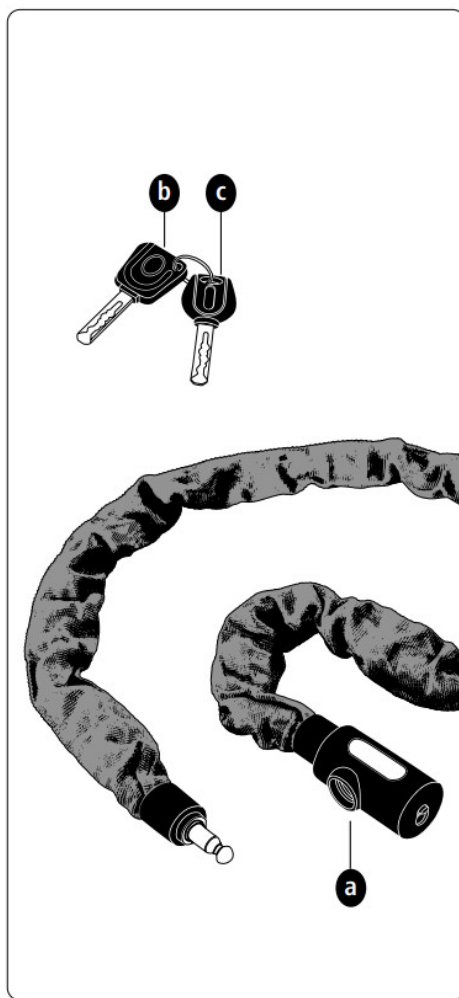

- a. 1 bike chain lock
- b. 1 LED illuminated key incl. 1 button cell CR1620
- c. 1 key

Safety instructions

- Clean the illuminated key with a damp cloth. Do NOT immerse the illuminated key in water, and do not use any chemical cleaning or scouring agents.
- Keep the illuminated key away from objects with sharp points (e.g. toys, writing implements, etc.) so that the illumination function is not accidentally switched on, using up power.
- This product is intended for private, non-commercial use only.
- Use the product only for the intended purpose.
- Protect the product from dirt, moisture, and overheating, and use it in dry environments only.
- Do not use the product in the immediate vicinity of heaters, other heat sources, or in direct sunlight.
- Do not drop the product and do not expose it to any major shocks.
- Do not modify the product in any way. Doing so voids the warranty.
- Do not open the device or continue to operate it if it becomes damaged.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- As with all electrical products, this device should be kept out of the reach of children.
- Only use the article under moderate climatic conditions.
- Do not use the product in areas in which electronic products are not permitted.
- Dispose of packaging material immediately in accordance with the locally applicable regulations.

- Do not operate the product outside the power limits given in the specifications.



Warning – Batteries

- When inserting batteries, note the correct polarity (+ and – markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polarity contacts.
- Do not allow children to change batteries without supervision.
- Do not mix old and new batteries, or batteries of different types or from different manufacturers.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not burn batteries.
- Keep batteries out of the reach of children.
- Never open, damage, or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Remove spent batteries from the product and dispose of them without delay.
- Avoid storing, charging, and using in extreme temperatures and at extremely low atmospheric pressures (such as at high altitudes).

Warning – Button cells

- Do not swallow the battery. Burning hazard from hazardous substances.
- This product contains button cells. If the button cell is swallowed, serious internal burns can occur within 2 hours and ultimately lead to death.
- Keep new and used batteries out of the reach of children.
- If the battery compartment will no longer close securely, stop using the product and keep it away from children.
- If you suspect that batteries have been swallowed or are in any part of the body, seek medical attention immediately.

Changing the battery

Replace the battery when the LED key's light begins to fade:

- pull the battery compartment out.
- Remove the spent battery and replace it with a new battery of type CR1620, observing the correct polarity as indicated in the battery compartment.
- Slide the battery compartment back in.

Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product, or failure to observe the operating instructions and/or safety notes.

Technical data



Colour	Black
Material	Plastic, fabric, steel
Weight	825g
Diameter of chain link	6 mm
Length	120 cm
Power supply	1 CR1620 button cell

All listed brands are trademarks of the corresponding companies.
Errors and omissions excepted, and subject to technical changes.
Our general terms of delivery and payment are applied.



Service&Support



hama
HamaGmbH&CoKG
86652Monheim/Germany

Documents / Resources

	hama 00178116 Bicycle Chain Lock with Illuminated Key [pdf] Instruction Manual 00178116 Bicycle Chain Lock with Illuminated Key, 00178116, Bicycle Chain Lock with Illuminated Key, Bicycle Chain Lock, Chain Lock, Lock
	hama 00178116 Bicycle Chain Lock with Illuminated Key [pdf] Instruction Manual 00178116 Bicycle Chain Lock with Illuminated Key, 00178116, Bicycle Chain Lock with Illuminated Key, Chain Lock with Illuminated Key, Lock with Illuminated Key, Illuminated Key, Key

References

- [h hama.com](https://hama.com)

Manuals+.