



hama 00186317 Radio Controlled Alarm Clock Instruction Manual

[Home](#) » [Hama](#) » hama 00186317 Radio Controlled Alarm Clock Instruction Manual 

Contents

- [1 hama 00186317 Radio Controlled Alarm Clock](#)
- [2 Explanation of Warning Symbols and Notes](#)
- [3 Package Contents](#)
- [4 Safety Instructions](#)
- [5 Getting Started](#)
- [6 Operation](#)
- [7 Alarm](#)
- [8 RESET function](#)
- [9 Care and Maintenance](#)
- [10 Warranty Disclaimer](#)
- [11 Technical Data](#)
- [12 Declaration of Conformity](#)
- [13 Service & Support](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)

hama

hama 00186317 Radio Controlled Alarm Clock



Explanation of Warning Symbols and Notes

Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.

Note

This symbol is used to indicate additional information or important notes

Package Contents

- „Elegance Pro“ radio-controlled alarm clock
- 1 AA battery
- These operating instructions

Safety Instructions

- The product is intended for private, non-commercial use only.
- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not place the product near interference fields, metal frames, computers, TVs, etc. Electronic devices and window frames can negatively affect the product's functionality.
- Do not drop the product and do not expose it to any major shocks.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately according to locally applicable regulations.
- Use the product for its intended purpose only.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Do not operate the product outside the power limits given in the specifications.

- Do not open the device or continue to operate it if it becomes damaged.
- Keep this product, as all electrical products, out of the reach of children!
- Use the item only in moderate climatic conditions.

Warning – Batteries

- When inserting batteries, note the correct polarity (+ and – markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polar contacts.
- Do not allow children to change batteries without supervision.
- Do not mix old and new batteries or batteries of a different type or make.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not throw batteries in a fire.
- Keep batteries out of the reach of children.
- Never open, damage or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Immediately remove and dispose of dead batteries from the product.
- Avoid storing, charging or using the device in extreme temperatures and extremely low atmospheric pressure (for example, at high altitudes).

Getting Started

Open the battery compartment cover, remove the contact breaker and then close the battery compartment cover again.

Operation

Automatic time setting using the DCF signal

- Once you have removed the contact breaker, an acoustic signal sounds and the alarm clock automatically starts searching for a DCF signal.
- After approx. 5-10 minutes (depending on how quickly the radio signal was received), the hands will set themselves to the correct time.

Setting the time manually

- If the correct time has not been set after approx. 10 minutes, this means the clock could not find a DCF signal.
- Press and hold the M.SET button to manually set the correct time. Release the M.SET button once you have reached the required time.
- The clock automatically continues to search for the DCF signal on a daily basis. If the signal is received successfully, the manually set time is overwritten.

- You may need to change the installation location and avoid areas with possible sources of interference (cordless and mobile telephones, wireless speakers, etc.).

Starting manual reception

- Once the clock is running, press the REC button for 3 seconds. This will set the hands to the 12:00 position. Now the clock starts searching for the DCF signal.
- If no signal has been received, the clock will show the time previously saved

Alarm

Setting the alarm

- Move the setting wheel on the back of the alarm clock to set the required alarm time.
- To activate/deactivate the alarm, move the slide switch to the ON or OFF position.
- The status indicator next to the third digit is red when the alarm is activated and green when it is deactivated.

Stopping the alarm/snooze function

- If the alarm is activated, it is triggered at the set time and an alarm signal sounds for two minutes with increasing volume. The alarm automatically stops after this time and is then triggered again at the set alarm time.
- To stop the alarm early, move the slide switch to the OFF position.
- Move the slide switch back to the ON position to activate the alarm for the set alarm time.

Note – Snooze function

- While the alarm signal is sounding, press the SNOOZE/LIGHT button to activate the snooze function. The alarm signal will be stopped for 5 minutes, after which it will sound again.
- The snooze function can be activated six consecutive times.

Backlight

If you press the SNOOZE/LIGHT button, the clock face will light up for approx. 5 seconds.

RESET function

- If, for whatever reason, the clock has not been set correctly, you can reset it.
- Use a metal object (such as a needle) to short-circuit the clock by means of the 'RESET' button on the rear side. All hands will move to the 12:00 position.
- After approx. 5-10 minutes (depending on how quickly the signal was received), the hands will automatically set themselves to the correct time.

Care and Maintenance

Only clean this product with a slightly moist, lint-free cloth, and do not use aggressive cleaning agents. Make sure

that water does not get into the product.

Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes

Technical Data

- Power supply 1.5 V, 1 AA battery
- Frequency band(s) 77,5 kHz

Declaration of Conformity

Hereby, Hama GmbH & Co KG declares that the radio equipment type [00113970, 00113972, 00113979, 00186317, 00186318] is in compliance with Directive 2014/53/ EU. The full text of the EU declaration of conformity is available at the following internet address: www.hama.com -> 00113970, 00113972, 00113979, 00186317, 00186318 ->Downloads.

Service & Support

- www.hama.com
- +49 9091 502-0

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

Documents / Resources

	hama 00186317 Radio Controlled Alarm Clock [pdf] Instruction Manual 00186317, 00186318, 00113970, Radio Controlled Alarm Clock, Alarm Clock, Radio Controlled Clock, Clock
--	---

References

- [h hama.com](http://h.hama.com)