




## hama 00186442 Classico Alarm Clock Instruction Manual

[Home](#) » [Hama](#) » hama 00186442 Classico Alarm Clock Instruction Manual 

# ***hama***


00186442 Classico Alarm Clock  
Instruction Manual

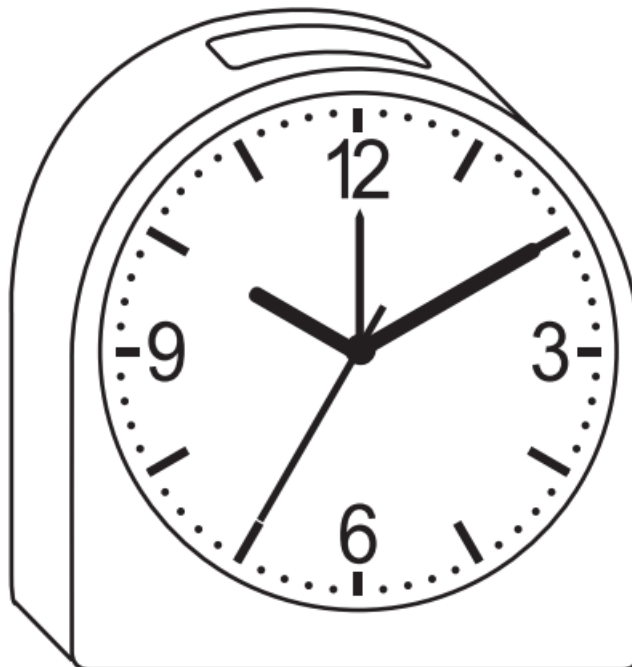

Alarm Clock Wecker  
00 186442



Classico

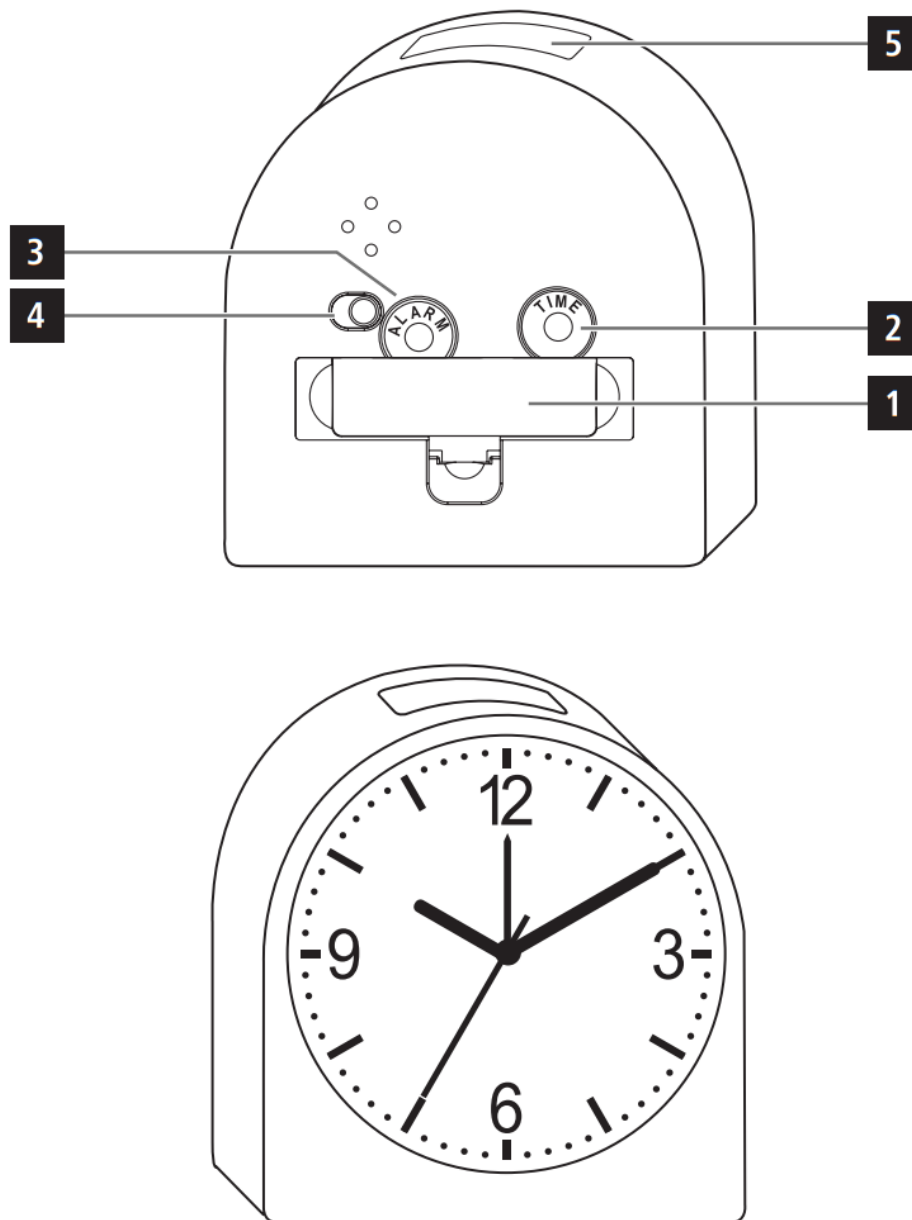

## Contents

- [1 Operating instruction](#)
- [2 Explanation of warning symbols and notes](#)
- [3 Package contents](#)
- [4 Safety instructions](#)
- [5 Getting started](#)
- [6 Operation](#)
- [7 Care and maintenance](#)
- [8 Warranty Disclaimer](#)
- [9 Technical data](#)
- [10 Recycling information](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)

## Operating instruction

### Controls and displays

1. Battery compartment cover
2. Time setting wheel
3. Alarm time setting wheel
4. Slider switch (for activation/deactivation of the alarm function)
5. Light button

## Explanation of warning symbols and notes



**Warning** This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



**Note** This symbol is used to indicate additional information or important notes.

## Package contents

- „Classico” alarm clock
- 1 x AA battery
- These operating instructions 3.

## Safety instructions

- Protect the product from dirt, moisture, and overheating and use it in dry environments only.
- Do not use the product in areas in which electronic products are not permitted.
- Do not drop the product and do not expose it to any major shocks.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately in accordance with the locally applicable regulations.
- This product is intended for private, noncommercial use only.
- Use the product only for the intended purpose.
- Do not use the product in the immediate vicinity of heaters, other heat sources or in direct sunlight.
- Do not operate the product outside the power limits specified in the technical data.
- Do not open the device or continue to operate it if it becomes damaged.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- As with all electrical products, this device should be kept out of the reach of children.
- Only use the article under moderate climatic conditions.



### Warning – Batteries

- When inserting batteries, note the correct polarity (+ and – markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.



### Warning – Batteries

- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polarity contacts.
- Do not allow children to change batteries without supervision.
- Do not mix old and new batteries, batteries of different types, or from different manufacturers.
- Remove batteries from products that are not going to be used for a prolonged period of time (unless they are being kept on standby ready for an emergency).
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not burn batteries.
- Keep batteries out of the reach of children.
- Never open, damage or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Remove spent batteries from the product and dispose of them without delay.
- Avoid storing, charging and using in extreme temperatures and at extremely low atmospheric pressures (such as at high altitudes).

## **Getting started**

Remove the battery already inserted and remove the safety foil if necessary, along with the contact interrupter, and insert the battery paying attention to match the polarities correctly.

## **Operation**

Press the LIGHT button (5) to switch the display on.

### **5.1 Setting the time**

- Turn the setting wheel (2) on the back to set the current time (hours/minutes).
- To set the seconds, remove the battery to stop the seconds. Insert the battery again to restart the second hand at the correct second.

### **5.2 Setting the alarm**

- Turn the setting wheel (3) on the back of the alarm clock to set the desired alarm time.
- Move the slider switch (4) to the ON or OFF position to activate/deactivate the alarm.


## **Care and maintenance**

Only clean this product with a slightly damp, lint-free cloth, and do not use aggressive cleaning agents. Ensure that no water is able to enter the product.

## **Warranty Disclaimer**

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or failure to observe the operating instructions and/or safety notes.

Technical data

	"Classico" alarm clock
Power supply	1.5 V 1 x AA battery

Recycling information

Note on environmental protection:



Following the implementation of European Directive 2012/19/ EU and 2006/66/EU into the national legal systems, the following applies: Electrical and electronic devices, as well as batteries, must not be disposed of with household waste. Consumers are obliged by law to return electrical and electronic devices as well as batteries to the designated public collection points or to the point of sale at the end of their service lives. Detailed information on this topic is defined in the national laws of the respective country. The presence of the above symbol on the product, operating instructions or package indicates that the product is subject to these regulations. By recycling, reusing the materials or other forms of utilizing old devices/ batteries, you are making an important contribution to protecting our environment.



Hama GmbH & Co KG  
86652 Monheim / Germany  
Service & Support



[www.hama.com](http://www.hama.com)




+49 9091 502-0



All listed brands are trademarks of the corresponding companies.  
Errors and omissions excepted, and subject to technical changes.  
Our general terms of delivery and payment are applied.  
00186442/07.21

Documents / Resources

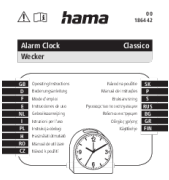	<a href="#">hama 00186442 Classico Alarm Clock [pdf] Instruction Manual</a> 00186442, Classico Alarm Clock, 00186442 Classico Alarm Clock
---	--

References

-  [hama.com](http://hama.com)

