



## hama 00186448 Radio Controlled Alarm Clock Instruction Manual

[Home](#) » [Hama](#) » hama 00186448 Radio Controlled Alarm Clock Instruction Manual 

# ***hama***


00

186448

Radio Controlled Alarm Clock

Funkwecker

Multi

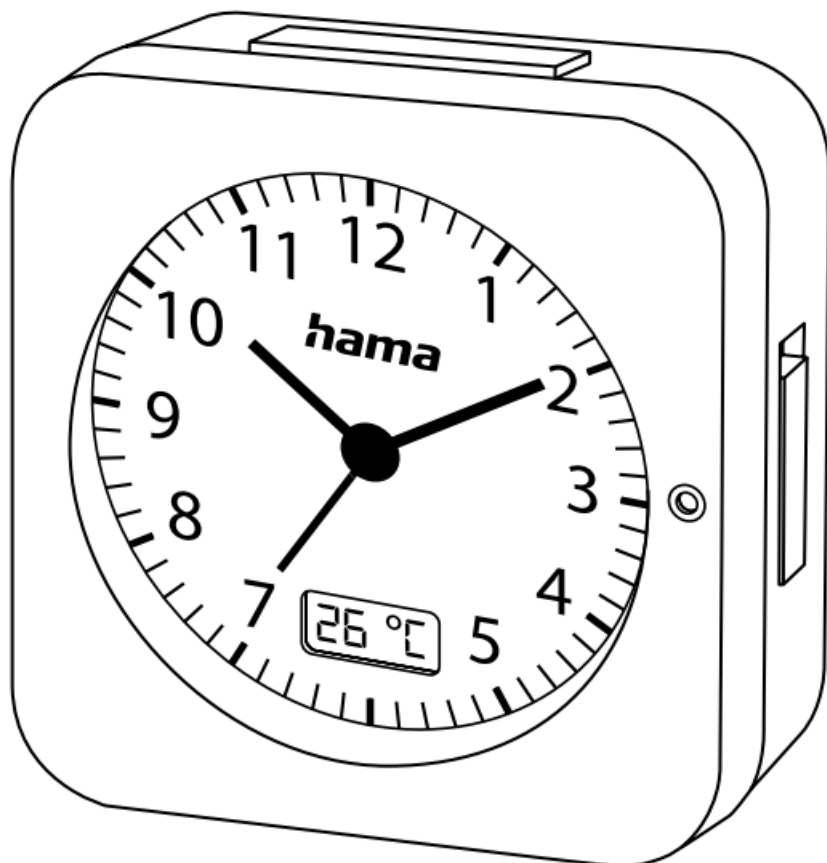

## Operating instruction



### Contents

- 1 Explanation of warning symbols and notes
- 2 Package contents
- 3 Safety instructions
- 4 Getting started
- 5 Operation
- 6 reset function:
- 7 Digital display
- 8 Care and maintenance
- 9 Warranty disclaimer
- 10 Technical data
- 11 Declaration of Conformity
- 12 Documents / Resources
  - 12.1 References
- 13 Related Posts

## Explanation of warning symbols and notes



### Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



### Note

This symbol is used to indicate additional information or important notes.

## Package contents

- „Multi“ Radio Alarm Clock
- 1AA battery
- These operating instructions

## Safety instructions

- The product is intended for private, non-commercial use only.
- Protect the product from dirt, moisture, and overheating and use it in dry environments only.
- Do not use the product in areas in which electronic products are not permitted.
- Do not place the product near interference fields, metal frames, computers, TVs, etc. Electronic devices and window frames can negatively affect the functionality of the product.
- Do not drop the product and do not expose it to any major shocks.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not modify the product in any way. Doing so voids the warranty.

- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately in accordance with the locally applicable regulations.
- Use the product only for the intended purpose.
- Do not use the product in the immediate vicinity of heaters, other heat sources or in direct sunlight.
- Do not operate the product outside the power limits specified in the technical data.
- Do not open the device or continue to operate it if it becomes damaged.
- As with all electrical products, this device should be kept out of the reach of children.
- Only use the article under moderate climatic conditions.



### **Warning -Batteries**

- When inserting batteries, note the correct polarity (+ and -markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polarity contacts.
- Do not allow children to change batteries without supervision.
- Do not mix old and new batteries, or batteries of different types or from different manufacturers.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
- Don't short-circuit batteries.
- Do not charge batteries.
- Don't burn batteries.
- Keep batteries out of the reach of children.
- Never open, damage, or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Remove spent batteries from the product and dispose of them without delay.
- Avoid storing, charging, and using in extreme temperatures and at extremely low atmospheric pressures (such as at high altitudes).

## **Getting started**

Open the battery compartment cover, remove the contact interrupter and close the battery compartment cover again.

## **Operation**

### **Automatic setting of the time according to the DCF signal**

- After the contact interrupter is removed, the alarm clock automatically starts to search for the PCF signal.
- After around 5-10 minutes (depending on how quickly the radio signal is received), the hands on the clock will adjust to the correct time.

### **Manual time setting**

- If the correct time has not been set automatically after around 10 minutes, no DCF signal has been received.
- Press and hold the **SET** button to set the correct time manually. Once the required time is reached, release the SET button.
- The clock automatically continues to search for the DCF signal every day. Once the signal is received successfully, the manually set time and date are overridden.
- Change the location if necessary and avoid areas with sources of interference (cordless and mobile phones, radio loudspeakers, WLAN, etc.).

### Starting manual reception

- When the clock is running, press the **REC** button for 3seconds. The hands move to the 12:00 position. The clock now starts to search for the DCF signal.
- If no signal has been received, the clock will show the time previously stored.

### Alarm clock

#### Alarm clock settings

- Turn the setting wheel on the back of the alarm clock to set the desired alarm time.
- Move the slider switch to the **ON** or **OFF** position to activate /deactivate the alarm.
- When the alarm is activated, the controlled display next to the number 3appears red and appears grey when the alarm is deactivated.

### Stopping the alarm /Snooze function

- Once the alarm clock is activated, it is triggered at the corresponding time, and arising alarm signal is heard. After this, the alarm clock is stopped automatically and triggered again at the set alarm time.
- To stop the alarm clock prematurely, move the slider switch to the OFF position.
- Move the slider back to the ON position to activate the alarm clock for the set alarm time.

### Note -Snooze function

- During the alarm signal, press the **SNOOZE/LIGHT** button to activate the snooze function. The alarm signal is interrupted for 5minutes and then triggered again.
- The snooze function can be triggered six times in a row.

### Backlight

- Press the SNOOZE/LIGHT button to illuminate the clock face for around 5seconds.

### reset function:

- If the clock is not set correctly for any reason, you can carry out a „reset“.
- Use a metallic object (e.g.aneedle)and short-circuit the time using the **RESET** button on the back of the alarm clock. Allhands move to the the12o'clock position.

- After around 5-10 minutes (depending on how quickly the radio signal is received), the hands on the clock will adjust automatically to the correct time.

## Digital display

The display changes every 20 seconds. The following data is displayed in sequence:

- Date
- Room temperature
- Seconds

Each display appears for 20 seconds.

## Care and maintenance

Only clean this product with a slightly damp, lint-free cloth and do not use aggressive cleaning agents. Ensure that no water is able to enter the product.

## Warranty disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product, or failure to observe the operating instructions and/or safety notes.

## Technical data

Power supply	1.5 V, 1x AA battery
--------------	----------------------

## Declaration of Conformity



Hama GmbH & Co KG hereby declares that the radio equipment type [00186448] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following Internet address: [www.hama.com](http://www.hama.com) -> 00186448 -> Downloads.

Frequency band(s)	77.5 kHz
-------------------	----------

# ***hama***

**Hama GmbH & Co KG**  
**86652 Monheim / Germany**  
**Service & Support**



[www.hama.com](http://www.hama.com)



**+49 9091 502-0**



All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

**Documents / Resources**

	<a href="#">hama 00186448 Radio Controlled Alarm Clock</a> [pdf] Instruction Manual 00186448, Radio Controlled Alarm Clock, 00186448 Radio Controlled Alarm Clock, Alarm Clock
	<a href="#">hama 00186448 Radio Controlled Alarm Clock</a> [pdf] Instruction Manual 00186448, Radio Controlled Alarm Clock, Alarm Clock, Radio Controlled Clock, Clock

**References**

- [hama.com](#)