



hama 00188230 Bluetooth Loudspeaker Instruction Manual

[Home](#) » [Hama](#) » hama 00188230 Bluetooth Loudspeaker Instruction Manual 

hama

00188230

Bluetooth® Speaker

Bluetooth® -Lautsprecher

Warnings and safety instructions



Contents

- [1 00188230 Bluetooth Loudspeaker](#)
- [2 Safety Notes](#)
- [3 Care and Maintenance](#)
- [4 Warranty Disclaimer](#)
- [5 Recycling Information](#)
- [6 Declaration of Conformity](#)
- [7 Technical Data](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

00188230 Bluetooth Loudspeaker



Warning

- Take your time and read the following instructions and information completely. Information on product use can be found in the quick guide.

Explanation of product marking symbols

■ ■ ■ The product must be used only with direct current.

Safety Notes

- The product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Use the item only in moderate climatic conditions.
- Do not operate the product outside the power limits given in the specifications.
- Since the battery is integrated and cannot be removed, you will need to dispose of the product as a whole. Do this in compliance with the legal requirements.
- Do not bend or crush the cable.
- Do not drop the product and do not expose it to any major shocks.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not open the device or continue to operate it if it becomes damaged.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Be considerate. Loud volumes can have a detrimental effect on your surroundings.
- Dispose of packaging material immediately according to locally applicable regulations.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep this product, as all electrical products, out of the reach of children!
- Do not allow yourself to be distracted by the product, for example when driving a vehicle or operating sports equipment. Always pay attention to the surrounding traffic and your environment.
- Do not throw the battery or the product into fire.
- Do not tamper with or damage/heat/disassemble the batteries/rechargeable batteries.



Note – splash proof

- This product is splash proof on all sides as defined in IPX4, meaning that it is ideal for use outdoors or in bathrooms, kitchens, etc.
- This protection only works when the connection cover is closed. If a cable (audio, USB) is connected or the connection cover is not closed properly, splash protection cannot be guaranteed and the device could be damaged.
- Do not use the product in heavy rain, under water, in the shower or for water sports, etc.



Warning – Battery

- Only use suitable charging devices or USB connections for charging.
- As a rule, do not charge devices or USB connections that are defective and do not try to repair them yourself.
- Do not overcharge the product or allow the battery to completely discharge.

- Avoid storing, charging or using the device in extreme temperatures and extremely low atmospheric pressure (for example, at high altitudes).
- When stored over a long period of time, batteries should be charged regularly (at least every three months).

Care and Maintenance

Only clean this product with a slightly damp, lint-free cloth and do not use aggressive cleaning agents.

Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/ or safety notes.

Recycling Information

Note on environmental protection:




After the implementation of the European Directive 2012/19/EU and 2006/66/EU in the national legal system, the following applies: Electric and electronic devices as well as batteries must not be disposed of with household waste. Consumers are obliged by law to return electrical and electronic devices as well as batteries at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilising old devices/batteries, you are making an important contribution to protecting our environment.

Declaration of Conformity

Hereby, Hama GmbH & Co KG declares that the radio equipment type [00188230] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.hama.com->00188230->Downloads.

Frequency band(s)	2402 – 2480 MHz
Maximum radio-frequency power transmitted	4 dBm

Technical Data

Mobile Bluetooth Speaker	
Bluetooth Technology	Bluetooth v5.0
Supported profiles	A2DP, AVRCP, HFP, HSP
Frequency	180 Hz – 20 kHz
Range	< 10 m
Max. music output	30 W
Charging voltage	Max. 5V  1.8 A
Sound System	Stereo
Distortion (THD)	≤ 1%
Size	195 x 96 x 96 mm
Weight	700 g
Connections	USB-C, AUX
Battery	
Type	7.4V, Li-Ion 2000mAh
Charging time	~ 3 h
Playback	~ 12 h (depending on volume and audio content)



„The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Hama GmbH & Co KG is under license. Other trademarks and trade names are those of their respective owners.“

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

hama

Hama GmbH & Co KG
86652 Monheim / Germany
Service & Support



www.hama.com



+49 9091 502-0
00188230/06.23

Documents / Resources



- [h hama.com](http://hama.com)
- [h hama.com](http://hama.com)