



hama 00223195 3 Way USB C 17W Power Cube Instruction Manual

[Home](#) » [Hama](#) » hama 00223195 3 Way USB C 17W Power Cube Instruction Manual 

Contents

- [1 hama 00223195 3 Way USB C 17W Power Cube](#)
- [2 Explanation of warning symbols and notes](#)
- [3 Safety instructions](#)
- [4 Operation](#)
- [5 Care and maintenance](#)
- [6 Warranty disclaimer](#)
- [7 Technical data](#)
- [8 Service & Support](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

hama

hama 00223195 3 Way USB C 17W Power Cube



Thank you for choosing a Hama product. Take your time and read the following instructions and information completely. Please keep these instructions in a safe place for future reference.

Explanation of warning symbols and notes

- **Risk of electric shock** This symbol indicates a risk of electric shock from touching product parts carrying hazardous voltage.
- **Warning** This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.
- **Note** This symbol is used to indicate additional information or important notes.

Package contents

- Power strip
- These operating instructions

Safety instructions

- Use the product only for the intended purpose.
- Do not operate the product outside the power limits specified in the technical data.
- Protect the product from dirt, moisture and overheating and use it in dry environments only.
- Do not use the product in a damp environment and avoid splashing water.
- Do not continue to operate the product if it is visibly damaged.
- Do not bend or crush the cable.
- Do not drop the product and do not expose it to any major shocks.
- Always pull directly on the plug when disconnecting the cable, never on the cable itself.
- As with all electrical products, this device should be kept out of the reach of children.
- Dispose of packaging material immediately in accordance with the locally applicable regulations.

- Do not modify the product in any way. Doing so voids the warranty.
- The product is intended for private, noncommercial use only.
- The product is intended only for use inside buildings.
- Do not use the product in the immediate vicinity of heaters, other heat sources or in direct sunlight.
- Only use the article under moderate climatic conditions.
- Do not use the product in areas in which electronic products are not permitted.
- Route all cables so that there is no risk of tripping.
- Never connect multiple units of this product in series.
- The product must only be operated on a supply network as described on the type plate.

Risk of electric shock

- Do not open the device or continue to operate it if it becomes damaged.
- Do not use the product if the AC adapter, the adapter cable or the mains cable are damaged.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.

Warning

- Only operate the product from an approved socket that is connected to the public power supply. The socket must be installed close to the product and must be easily accessible.
- Disconnect the product from the power supply using the On/Off switch – if this is not available, unplug the power cord from the socket.
- If using a multi-socket power strip, make sure that the total power consumption of all connected devices does not exceed the power strip's maximum throughput rating.
- If you will not be using the product for a prolonged period, disconnect it from mains power.

Operation

Warning – Connection of devices

- Before connecting a device, check whether it can be adequately supplied with the charger's current delivery.
- Ensure that the total output of all the connected devices does not exceed 17 W.
- Note the instructions in your device's operating manual.

Unless different instructions have been expressly given in the operating instructions for the devices you are charging, proceed as follows:

- Connect your device to a USB charging port using a suitable USB cable.
- Connect the charger to a properly installed and easily accessible mains socket.
- The charging process is displayed on your device.
- Disconnect the device from the charger if you wish to interrupt the charging process or when the device is fully charged.
- Then disconnect the charger from the line connection.

Care and maintenance

Note Disconnect the device from the mains before cleaning and during prolonged periods of non-use.

- Only clean this product with a slightly damp, lint-free cloth and do not use aggressive cleaning agents.
- Ensure that no water is able to enter the product.

Warranty disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes.

Technical data

- **Mains connection** 250 V ~ / 16 A
- **Connected load max.** 3680 W

Specifications according to Regulation (EU) 2019/1782

- **Brand name, commercial register number, address** Hama, HRA12159, Dresdner Str. 9, 86653 Monheim, Germany
- **Model identifier** 223195
- **Input voltage** 230-250 V
- **Input AC frequency** 50/60 Hz
- **Output voltage/output current/output power** 5.0 V DC/ 3.4 A/ 17.0 W
- **Average efficiency during operation** 82.2 %
- **Efficiency at low load (10%)** 78.6 %
- **Power consumption at zero load** 0.10 W

Hama GmbH & Co KG 86652 Monheim/Germany

 
Service & Support

www.hama.com

+49 9091 502-0

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

Documents / Resources



- hama.com

Manuals+,