

# hama 200140 USB Hub/Card Reader Instruction Manual

Home » Hama » hama 200140 USB Hub/Card Reader Instruction Manual





**USB Hub/Card Reader USB-Hub/Kartenleser** 00 200140



**Operating Instructions** 

#### **Contents**

- 1 Package Contents
- 2 Safety Notes
- **3 Startup and Operation**
- **4 Warranty Disclaimer**
- **5 Technical Data**
- 6 Documents /

Resources

- **6.1 References**
- **7 Related Posts**

## **Package Contents**

- USB Hub/Card Reader
- USB-C Adapter
- · These operating instructions

## **Safety Notes**

- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not open the device or continue to operate it if it becomes damaged.
- Do not operate the product outside the power limits given in the specifications.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep this product, as all electrical products, out of the reach of children!
- Use the product for its intended purpose only.
- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- The product is intended for indoor use only.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Do not use the product in moist environments and avoid splashes.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not drop the product and do not expose it to any major shocks.
- Dispose of packaging material immediately according to locally applicable regulations.



# Warning – Data Loss

- Ensure that data transfer is complete before you remove a storage medium from the device.
- If you do not do this, data may be lost.



# Warning

- Find out the maximum output current capacity of the USB port on your device. To do this, consult the operating instructions or ask the manufacturer.
- Common values are 500 mA for USB-A 2.0, 900 mA for USB-A 3.0, and up to 3000 mA for USB-C.
- Ensure that the cumulative current draw of all USB devices connected to the hub/multiport adaptor does not exceed this value.



Run USB receivers (radio / 2.4 GHz wireless) if possible directly on the computer / notebook.

### **Startup and Operation**

- Switch on your computer and boot the system.
- Connect the product to a free USB port on your computer.
- You do not have to install drivers; the computer will automatically recognise the product.
- If necessary, follow the instructions for your operating system.
- In order to use your devices, plug them into the product one after the other.

#### Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper

installation/mounting, improper use of the product or from failure to observe the operating instructions and/ or safety notes.

#### **Technical Data**

Operating voltage / current consumption	USB-A: 5 V max. 900 mA USB-C: 5 ——— V max. 3 A
Compatibility	USB-A port USB-C port
System requirements	Windows 11 / 10 / 8 / 7 Mac OS 10.8 ≥
USB specification	USB 3.0 USB 3.2 Gen1

 


• If there is interference or the product no longer responds, unplug the product, wait a few seconds and then plug it in again.



HamaGmbH&CoKG 86652Monheim/Germany





All listed brands are trademarks of the corresponding companies.

Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

00200140/11.22

### **Documents / Resources**



hama 200140 USB Hub/Card Reader [pdf] Instruction Manual
200140 USB Hub Card Reader, 200140 USB Hub, USB Hub Card Reader, 200140 Card Reader, Card Reader, USB Hub

### References

• hama.com

Manuals+,