



hama 4633 Bluetooth Remote Shutter BrS2 Instruction Manual

[Home](#) » [Hama](#) » hama 4633 Bluetooth Remote Shutter BrS2 Instruction Manual 

Contents

- 1 hama 4633 Bluetooth Remote Shutter BrS2
- 2 Product Information
- 3 Product Usage Instructions
- 4 Safety Notes
- 5 Warning – batteries / button cells
- 6 Operation
 - 6.1 Bluetooth pairing
 - 6.2 Automatic Bluetooth® connection (after successful pairing)
- 7 Technical Data
- 8 Documents / Resources
 - 8.1 References

hama

hama 4633 Bluetooth Remote Shutter BrS2



Product Information

Product Name	PAP Raccolta Carta
Manufacturer	Hama GmbH & Co KG
Model Number	00004633
Dimensions (W x L x H)	35 x 35 x 15 mm
Weight	Approx. 10 g
Battery Type	CR2032
Range	Max. 10 m
Frequency Band(s)	2.402 GHz ~ 2.480 GHz
Maximum Radio-Frequency Power Transmitted	6.17 mW E.I.R.P.

Product Usage Instructions

1. Open the battery cover.
2. Change the battery with 1X CR2032.
3. Close the battery cover.
4. Read the operating instructions carefully.
5. Make sure to keep batteries and button cells away from children.
6. Ensure that the product is properly installed/mounted and used according to the operating instructions and safety notes.
7. Pair the product via Bluetooth with compatible devices such as smartphones and tablet PCs running iOS 6 or Android 4.2.2 (or newer) operating systems.
8. Clean the product with a slightly damp, lint-free cloth and avoid using aggressive cleaning agents.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hama GmbH & Co KG is under license. Other trademarks and trade names are those of their

respective owners. All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

Controls and Displays

1. LED indicator light
2. ON / OFF button
3. Release button
4. Battery compartment cover

Explanation of Warning Symbols and Notes



Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



Note

This symbol is used to indicate additional information or important notes.

Package Contents

- Bluetooth® Remote Shutter BRS2
- 1 hand strap
- 1 battery (CR2032)
- These operating instructions

Safety Notes

- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not use the product in moist environments and avoid splashes.
- Do not drop the product and do not expose it to any major shocks.
- Dispose of packaging material immediately according to locally applicable regulations.
- Do not modify the product in any way. Doing so voids the warranty.
- Use the product for its intended purpose only.
- This product is intended for private, non-commercial use only.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Keep this product, as all electrical products, out of the reach of children!
- Do not operate the product outside the power limits given in the specifications.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not open the device or continue to operate it if it becomes damaged.

Warning – batteries / button cells

- When inserting batteries, note the correct polarity (+ and – markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries that match the specified type. Keep the instructions for the correct choice of batteries included with the operating instructions of devices safe for future reference.
- Before you insert the batteries, clean the battery contacts and the polarity contacts.
- Do not allow children to change batteries without supervision.
- Replace all the batteries in a set at the same time.
- Do not mix old and new batteries, or batteries of different types or from different manufacturers.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not burn batteries or heat them up.
- Never open, damage or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Remove spent batteries from the product and dispose of them without delay.
- Avoid storing, charging and using in extreme temperatures and at extremely low atmospheric pressures (such as at high altitudes).
- Ensure that batteries with damaged housings do not come into contact with water.
- Keep batteries out of the reach of children.
- Do not swallow batteries or button cells. Burning hazard from hazardous substances.
- If the battery compartment will no longer close securely, stop using the product and keep it away from children.
- This product contains button cells. If the button cell is swallowed, serious internal burns can occur within 2 hours and ultimately lead to death.
- If you suspect that a button cell has been swallowed or is in any part of the body, seek medical attention immediately.
- Keep new and used button cells out of the reach of children.

System Requirements

- The Bluetooth® remote release supports Bluetooth®-capable terminal devices such as smartphones and tablet PCs that run the iOS 6 or Android 4.2.2 (or newer) operating systems.

Note

- Note that support of the Bluetooth® remote release depends on your terminal device.
- Please refer to the operating instructions for the device you are using.

Getting Started

- Open the battery compartment by undoing the screws on the battery cover (4) using a screwdriver.
- Remove the battery cover (4) and insert a CR2032 battery with the correct polarity (B).

- Close the battery compartment by putting back the battery cover and tightening the screws using a screwdriver (B).

Operation

Note

- The functions described in this section are only available for Bluetooth®-capable terminal devices.
- Note that the maximum range for Bluetooth® is 10 metres without obstacles such as walls, people, etc.

Bluetooth pairing

Note – Pairing

- Make sure that your Bluetooth®-capable terminal device is on and Bluetooth® is activated.
- Make sure that your Bluetooth®-capable terminal device is visible for other Bluetooth® devices.
- For more information, please refer to the operating instructions of your terminal device.
- Slide the On/off switch (2) to the ON position to switch on the Bluetooth® remote release. The control light (1) begins to flash green (slowly).
- This means the Bluetooth® remote release is searching for a Bluetooth® connection.
- Open the Bluetooth® settings on your terminal device and wait until Hama BRS2 appears in the list of Bluetooth® devices found.
- Select Hama BRS2 and wait until the Bluetooth® remote release is listed as connected in the Bluetooth® settings on your terminal device. The control light (1) begins to flash green (quickly).
- You can now use the Bluetooth® remote release.

Automatic Bluetooth® connection (after successful pairing)

Note

- Make sure that your Bluetooth®-capable terminal device is on and Bluetooth® is activated.
- Make sure that your Bluetooth®-capable terminal device is visible for other Bluetooth® devices.
- For more information, please refer to the operating instructions of your terminal device.
- The Bluetooth® remote release remains connected to the Bluetooth® device it was last paired with.
- Slide the On/off switch (2) to the ON position to switch on the Bluetooth® remote release. The control light (1) begins to flash green (slowly).
- After 3–5 seconds, the Bluetooth® remote release automatically connects to the device.
- You can now use the Bluetooth® remote release.

Note – Connection impaired

After the devices have been paired once, the connection is then established automatically. If the Bluetooth® connection is not established automatically, check the following:

- Check the Bluetooth® settings of your terminal device to see whether Hama BRS2 is connected. If not, repeat the steps listed under 6.1. Bluetooth® pairing.

- Check whether obstacles are impairing the range. If so, move the devices closer together.
- The performance can also be affected by a weak battery. Change the battery if necessary.
- Only one Bluetooth® device can be connected at a time. If there is an active connection to another device, deactivate this connection and try again.

Replacing the batteries

The battery has been designed to last for up to 2,000 shots, although this depends on the conditions of use. If the Bluetooth® remote release does not respond after you press the release button (3), or does not connect to the terminal device, etc., change the battery as follows: See (B).

Care and Maintenance

Only clean this product with a slightly damp, lint-free cloth and do not use aggressive cleaning agents. Make sure that water does not get into the product.

Warranty Disclaimer

Hama GmbH & Co. KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes.

Technical Data

Bluetooth® Remote Shutter	
Bluetooth® version	5.3
Bluetooth® Class	Class 2
Range	Max. 10 m
Dimensions (W x L x H)	35 x 35 x 15 mm
Weight	Approx. 10 g
Battery type	CR2032

Declaration of Conformity

Hereby, Hama GmbH & Co KG declares that the radio equipment type [00004633] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://uk.hama.com/00004633/Downloads>.

Frequency band(s)	2.402 GHz ~ 2.480 GHz
Maximum radio-frequency power transmitted	6.17 mW E.I.R.P.

Documents / Resources

<div> <div>hama</div> <div>00004633</div> <div>Bluetooth® Remote Shutter BRS2</div> <div>Bluetooth®-Fernauslöser</div> <div> <div> <div>CS</div> <div>Manual en polski</div> <div>08</div> </div> <div> <div>GB</div> <div>Operating Instructions</div> <div>08</div> </div> <div> <div>FR</div> <div>Manuel de l'utilisateur</div> <div>08</div> </div> <div> <div>DE</div> <div>Bedienungsanleitung</div> <div>08</div> </div> <div> <div>IT</div> <div>Manuale dell'utente</div> <div>08</div> </div> <div> <div>ES</div> <div>Manual de usuario</div> <div>08</div> </div> <div> <div>PT</div> <div>Manual do utilizador</div> <div>08</div> </div> <div> <div>RU</div> <div>Руководство пользователя</div> <div>08</div> </div> <div> <div>PL</div> <div>Podręcznik użytkownika</div> <div>08</div> </div> <div> <div>UK</div> <div>Інструкція з експлуатації</div> <div>08</div> </div> <div> <div>UA</div> <div>Інструкція з експлуатації</div> <div>08</div> </div> <div> <div>RO</div> <div>Manual de utilizator</div> <div>08</div> </div> <div> <div>TR</div> <div>Kullanıcı Kılavuzu</div> <div>08</div> </div> <div> <div>GR</div> <div>Εγχειρίδιο Χρήστη</div> <div>08</div> </div> <div> <div>EL</div> <div>Εγχειρίδιο Χρήστη</div> <div>08</div> </div> <div> <div>HE</div> <div>מדריך המשתמש</div> <div>08</div> </div> <div> <div>IL</div> <div>מדריך המשתמש</div> <div>08</div> </div> <div> <div>IN</div> <div>उपयोगकर्ता गाइड</div> <div>08</div> </div> <div> <div>TH</div> <div>คู่มือผู้ใช้</div> <div>08</div> </div> <div> <div>VI</div> <div>Sách hướng dẫn người dùng</div> <div>08</div> </div> <div> <div>LA</div> <div>ປຶ້ມຄູ່າວຸຊົນ</div> <div>08</div> </div> <div> <div>ET</div> <div>Kasutajate käsiraamat</div> <div>08</div> </div> <div> <div>LV</div> <div>Lietotāja rokasgrāmata</div> <div>08</div> </div> <div> <div>LT</div> <div>Vartotojo vadovas</div> <div>08</div> </div> <div> <div>SL</div> <div>Uporabnikovo ročilo</div> <div>08</div> </div> <div> <div>HR</div> <div>Korisnički priručnik</div> <div>08</div> </div> <div> <div>SK</div> <div>Manuál používateľa</div> <div>08</div> </div> <div> <div>CZ</div> <div>Manuál uživatele</div> <div>08</div> </div> <div> <div>SI</div> <div>Uporabnikovo ročilo</div> <div>08</div> </div> <div> <div>MT</div> <div>Manuali tal-utent</div> <div>08</div> </div> <div> <div>GA</div> <div>Manuais an úsáide</div> <div>08</div> </div> <div> <div>IS</div> <div>Notaðendagæðing</div> <div>08</div> </div> <div> <div>FO</div> <div>Notandið</div> <div>08</div> </div> <div> <div>EU</div> <div>Manuale dell'utente</div> <div>08</div> </div> <div> <div>EN</div> <div>Operating Instructions</div> <div>08</div> </div> </div> </div>	<p>hama 4633 Bluetooth Remote Shutter BrS2 [pdf] Instruction Manual</p> <p>00004633, 4633 Bluetooth Remote Shutter BrS2, 4633 Shutter, Bluetooth Remote Shutter BrS2 , Remote Shutter, Bluetooth Shutter, Shutter BrS2, Shutter, BrS2</p>
--	---

References

- [h hama.com](#)
- [h Recycling Information hama.com](#)
- [h Smartphone-Halterung "Pro II", 9,5 cm, mit Bluetooth®-Fernauslöser "BRS2" | Hama](#)
- [h Support pr smartphone "Pro II", 9,5cm av. dÄ©cl. dist. Bluetooth® "BRS2" | Hama](#)
- [h Smartphonehouder "Pro II", 9,5 cm, met Bluetooth®-ontspanner "BRS2" | Hama](#)
- [h UCHWYT DO SMARTFONA PRO II 9,5 CM Z SAMOWYZW. BT | Hama](#)
- [h Smart. Pro II 9,5cm with Bluetooth | Hama](#)
- [h Suport pentru telefon "Pro II", de 9,5 cm, cu declanÈ™ator Bluetooth "BRS2" | Hama](#)
- [h "Pro II" Smartphone Holder, 9.5 cm, with "BRS2" Bluetooth® Remote Trigger | Hama](#)