

# hama EMW-700 ERGONOMIC Vertical Multi Device Mouse User Guide


[Home](#) » [Hama](#) » hama EMW-700 ERGONOMIC Vertical Multi Device Mouse User Guide 

## Contents


- 1 hama EMW-700 ERGONOMIC Vertical Multi Device Mouse
- 2 Pairing mode 2.4 GHz
- 3 Pairing mode Bluetooth
- 4 Windows
- 5 Android
- 6 Mac
- 7 PRODUCT DESCRIPTION
- 8 Operating instruction
- 9 Safety Notes
- 10 Battery charging
- 11 ABOUT COMPANY
- 12 Documents / Resources
  - 12.1 References
- 13 Related Posts

# ***hama***

**hama EMW-700 ERGONOMIC Vertical Multi Device Mouse**

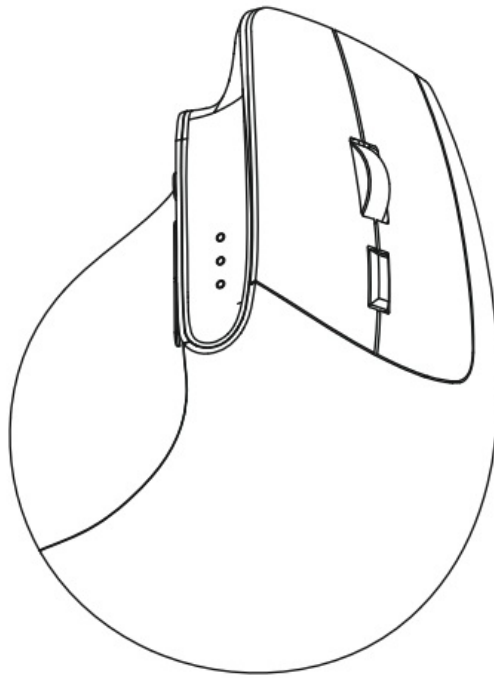


## Pairing mode 2.4 GHz


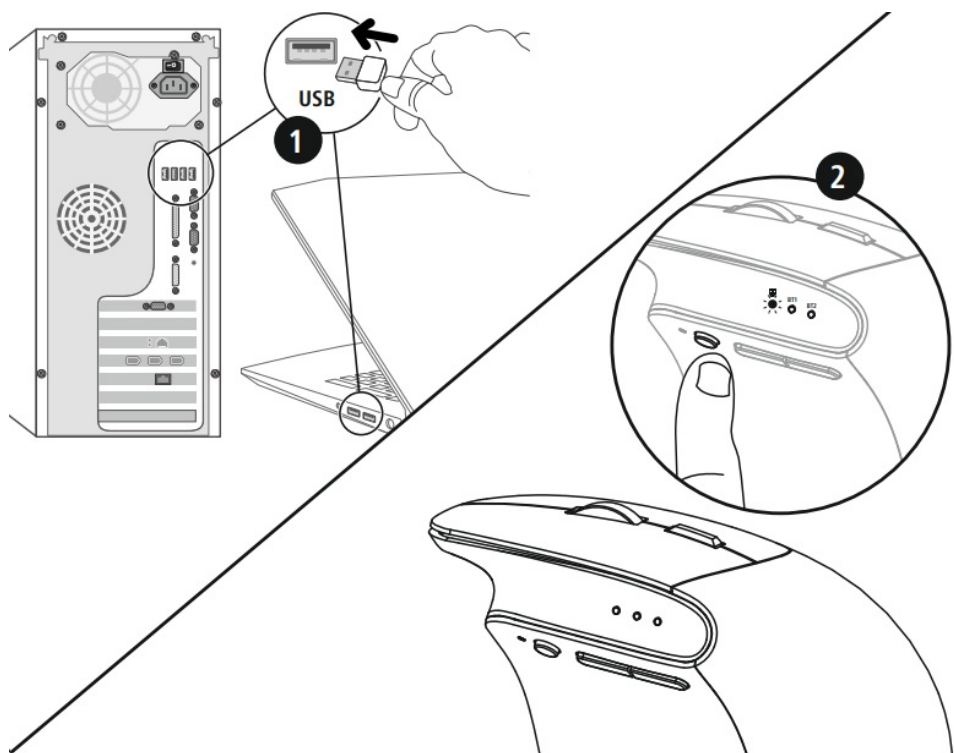


## Pairing mode Bluetooth

1

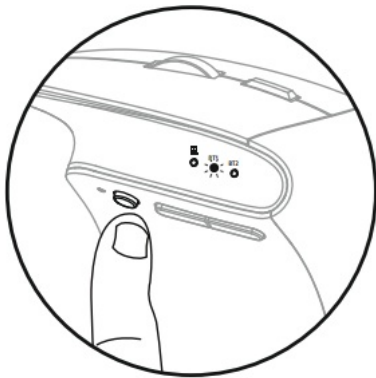

2

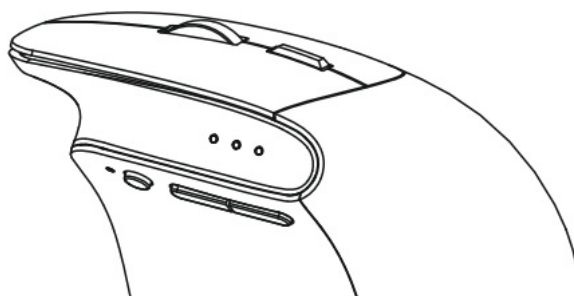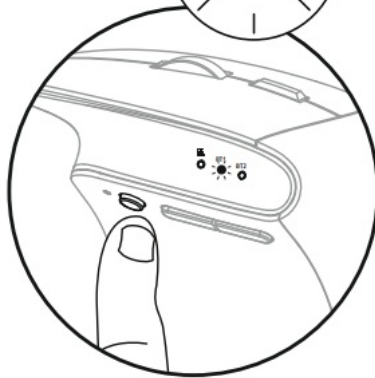

## Windows

1



a



b

c

- Bluetooth-Gerät hinzufügen
- Herstellen einer Verbindung für ein Gerät zulassen
- Bluetooth-Netzwerkgeräte anzeigen**
- Datei senden
- Datei empfangen
- Einem persönlichen Netzwerk beitreten
- Einstellungen öffnen
- Symbol entfernen

2

### Bluetooth-Geräte verwalten

Bluetooth

☒ Ein

Ihr PC sucht nach Bluetooth-Geräten und ist für sie sichtbar.

.....

**EMW-700 4.2**  
Koppelungsbereit


a

Koppeln


b

**MAC-User QSs MacBook Pro**  
Koppelungsbereit


## Android

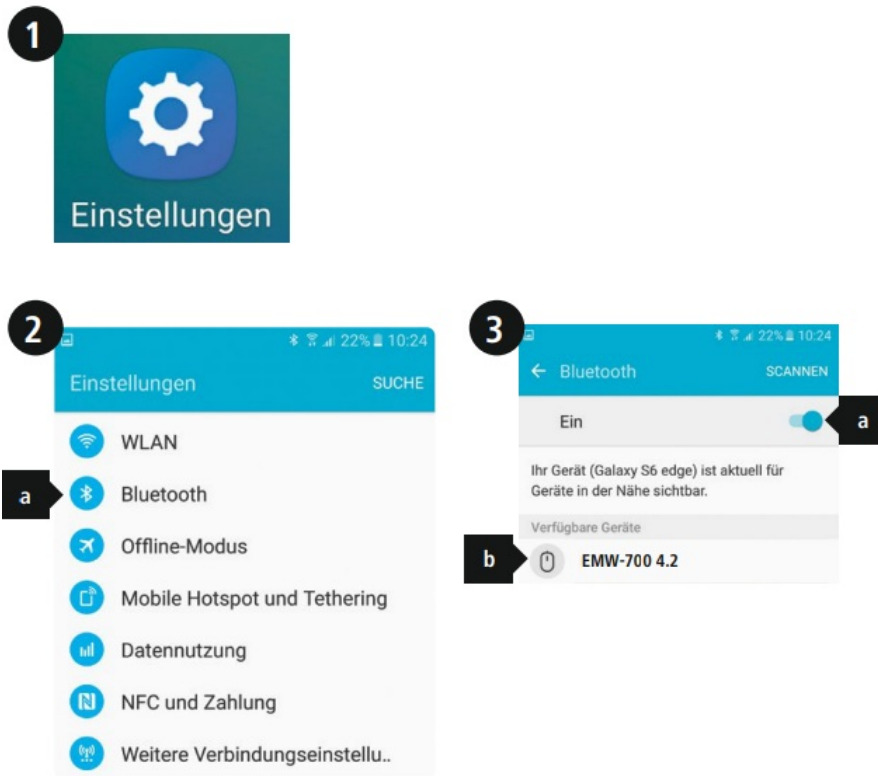

## Mac

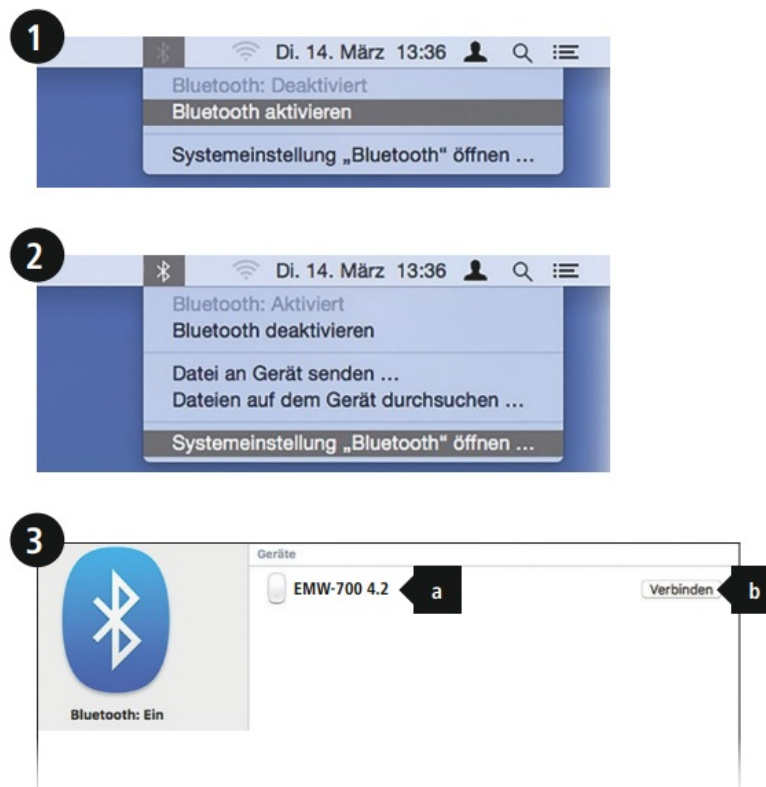

## PRODUCT DESCRIPTION

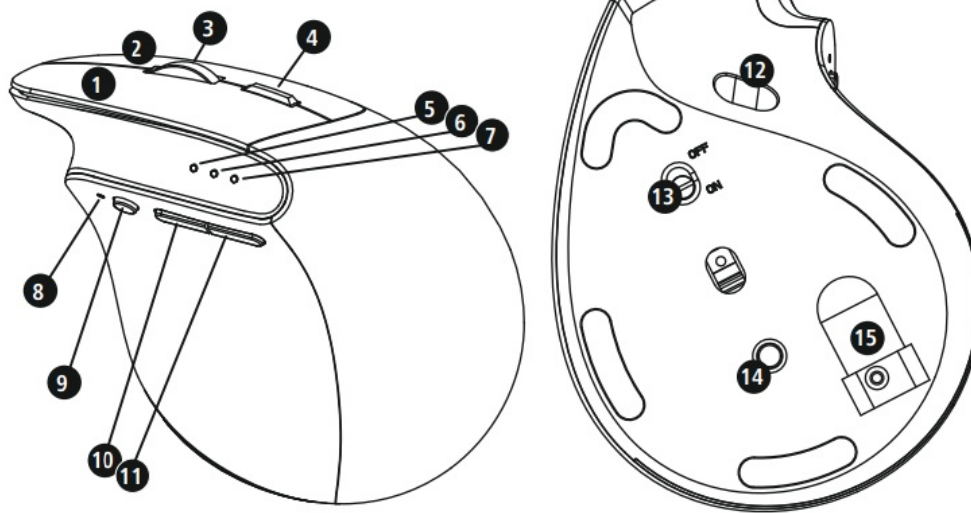

1. Left Button
2. Right Button
3. Scroll Wheel
4. Dpi Switch
5. Status LED – 2.4 GHZ
6. Status LED – Bluetooth 1 (4.2)
7. Status LED – Bluetooth 2 (4.2)
8. Status LED – Internal battery
9. Mode – Switch
10. > Forward
11. < Backward
12. USB-Charging Plug
13. ON/OFF Switch
14. RGB switch
15. USB – Receiver

## Operating instruction

Read the warnings and safety instructions on the enclosed note before using the product.

## Safety Notes

- Use the item only in moderate climatic conditions.
- The battery is integrated and cannot be removed.
- Do not throw the battery or the product into fire.
- Do not tamper with or damage/heat/disassemble the batteries/rechargeable batteries.

## Battery charging

- The product contains a rechargeable battery.
- Charge the mouse fully before using it for the first time.
- If the Power LED (8) is flashing or if there is no reaction / connection after switching it on, the mouse needs to

be charged.

- Connect the supplied USB charging cable to the USB-C connection (12) on the mouse.
- Connect the free plug on the USB charging cable to a suitable USB charger. To do this, consult the operating instructions for the USB charger you are using.
- The status LED (4) now lights up solid blue and the mouse is charging.
- Once the charging process is complete, the status LED goes out.
- The actual battery life will vary depending on how you use the device, the settings and the environmental conditions (batteries have a limited life).
- Only use the USB charging cable included for this product.

### **Warning – Battery**

- Only use suitable charging devices or USB connections for charging.
- As a rule, do not charge devices or USB connections that are defective and do not try to repair them yourself.
- Do not overcharge the product or allow the battery to completely discharge.
- Avoid storing, charging or using the device in extreme temperatures and extremely low atmospheric pressure (for example, at high altitudes).
- When stored over a long period of time, batteries should be charged regularly (at least every three months).

### **Warranty Disclaimer**

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes.

### **Declaration of Conformity**

Hereby, Hama GmbH & Co KG declares that the radio equipment type [00182691] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.hama.com](http://www.hama.com) -> 00182691-> Downloads.

„The Bluetooth ® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Hama GmbH & Co KG is under license. Other trademarks and trade names are those of their respective owners.“

- **Frequency band(s):** 2403 – 2480 MHz
- **Maximum radio-frequency power transmitted:** 2mW EIRP

### **ABOUT COMPANY**

- Hama GmbH & Co KG 86652
- Monheim / Germany
- [www.hama.com](http://www.hama.com)
- All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

### **Documents / Resources**



[hama EMW-700 ERGONOMIC Vertical Multi Device Mouse](#) [pdf] User Guide  
EMW-700 ERGONOMIC Vertical Multi Device Mouse, EMW-700 ERGONOMIC, EMW-700, ERGONOMIC, Vertical Multi Device Mouse, Vertical Mouse, Multi Device Mouse, Mouse

## References

- [h hama.com](#)
- [h Recycling Information hama.com](#)