

hama WiFi Power Socket, Mini Instruction Manual

Home » Hama » hama WiFi Power Socket, Mini Instruction Manual





00176571 00176573 00176575

THE SMART SOLUTION

Contents

- 1 WiFi Power Socket, Mini
 - 1.1 Operating Instructions
 - 1.2 Operating instruction
 - 1.3 Important note quick guide:
 - 1.4 1. Explanation of Warning Symbols and Notes
 - 1.5 2. Package Contents
 - 1.6 3. Safety notes
 - 1.7 4. Technical Data
 - 1.8 5. Getting started and operation
 - 1.9 6. Care and Maintenance
 - 1.10 7. Warranty Disclaimer
 - 1.11 8. Recycling Information Note on environmental protection:
 - 1.12 9. Information on RF exposure
 - 1.13 10. Declaration of Conformity
- 2 Hama GmbH & Co KG 86652 Monheim/ Germany
- 3 Documents / Resources
- **4 Related Posts**

WiFi Power Socket, Mini



de.hama.com/smarthome#smart-solution

Operating instruction



Important note quick guide:

- This is a quick guide to provide you with the most important basic information, such as safety warnings and how to get started using the product.
- The complete instruction manual is available at: www.hama.com -> 00176571/73/75 -> Downloads
- Save the instruction manual to your computer's hard drive for future reference, or print it out if necessary.

1. Explanation of Warning Symbols and Notes



Risk of electric shock

This symbol indicates product parts energized with a dangerous voltage of sufficient magnitude to constitute a risk of electric shock.

Warning



This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.

Note



This symbol is used to indicate additional information or important notes.

2. Package Contents

- · WiFi socket
- 1 quick reference guide

3. Safety notes

- · Do not cover when in use.
- The power outlet is voltage-free only when unplugged.
- Switch on and use only with the safety covers closed. Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- This product is intended for private, noncommercial use only.
- Use the product for its intended purpose only.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not drop the product and do not expose it to any major shocks.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately according to locally applicable regulations.
- Do not operate the product outside the power limits given in the specifications.
- Use the item only in moderate climatic conditions.
- Do not mount the product above locations where persons might linger.
- Before mounting, check that the wall you have chosen is suitable for the weight to be mounted. Also make sure that there are no electric, water, gas or other lines running through the wall at the mounting site.
- Pay attention to the applicable data protection regulations before installing and using the product.
- Respect the personal and property rights of others. Do not make recordings of other people with the Camera.
- Observe the right to one's own image and spoken word when recording.
- Keep this product, as all electrical products, out of the reach of children!

Warnung - Max. 3680 W



Do not operate the product outside the power limits given in the specifications.

Risk of electric shock

- Do not open the device or continue to operate it if it becomes damaged.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.

4. Technical Data

Input and output voltage	220–240 V ~ / 50 Hz
Maximum connection power	16 A, 3680 W
Frequency band	2.4 GHz
Maximum radio-frequency power transmitted	< 100 mW

5. Getting started and operation

Warning



- Only operate the product from a socket that has been approved for the device. The socket must be installed close to the product and must be easily accessible.
- Disconnect the product from the power supply using the On/Off switch if this is not available, unplug the power cord from the socket.
- If using a multi-socket power strip, make sure that the total power consumption of all connected devices does not exceed the power strip's maximum throughput rating.
- If you will not be using the product for a prolonged period, disconnect it from mains power.

It's so simple:

- Download the Hama Smart Solution app from the Apple App Store or on Google Play.
- Start the Hama Smart Solution app
- If you're using it for the first time, you'll have to register and create a new account. If you already have an account, log in using your login details
- Connect the WiFi smart socket to a properly installed and easily accessible mains socket.
- Press and hold the button on the socket for approx. 5 seconds until the blue LED begins to flash quickly
- Now click + in the upper-right corner and select **Power socket** followed by your **device**.
- · Confirm with Device is flashing quickly.
- Now enter the name of your WiFi network and the password, and confirm with Confirm.
- The socket will now be connected. Once the connection has been established, the blue LED stops flashing
- Now you can set up, control and configure your WiFi Smart socket using the app.

6. Care and Maintenance



Note

Disconnect the product from the mains before cleaning it or if it is not going to be used for a long period of time.

- Only clean this product with a slightly damp, lint-free cloth and do not use aggressive cleaning agents.
- Make sure that water does not get into the product.

7. Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes.

8. Recycling Information Note on environmental protection:



After the implementation of the European Directive 2012/19/EU and 2006/66/EU in the national legal system, the following applies: Electric and electronic devices as well as batteries must not be disposed of with household waste. Consumers are obliged by law to return electrical and electronic devices as well as batteries at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of

utilising old devices/Batteries, you are making an important contribution to protecting our environment.

9. Information on RF exposure

This device meets the EU requirements for limiting the exposure of the population to electromagnetic fields through health protection.

The device complies with the RF specifications insofar as it is used 20 cm away from the body.

10. Declaration of Conformity




Hereby, Hama GmbH & Co KG declares that the radio equipment type [00176571, 00176573, 00176575] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.hama.com -> 00176571, 00176573, 00176575 -> Downloads.



Hama GmbH & Co KG 86652 Monheim/ Germany

Service & Support



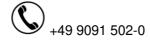

"Google and Google Play are trademarks of Google LLC."

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

00176571_73_75/12.20

Documents / Resources



Manuals+,