

Contents [[hide](#)]

 
 
 
- [1 hama WM-800 Multi Device Mouse](#)
- [2 Instruction](#)
- [3 Operating instruction](#)
- [4 Battery charging](#)
- [5 Warranty Disclaimer](#)
- [6 Service & Support](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

 
 
 
hama


hama WM-800 Multi Device Mouse



Instruction

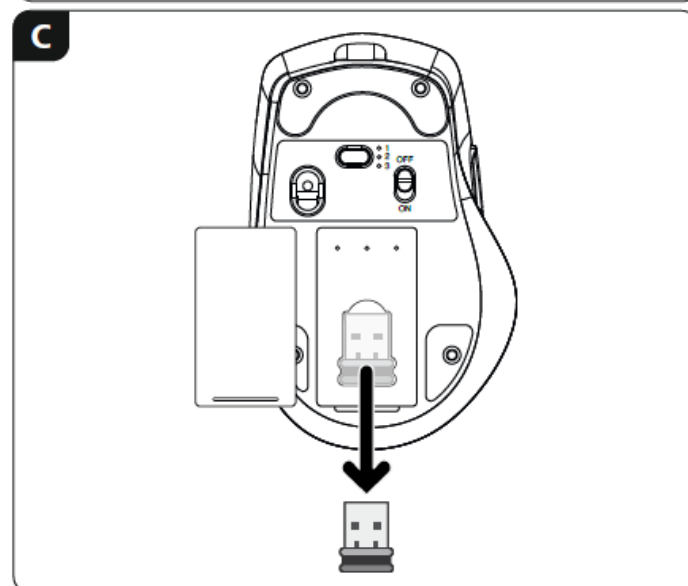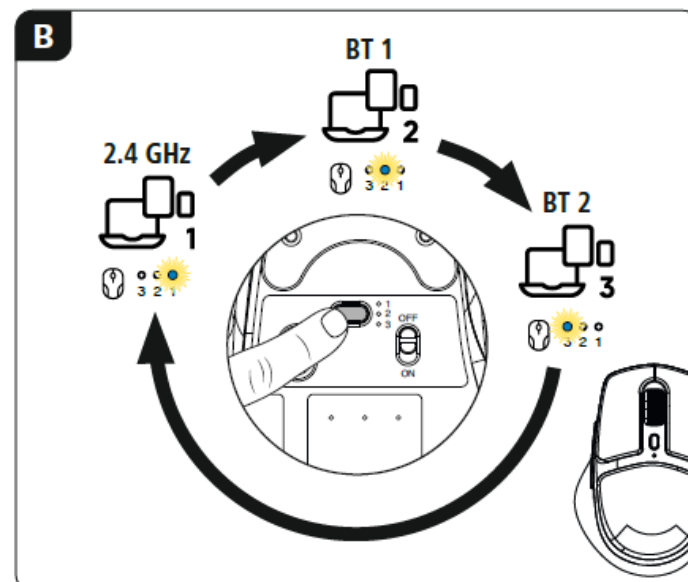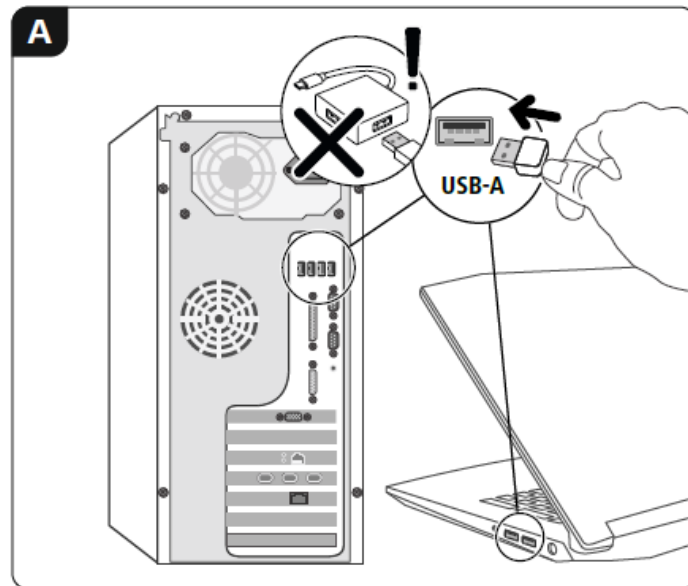

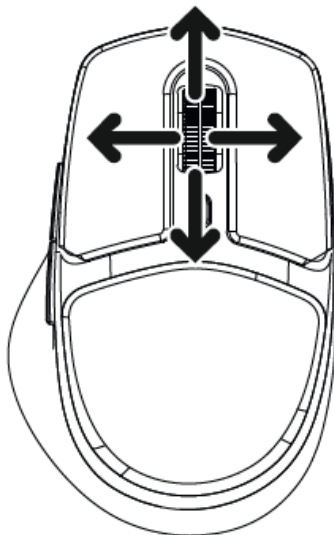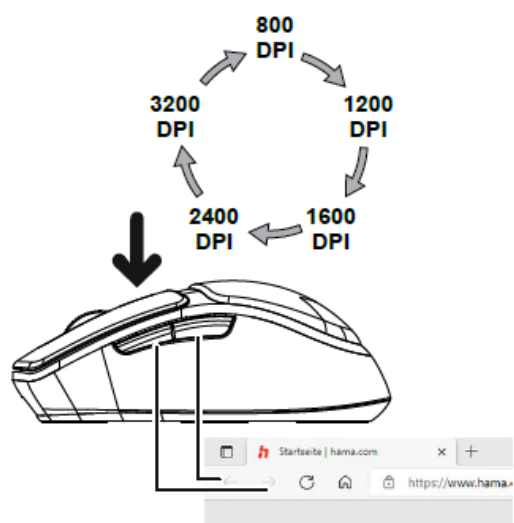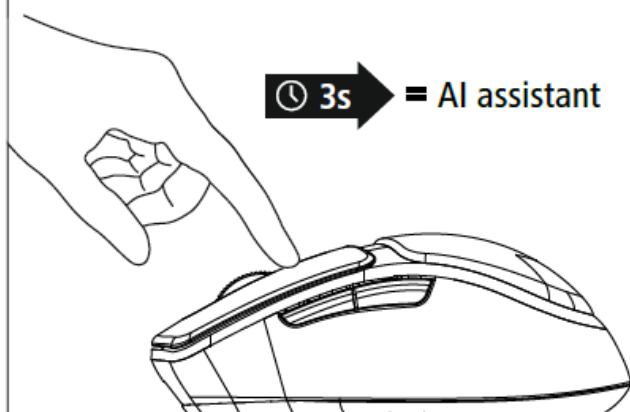D**E****F**

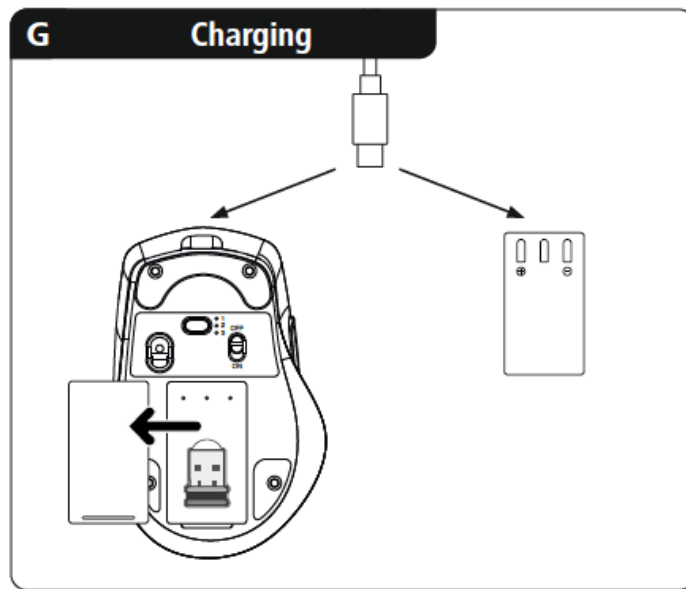 


Operating instruction

Read the warnings and safety instructions on the enclosed note before using the product.

Safety Notes

- Use the item only in moderate climatic conditions.
- Do not throw the battery or the product into fire.
- Do not tamper with or damage/heat/disassemble the batteries/rechargeable batteries.

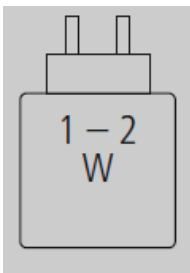

The power delivered by the charger must be between min 1Watts required by the radio equipment, and max 2Watts in order to achieve the maximum charging speed.

The standardized USB interface means that a charger with a higher output power can also be used.

Warning -changeable rechargeable battery

- Only use suitable chargers or USB ports to charge the product.
- Do not use defective chargers or USB ports and do not attempt to repair them.

- Do not overcharge or deep-discharge the product or rechargeable battery.
- Avoid storing, charging and using in extreme temperatures and at extremely low atmospheric pressures (such as at high altitudes).
- When stored over a long period of time, batteries should be charged regularly (at least every three months).
- Do not incinerate the rechargeable battery or the product.
- Do not tamper with or damage/heat/disassemble the batteries/ rechargeable batteries.
- Do not short-circuit the batteries/rechargeable batteries and keep them away from bare metal objects.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Keep the instructions for the correct choice of rechargeable battery/battery in the device operating instructions for future reference.

Battery charging

- The product contains a rechargeable battery.
- Charge the mouse fully before using it for the first time.
- If the Power LED is flashing or if there is no reaction/connection after switching it on, the mouse needs to be charged.
- Connect the supplied USB charging cable to the USB-C connection on the mouse.
- Connect the free plug on the USB charging cable to a suitable USB charger.
- To do this, consult the operating instructions for the USB charger you are using.
- The status LED now lights up solid red and the mouse is charging.
- Once the charging process is complete, the status LED goes out.
- The actual battery life will vary depending on how you use the device, the settings and the environmental conditions (batteries have a limited life).
- Only use the USB charging cable included for this product.

Warning – Specific instructions for battery change

- Do not allow children to change rechargeable batteries without supervision. Keep batteries/rechargeable batteries out of the reach of children.
- Only use the tools recommended in these operating instructions to avoid damage.
- Ensure that the rechargeable battery is as discharged if possible before replacing it.
- Ensure that the device is switched off and disconnected from the power supply before

removing the rechargeable battery.

- Avoid damage caused by electrostatic discharge when changing the rechargeable battery. Wear antistatic gloves if necessary.
- Refer to the operating instructions for information on the correct polarity for replacing the rechargeable battery. There is a risk of leakage or explosion if this is not observed.
- Dispose of replaced rechargeable batteries in accordance with the locally applicable safety and disposal regulations.
- Always follow the instructions for changing the rechargeable battery and consult specialised personnel in the event of problems or uncertainties.
- Attention! Hama accepts no responsibility for the safety of non-approved rechargeable batteries and no warranty for any resulting damage.

Specifications according to Regulation (EU) 2023/826

Information regarding energy consumption can be found at:

<https://support.hama.com/00173096>

Warranty Disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes.

Hereby, Hama GmbH & Co KG declares that the radio equipment type [00173096] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://support.hama.com/00173096>

- Frequency band(s) Maximum radio-frequency power transmitted 2.4 GHz Wireless Frequency range & EIRP 2.408- 2474 MHz, 0.87mW
- Bluetooth Frequency range & EIRP 2.402 – 2480 MHz, 0.35mW

Hama GmbH & CoKG 86652 Monheim /Germany

Service & Support



support.hama.com/00173096

www.hama.com/nep

The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Hama GmbH & Co. KG is under license. Other trademarks and trade names are those of their respective owners.“

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

FAQ

How do I change the DPI settings on the mouse?

You can adjust the DPI settings by pressing the corresponding DPI buttons on the mouse to cycle through the available options.

Can I use non-rechargeable batteries with the mouse?

It is recommended to use rechargeable batteries with the mouse. Follow the device operating instructions for the correct choice of batteries.

Documents / Resources

	hama WM-800 Multi Device Mouse [pdf] Instruction Manual WM-800 Multi Device Mouse, WM-800, Multi Device Mouse, Device Mouse, Mouse
---	--

References

- [User Manual](#)

📁 Device Mouse, Hama, mouse, Multi Device Mouse, WM-800, WM-800 Multi Device

📁 Hama Mouse

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos

are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.