



Hamaton NLP2024003 NLP Receiver

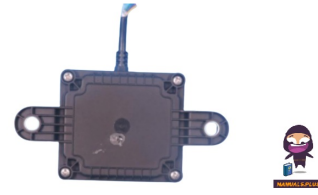

Hamaton NLP2024003 NLP Receiver Installation Guide


[Home](#) » [Hamaton](#) » Hamaton NLP2024003 NLP Receiver Installation Guide 

Contents

- [1 Hamaton NLP2024003 NLP Receiver](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Installation Process](#)
- [5 FCC](#)
- [6 FAQs](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Hamaton

Hamaton NLP2024003 NLP Receiver

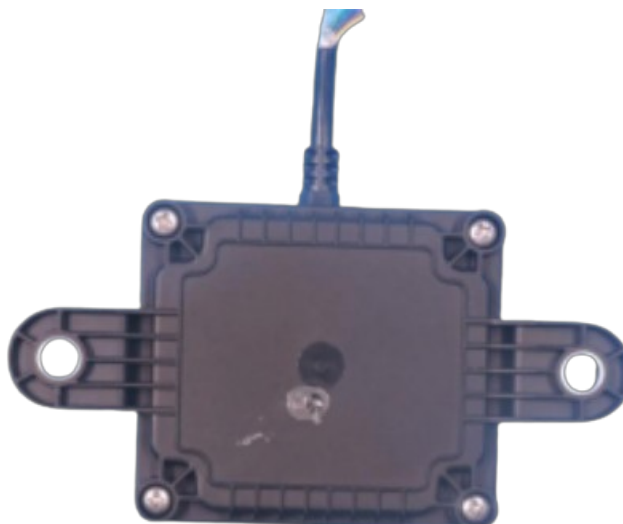

Specifications

- **Model:** NLP2024003
- **FCC Compliance:** Part 15
- **IC Compliance:** Industry Canada's license-exempt RSSs
- **Radiation Exposure Limits:** FCC and ISED standards
- **Minimum Distance:** 20cm between the radiator and the body

Product Usage Instructions

FCC Warning

This device complies with part 15 of the FCC Rules. To ensure proper operation and compliance, please follow these guidelines:

1. Do not cause harmful interference.
2. Accept any interference received.
3. Do not make changes or modifications without approval.
4. Reorient or relocate the receiving antenna if needed.
5. Increase the separation between the equipment and receiver if interference occurs.
6. Connect the equipment to a different circuit than the receiver's.
7. Consult the dealer or a professional technician for assistance.

IC Warning

This device complies with Industry Canada's regulations. Follow these instructions for proper usage:

1. Avoid causing interference.
2. Accept any interference that may occur.
3. Do not alter the device without proper authorization.
4. Maintain a minimum distance of 20cm between the equipment and your body.

Radiation Exposure

For your safety, ensure that the equipment is installed and operated with a minimum distance of 20cm between the radiator and your body at all times.

For the NLP receiver installed on the bottom of trailers/ trucks, we use screws to fasten the receiver on the beam of the truck, connect the cable to get the power supply and communicate with another device through plug in the connectors. Then fix the cable to the beam or rib to protect cables from damage.


- **Recommended tools:** electric screwdriver tool.

Installation Process

NLP receiver installation

- **a.** Find a place to install the LP receiver, which is flat to fasten the bracket and no surrounded by metal structures.
- **b.** Using an electric screwdriver tool to fasten the NLP receiver on a beam of the bottom of the truck and trailer.

- **c.** Fixing the cable to beam or rib to protect cables from damage.

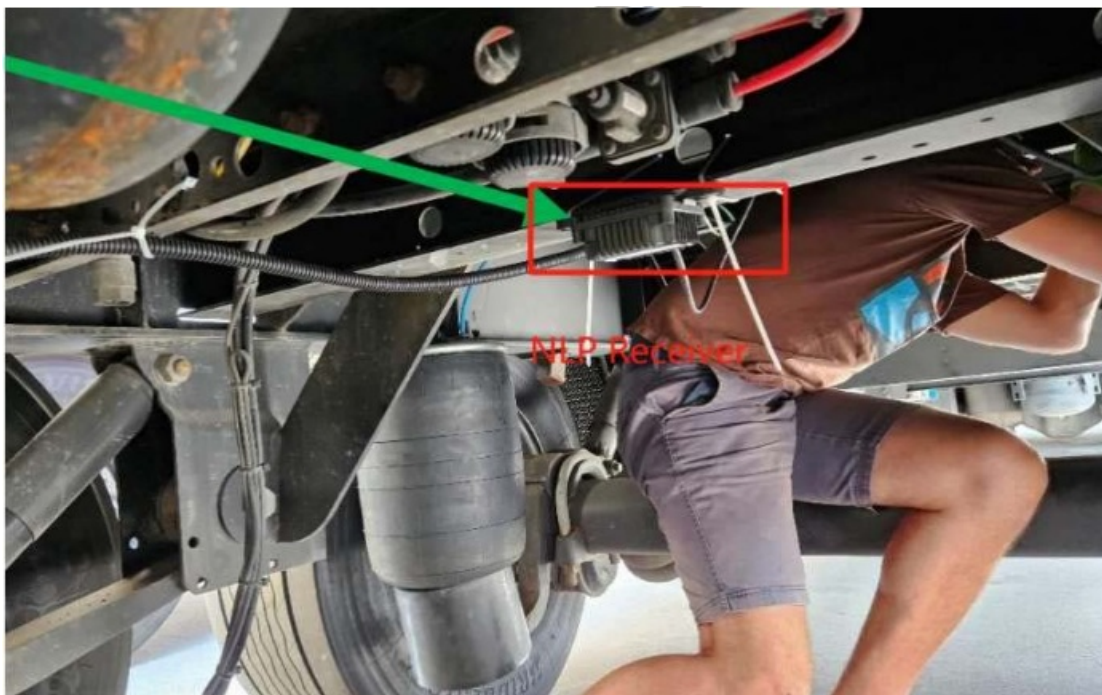

FCC

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference,
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body

IC Warning

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:


- 1. This device may not cause interference; and
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

FAQs

- **Q: What should I do if I encounter interference while using the device?**
A: If interference occurs, try reorienting the antenna,\ increasing the separation between devices, or consult a professional for assistance.

Documents / Resources

	Hamaton NLP2024003 NLP Receiver [pdf] Installation Guide NLP2024003, NLP2024003 NLP Receiver, NLP Receiver, Receiver
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.