

Hamaton NLP2024004 NLP Receiver



Hamaton NLP2024004 NLP Receiver Installation Guide

[Home](#) » [Hamaton](#) » Hamaton NLP2024004 NLP Receiver Installation Guide 

Contents

- [1 Hamaton NLP2024004 NLP Receiver](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 NLP receiver installation General](#)
- [5 Installation Process](#)
- [6 IC Warning](#)
- [7 FCC Warning](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Hamaton

Hamaton NLP2024004 NLP Receiver



Product Information

Specifications:

- Model: NLP2024004
- Compliance: Industry Canada's licence-exempt RSSs, FCC Part 15 Rules
- Radiation Exposure Limits: ISED and FCC approved for uncontrolled environment
- Minimum Distance: 20cm between the radiator and the body

Product Usage Instructions

IC Warning:

This device complies with Industry Canada's licence exempt RSSs. It must not cause interference and should accept any interference, including that which may cause undesired operation. Ensure a minimum distance of 20cm between the radiator and your body when installing and operating the equipment.

FCC Warning:

This device complies with part 15 of the FCC Rules. It should not cause harmful interference and must accept any received interference. Any changes or modifications not approved may void the user's authority to operate the equipment. Follow these steps if interference occurs:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different circuit from the receiver.
- Consult the dealer or an experienced radio/TV technician for assistance.

Frequently Asked Questions (FAQ):

- Q: What should I do if my device is causing interference?

A: If your device is causing interference, follow these steps:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different circuit from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

- Q: What is the recommended minimum distance between the radiator and the body?

A: The recommended minimum distance is 20cm to ensure compliance with radiation exposure limits and safe operation of the equipment.

NLP receiver installation General

For the NLP receiver installed on bottom of trailers/ trucks, we use screw to fasten receiver on the beam of truck, and connecting the cable to get power supply and communicating with other device through plug in the connectors. Then fix the cable to beam or rib to protect cables from damage.

Recommended tools:

- electric screwdriver tool.

Installation Process

NLP receiver installation

- a. Find a place to install NLP receiver, which is flat for fasten the bracket and no surrounded by metal structures.
- b. Using electric screwdriver tool to fasten NLP receiver on beam of bottom of truck and trailer.
- c. Fixing the cable to beam or rib to protect es from damage.



IC Warning

This device complies with Industry Canada’s licence-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Documents / Resources

	Hamaton NLP2024004 NLP Receiver [pdf] Installation Guide NLP2024004, NLP2024004 NLP Receiver, NLP Receiver, Receiver
---	---

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.