



handheld ALGIZ RT10 Rugged PC Tablet User Guide

[Home](#) » [handheld](#) » handheld ALGIZ RT10 Rugged PC Tablet User Guide 

handheld ALGIZ RT10 Rugged PC Tablet




Contents


- 1 [WHAT'S IN THE BOX](#)
- 2 [YOUR ALGIZ RT1](#)
- 3 [SIM/MICRO SD CARD](#)
- 4 [INSERT BATTERY](#)
- 5 [REMOVE BATTERY](#)
- 6 [Documents / Resources](#)
- 7 [Related Posts](#)

WHAT'S IN THE BOX



- ALGIZ R10 Main body

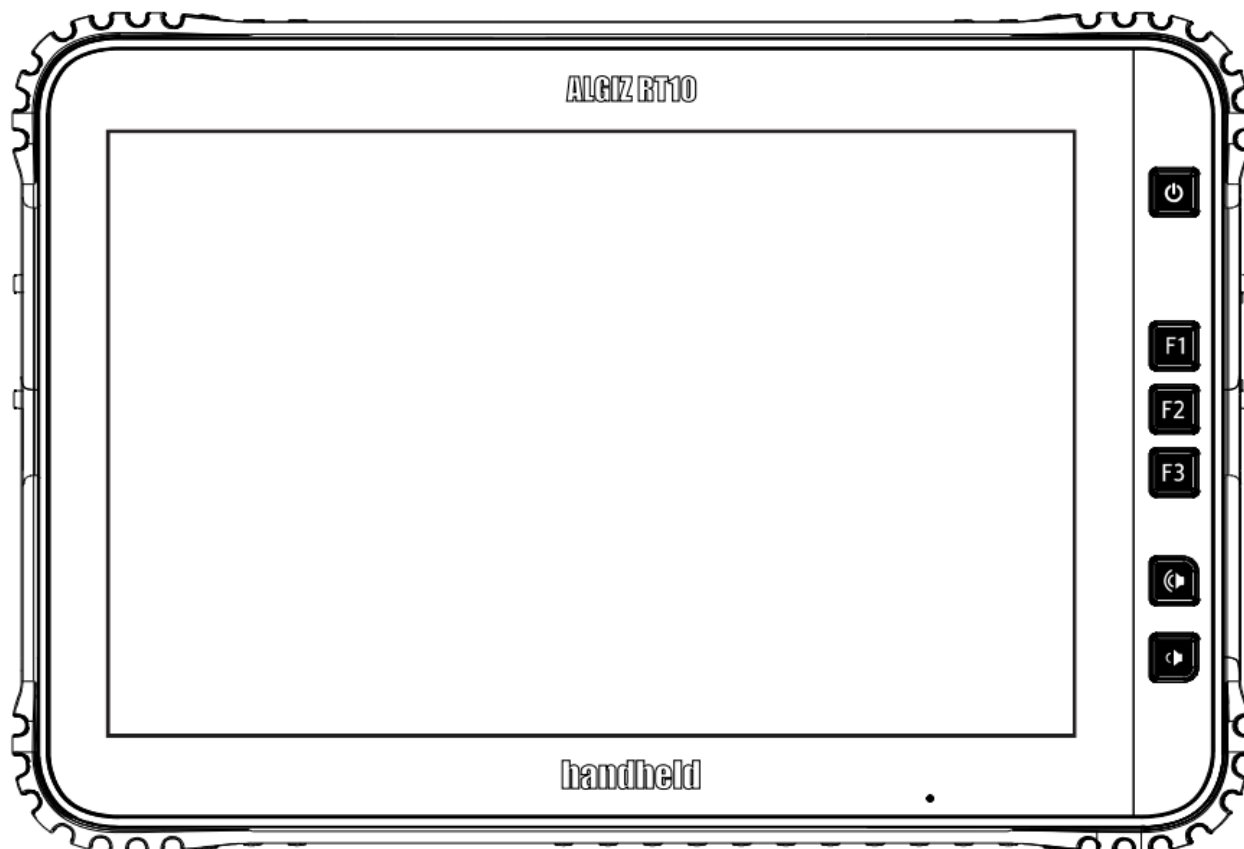

- Standard batt

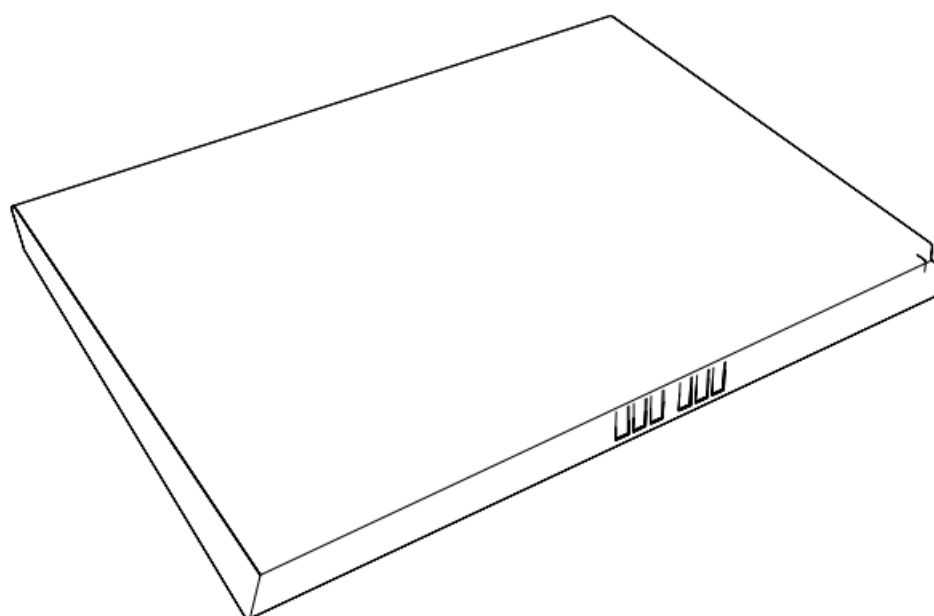


YOUR ALGIZ RT1

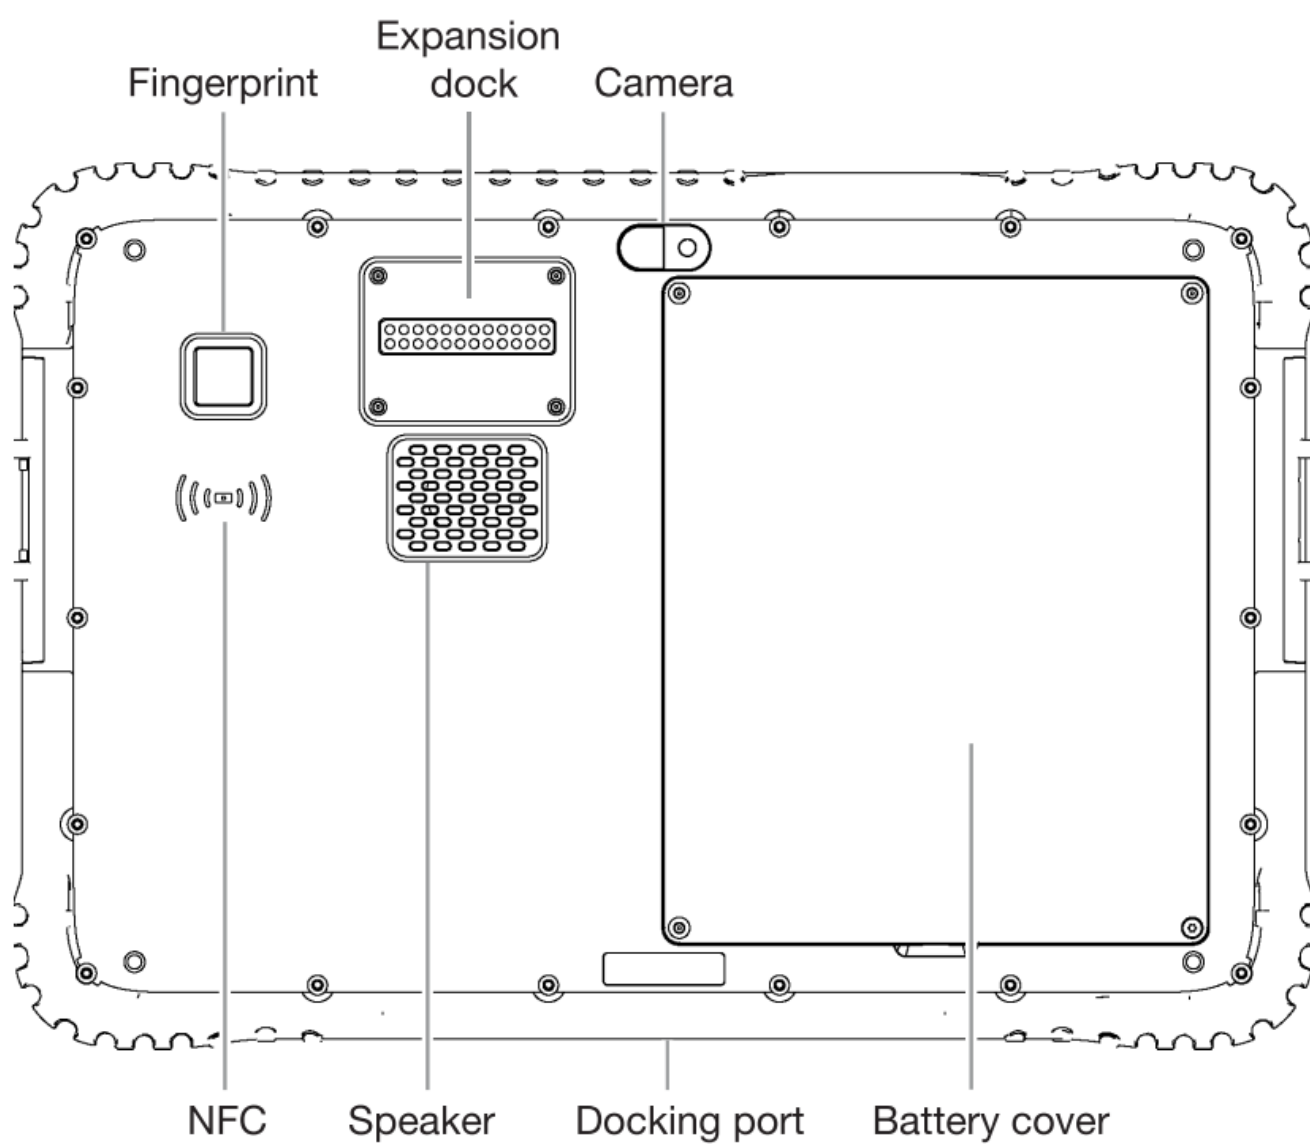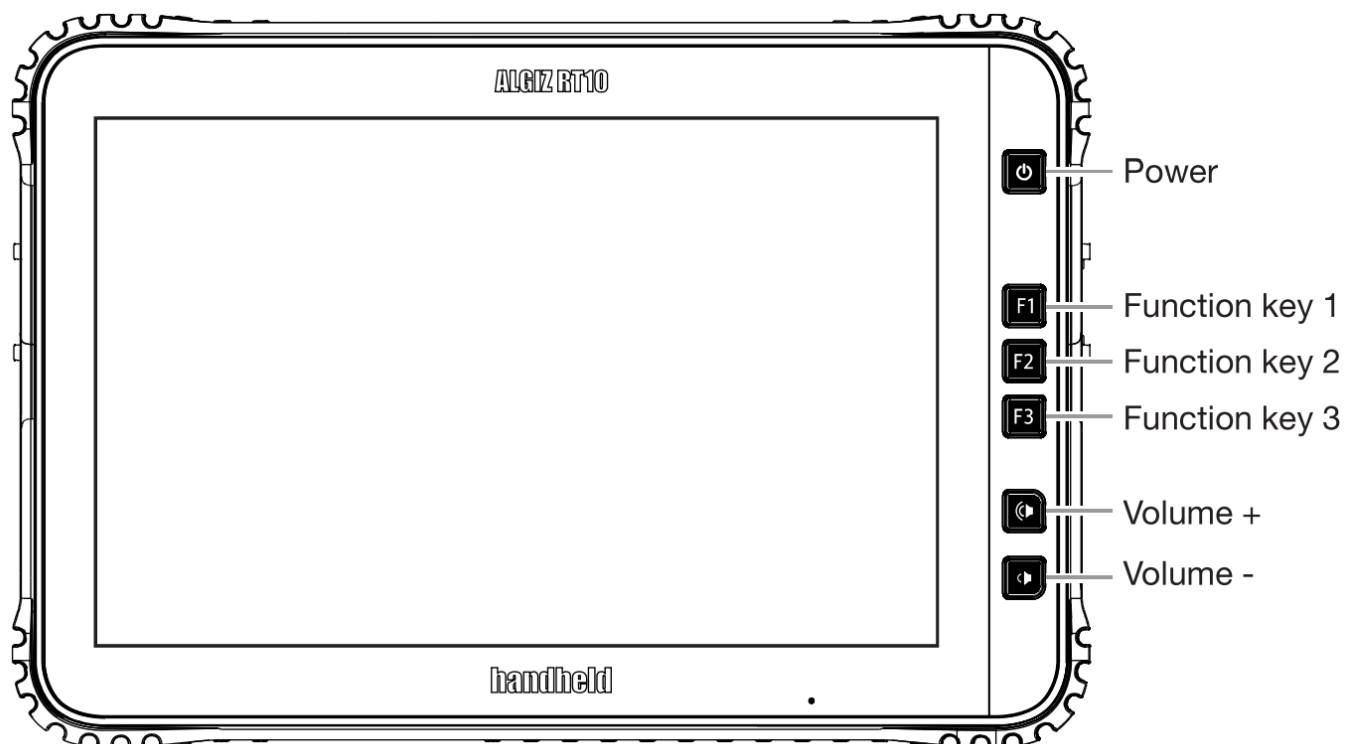

SIM/MICRO SD CARD


This is how you insert and remove the Nano SIM/micro SD.

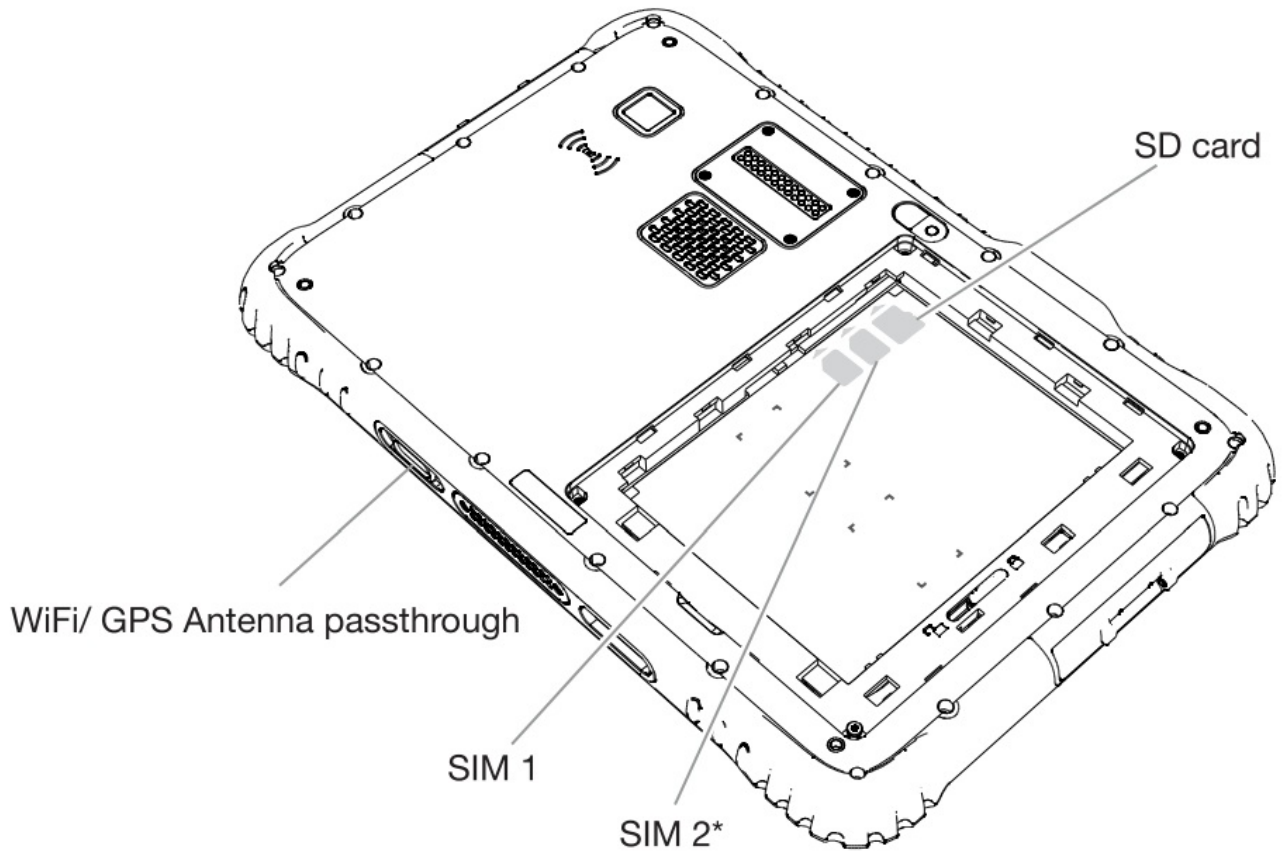

* SIM 2 only available on RT10-RF1-AXX models


INSERT BATTERY

To insert the battery

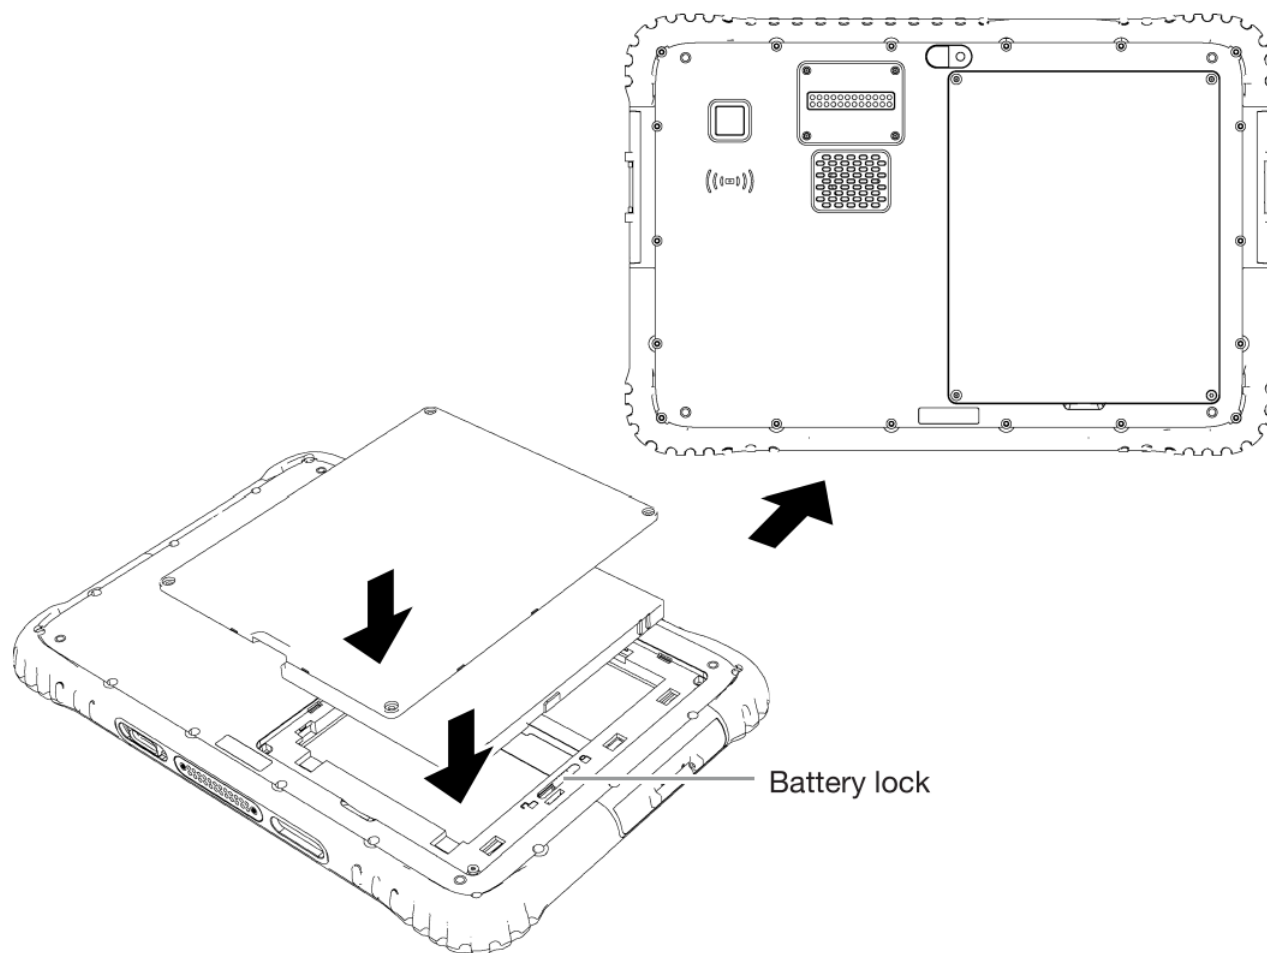

1. Insert the battery
2. Push the battery lock to the close position
3. Attach the battery cover
4. Insert and tighten battery cover screws

REMOVE BATTERY

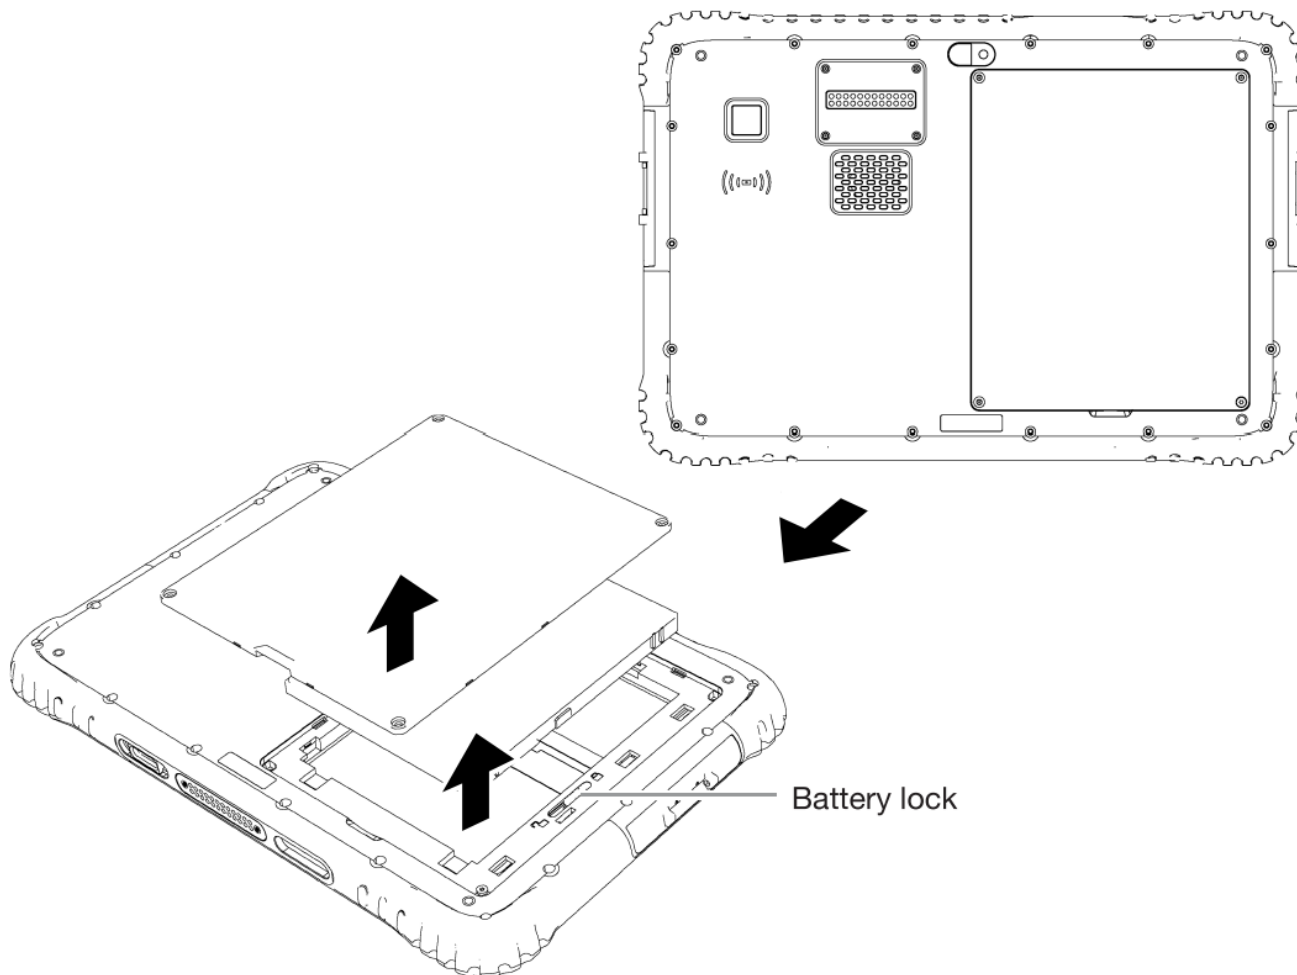

To remove the battery

1. Power off the device before removing the battery
2. Remove battery cover screws
3. Detach the battery cover
4. Push the battery lock to the open position
5. Remove the battery

Please go to www.handheldgroup.com/knowledgebase to download more information.

BSR idware GmbH
Jakob-Haringer-Str.3
A-5020 Salzburg
<https://www.bsr.at>
sales@bsr.at

BSR IDWARE
handheld

	handheld ALGIZ RT10 Rugged PC Tablet [pdf] User Guide RT8, RT10, ALGIZ RT10 Rugged PC Tablet, Rugged PC Tablet, PC Tablet, Tablet
---	--