

# Hanwha Techwin SMT-2212 Security Led Monitor User Manual

Home » Hanwha Techwin » Hanwha Techwin SMT-2212 Security Led Monitor User Manual





# **SECURITY LED MONITOR User Manual**

### **Contents**

- 1 Security LED Monitor
- 2 overview
- 3 Installation
- 4 Connecting with other device
- 5 Menu settings
- 6 Appendix
- 7 TROUBLESHOOTING
- 8 Documents / Resources
- 9 Related Posts

# **Security LED Monitor**

### Copyright

©2022 Hanwha Vision Co., Ltd. All rights reserved.

#### Trademark

Each of trademarks herein is registered. The name of this product and other trademarks mentioned in this manual are the registered trademark of their respective company.

# Restriction

Copyright of this document is reserved. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization.

Hanwha Vision makes the best to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided.

Use of this document and the subsequent results shall be entirely on the user's own responsibility. Hanwha Vision

reserves the right to change the contents of this document without prior notice.

\* Design and specifications are subject to change without prior notice.

### overview

### **IMPORTANT SAFETY INSTRUCTIONS**

Read these operating instructions carefully before using the unit.

Follow all the safety instructions listed below.

Keep these operating instructions handy for future reference.

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- Clean the contaminated area on the product surface with a soft, dry cloth or a damp cloth.
   (Do not use a detergent or cosmetic products that contain alcohol, solvents or surfactants or oil constituents as they may deform or cause damage to the product.)
- 7. Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding- type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. if the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### **Standards Approvals**



• Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### **BEFORE START**

You have to keep in mind the following notices:

- Hanwha Vision retains the copyright on this manual.
- This manual cannot be copied without Hanwha Vision's prior written approval.
- We are not liable for any or all losses to the product incurred by your use of non-standard product or violation of instructions mentioned in this manual.
- Contact the retailer for troubleshooting help.

### **SAFETY INSTRUCTIONS**


Power		
Do not use a damaged power cord or plug or a damaged or loose power outlet.  ~ Otherwise, this may result in elec tric shock or fire.	Do not touch the power plug with w et hands when removing or pluggin g the plug into the outlet.  ~ Otherwise, this may result in elec tric shock	Make sure to connect the power co rd to a grounded power outlet.  ~ Otherwise, it may result in electri c shock or personal injury.
Ensure that the power plug is plugged into the power outlet firmly and correctly.  ~ Otherwise, this may result in fire.	Do not forcefully bend or pull the power plug and do not place any heavy material on it.  - Otherwise, this may result in fire.	Do not connect multiple appliances to the same power outlet.  ~ Otherwise, this may cause fire du e to overheating.
Do not disconnect the power cord while using the product.  ~ Otherwise, this may result in damage to the product due to electric shock.	To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefor e the mains plug shall be readily operable.  ~ Otherwise, this may cause electric shock or fire.	Use only the power cord provided by our company. Do not use the provided power cord of another product.  - Otherwise, this may result in fire or electric shock.

Connect the power plug to a wall outlet that can be easily reached.  ~ When a problem occurs with the product, you must unplug the power plug to cut the power off completely. You c annot cut the power off completely using only the power button on the product.		
Installation		
Ensure that at least two persons lift and move the product.  ~ Otherwise, it may be dropped an d causepersonal injury, and/ or da mage the product.	When installing the product in a cab inet or rack, make sure that the fro nt end of the bottom of the product does not project out.  ~ Otherwise, it may fall or cause pe rsonal injury.  ~ Use a cabinet or rack of a size ap propriateto the product.	Do not place candles, mosquito rep ellant, cigarettes and any heating a ppliances near the product.  ~ Otherwise, this may result in fire.
Keep heating appliances as far away from the power cord or the product as possible.  ~ Otherwise, this may result in electric shock or fire.	Do not install it in a badly ventilated location such as a bookcase or closet.  ~ Otherwise, this may result in fire due to an increase in the internal temperature.	When putting the product down, make sure to put it down softly.  Otherwise, this may result in damage to the screen display.
Do not place the front of the produc t on the floor.  ~ Otherwise, this may result in damage to the screen display.	Ensure that an authorized installati oncompany installs the wall mount.  ~ Otherwise, it may fall and cause personal injury.  ~ Make sure to install the specified wall mount.	Install your product in a well ventilated location. Ensure that ther e is a clearance of more than 4 inche s (10 cm) from the wall.  ~ Otherwise, it may result in fire du e to an increase in the internal temperature.
Ensure that the packaging vinyl is kept away from children.  ~ Otherwise, it may result in seriou s harm (suffocation) if children play with it.	If the height of your monitor is adjustable, do not place any object or part of your body on the stand when lowering it.  This may cause damage to the product or the person carrying it.	
Clean		

Do not spray cleaner directly onto the surface of the product.  Cotherwise, this may result in the discoloration and distortion of the structure and the screen surface may peel off.	When cleaning the power plug pins or dusting the power outlet, clean it with a dry cloth.  ~ Otherwise, it may result in fire.	When cleaning the product, make s ure to disconnect the power cord.  ~ Otherwise, it may result in electric shock or fire.
When cleaning the product, discon nect the power cord and clean it wit h a soft, dry cloth.  ~ (Do not use chemicals such as w ax, benzene, alcohol, thinner, mos quito repellant, lubricant, or cleane r.) These may change the appearance of the product surface and peel off the indication labels on the product.	Since the product housing is easilyscratched, make sure to use the specified cloth only.	When cleaning the product, do not spray water directly onto the main body of the product.  ~ Ensure that water does not enter the product and that it is not wet.  ~ Otherwise, this may result in elec tric shock, fire or a malfunction.


# **PACKAGE CONTENTS**

Please unwrap the product, and place the product on a flat place or in the place to be installed. Please check the following contents are included in addition to the main unit. Accessory category and quantity may differ depending on sales region.

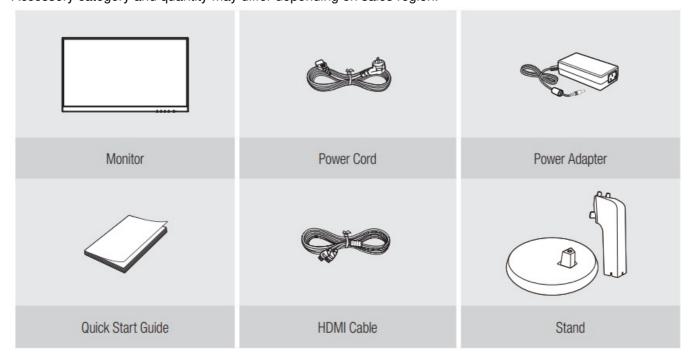


# NAMES AND FUNCTIONS OF EACH PART

# **Front**

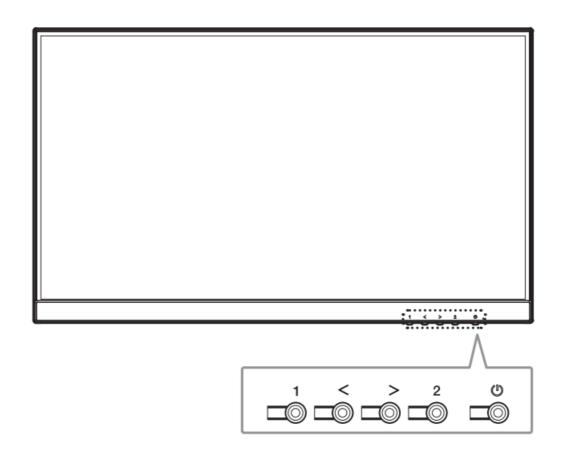

Button		Description of functions
Panel key	1	When the button is pressed while the product is on, the menu screen appears.  `Press the [ 2 ] button to exit the screen adjustment menu.
	< □⊚	Press the button while the menu screen is displayed to move the menu or adjust the value.  ` If you press the button while the menu screen is not displayed, the <external input=""> menu appears.</external>
	> ©	Press the button while the menu screen is displayed to move the menu or adjust the value.  ` If you press the button while the menu screen is not displayed, the <brightne ss=""> menu appears.</brightne>
	2	If you press the button while the menu screen is displayed, the selection function is enabled.
	©	Turns the power to the product on/off.

# **Back**

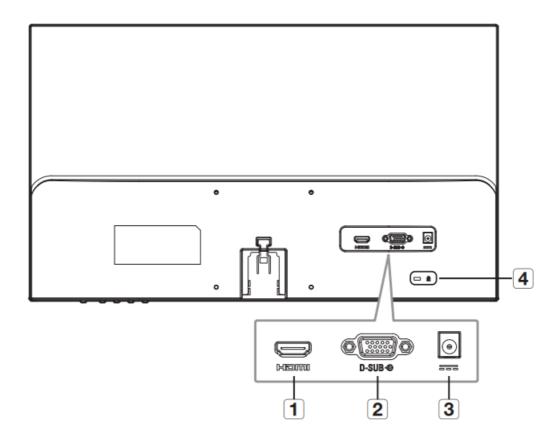


Name Description of functions		Description of functions
1	HDMI	HDMI input terminal
2	VGA	VGA input terminal
3	Power	Terminal to connect power.
4	Anti-theft lock	This device can be used safely in public places.

# **Anti-theft Lock**

- The locking device shape and locking method depend on the manufacturer. Please refer to the user guide provided with your anti-theft locking device for details.
- The following images are for reference only. Real-life applications may differ.

# To lock an anti-theft locking device

- 1. Fix the cable of your anti-theft locking device to a heavy object such as a desk.
- 2. Put one end of the cable through the loop on the other end.
- 3. Insert the locking device into the anti-theft lock slot at the back of the product.
- 4. Lock the locking device.
- 5. An anti-theft locking device can be purchased separately.
- 6. Refer to the instruction manual supplied with the lock for detailed information on how to use it.
- 7. You can purchase a lock at most stores specializing in electronics, or via the Internet.

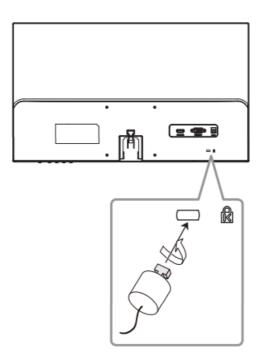

# Installation

# Please take note of the followings before using this product.

- Do not use the product outdoor.
- Do not spill water or liquid in the connection part of the product.
- Do not impose the system to excessive shock or force.
- Do not pull out the power plug forcefully.
- Do not disassemble the product on your own.
- Do not exceed the rated input/output range.
- Use a certified power cord only.
- For the product with an input ground, use a grounded power plug.

# **BEFORE INSTALLING THE PRODUCT**


Ventilation requirement

If the product is installed in a poorly ventilated area, it might be damaged due to the temperature rising inside the product.


Ensure there is enough space around the product before installation.

Vertical wall mount condition

- A. Minimum 40 mm
- B. Ambient temperature Measuring point <35°C

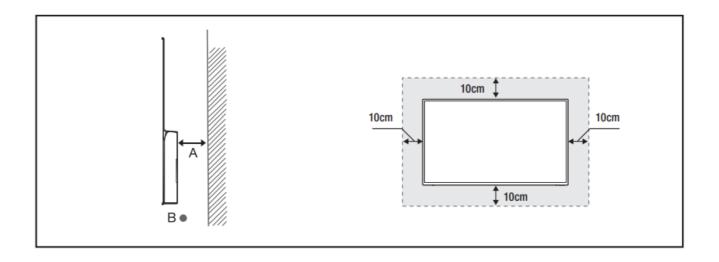

# Installation conditions for standing monitors

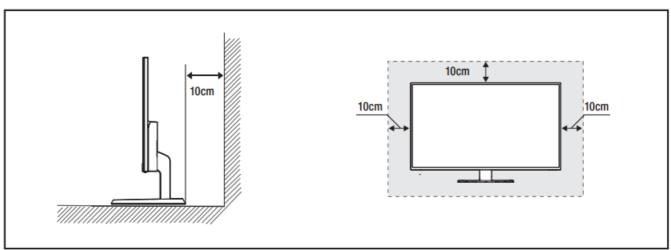


# **ASSEMBLING THE STAND**


Before assembling the product, make sure that its screen is facing down when placing it on a flat and safe surface.

Place the product on a soft cloth or product wrapping paper to protect it before installation.

1. Assemble the base and neck of the stand.

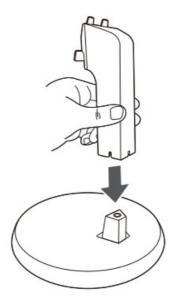


2. Align the grooves on the neck with the grooves of the monitor, and attach them together.

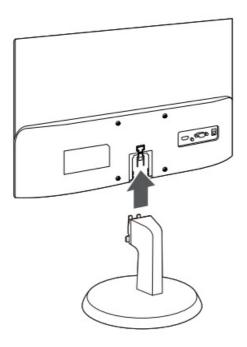


# For detaching the stand,

1. Press the button behind the monitor to detach the stand from the monitor.

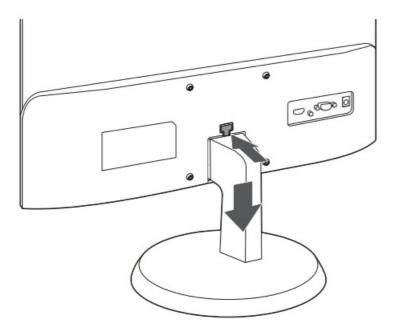

2. Push the fixing hook on the stand base to detach the neck from the stand base.

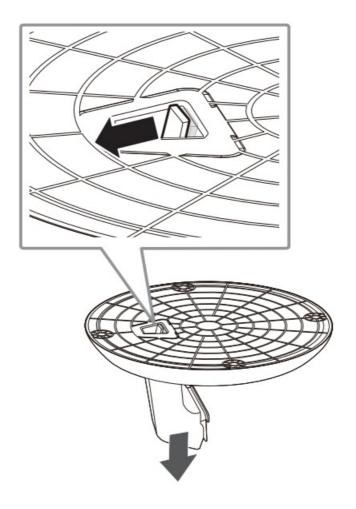

### **INSTALLING WALL MOUNT PARTS**

Installing Wall Mount Kits


The wall mount kit (sold separately) allows you to hang the product on a wall.

For more information on wall mounting, refer to the owner's manual supplied with the wall mount parts. When installing the wall mount, seek the help of a technician.

Hanwha Vision is not responsible for any damage to the product or injury to the user or others caused by any accident due to a user's attempt to install the product.

# **Wall Mount Kit Specifications (VESA)**

- Install the wall mount kit on a solid wall perpendicular to the floor.
- Please refer to the nearest store when installing on other materials.
- Installing on an inclined wall may cause the product to fall, which can result in serious injury.
- When using a VESA mount, select a product that can hold 4 times the weight of the monitor.

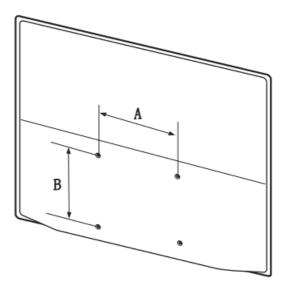

- When you purchase our wall mount kit, you will find a detailed installation guide and all parts required for assembly.
- Do not use screws that are longer than the standard dimensions or that do not conform to the VESA standard screw specifications. Using screws that are too long may damage the inside of the product.
- For wall mount parts that do not conform to the VESA standard screw specifications, the screw length may vary depending on the wall mount specifications.
- Do not over-tighten the screws. The product may be damaged, or may fall, resulting in injury.
- Hanwha Vision is not responsible for any damage to the product or injury to the user or others caused by any accident due to a user's attempt to install the product.
- Hanwha Vision is not responsible for damage to the product or injury to the user caused by using noncompliant or non-VESA wall mount parts, or by the customer not following the product installation instructions.
- When hanging on a wall, two people should always lift the product.
- The standard dimensions of the wall mount kit are shown in the table below. [Unit: mm]

Model name	VESA dimensions (A * B)	Standard screws	Quantity
SMT-2212	100 × 100	M4/L8	4

• Do not install the wall mount kit with the product turned on. This may lead to injury due to electric shock.

# Connecting with other device

### THINGS TO CHECK BEFORE CONNECTION


Check before connecting

- When connecting, refer to the instruction manual of the product to be connected. The number and position of external devices may differ depending on the product.
- Do not connect the power until all connections are complete. Connecting the power supply during connection may damage the product.
- Check the type of terminal behind the product you want to connect.


### **CONNECTING WITH EXTERNAL DEVICES**

- Connect the power cable after all cables have been connected. Disconnect the power cable before connecting external devices.
- You can connect the product to external devices in various ways. Select the correct connection method for your external devices.

# VGA (D-SUB) cable connection method

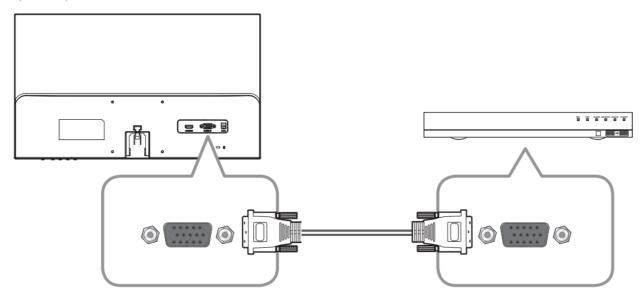

### **HDMI** cable connection method

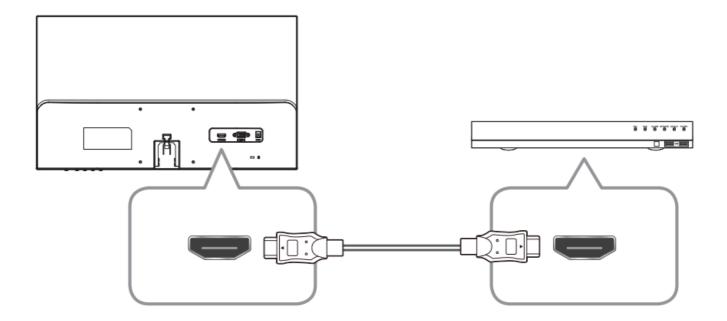

# Menu settings

The screen adjustment menu can be set.

# **SCREEN (OSD) MENU SETTINGS**

You can adjust menu settings by using the panel keys on the monitor.

- 1. Press the [1] button to display the main menu.
- 2. Press the </> buttons to select the main menu, and then press the [1] button.
- 3. Press the


- 4. Press the < / > buttons to adjust the adjustment value.
- 5. Press the [2] button to exit.



To return to the previous screen, press the [2] button.

- If you do not press any buttons for a certain period of time, the OSD menu screen will disappear.
- You can set the time up to 60 seconds in <OSD settings> ; <OSD Timer>.

User: Red/Green/Blue values can be adjusted manually.

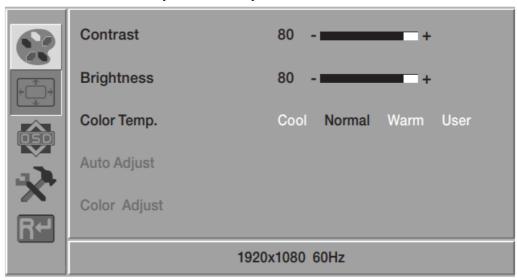


- Auto Adjust: Adjust the screen's up and down / left and right ratio automatically. (Only available in VGA mode.)
- Color Adjust: Adjust the light and color of the monitor automatically. (Only available in VGA mode.)

# **VIDEO SETTINGS**

Sets the screen brightness, color, etc.

- 1. Press the [1] button to enter the main menu.
- 2. Press the < / > button to select [ icon, and then press the [ 1 ] button.

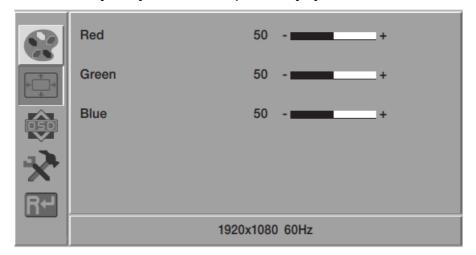


- Contrast : Adjusts the difference in brightness between the object and the environment.
- Brightness : Adjusts the brightness of the screen.
- Color Temp. : The color temperature can be adjusted and used depending on the monitor color.

You can select from Cool, Normal, Warm, User.

# **SCREEN SETTINGS**

The screen's size and position can be adjusted. (The menu for screen settings is only available in VGA mode.)

- 1. Press the [1] button to enter the main menu.
- 2. Press the </> button to select [ ] icon, and then press the [ 1 ] button.

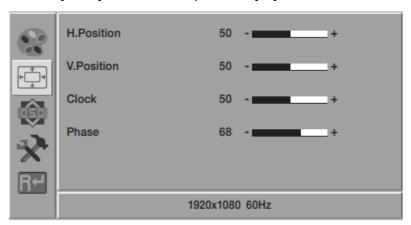


- H.Position: Adjusts the position of the screen to the left or right.
- V.Position: Adjusts the position of the screen up or down.
- Clock: Adjusts the clock when it is too high.
- Phase: Adjusts the focus.

### **OSD SETTINGS**

# Sets up OSD values.

- 1. Press the [1] button to enter the main menu.
- 2. Press the </> button to select [ icon, and then press the [1] button.

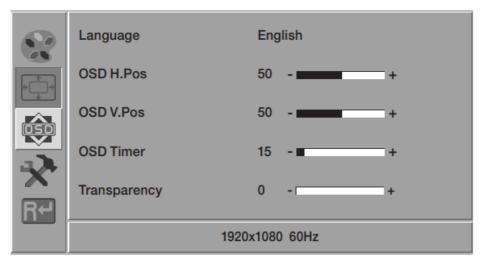

- Language : Select the screen language. The initial value is set to <English>.
- OSD H.Pos: Moves the screen of the menu to the left or right.
- OSD V.Pos: Moves the screen position of the menu up or down.
- OSD Timer: The menu screen disappears if the screen does not change for a certain period of time.

• Transparency: Sets the transparency of the menu screen.

### **SYSTEM SETTINGS**

Configures the system.


- 1. Press the [1] button to enter the main menu.
- 2. Press the </> button to select [ ] icon, and then press the [1] button.

	Mode	PC	Game	Movie
	Signal Source	VGA	HDMI	
050	Aspect Ratio	16:9	Auto	4:3
4	DCR	On	Off	
RE	Overdrive	On	Off	
	1920	x1080 6	60Hz	

- Mode : Select a screen mode appropriate for your viewing environment.
- PC: A screen mode for PCs.
- Game : A screen mode appropriate for games.
- Movie : A screen mode appropriate for movies.


# **RESET**

Resets the monitor settings to default.

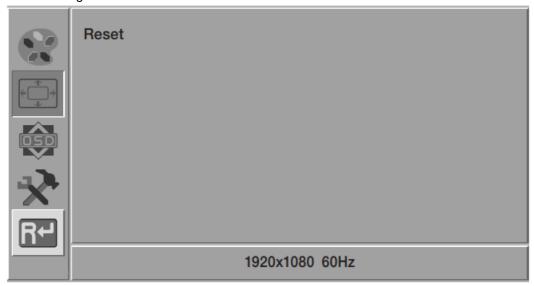

# **Appendix**

# **PRODUCT OVERVIEW**

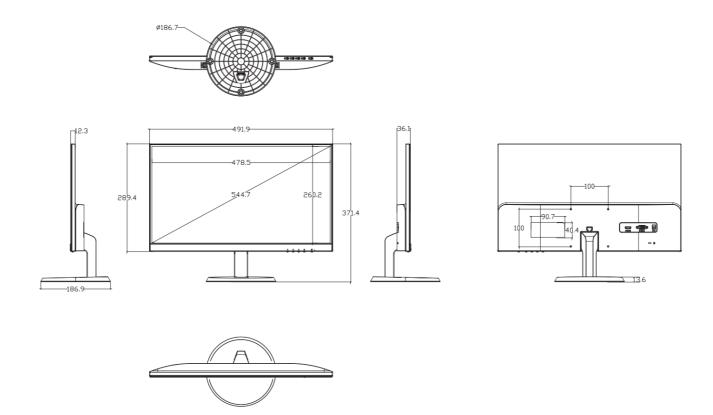

# **TROUBLESHOOTING**

Problems and Symptoms	Troubleshooting
The screen wars and disappears repeatedly.	Check the cable connection between the product and the external deice. and check the locking status of me connection deice.
The screen will not switch on.	Confirm that the power cable s properly connected.
The screen seems to be flowing darn.	Check the cable connected to the product
The screen is too bright. The screen is too d ark	Adjust the brightness and contrast.
The product spontaneously turns itself off.	Confirm that the power cable is firmly connected to the product and tome power outlet.
The image on the screen appears strange.	<ul> <li>Video compression in scenes with fast transitions. such as sports or action movies. can cause screen distortion.</li> <li>Low signal level or poor quality may cause screen distortion. This is not a product issue.</li> <li>Cellular phones within a 1 meter radius may cause interference with analog/ digital products.</li> </ul>
The brightness and cola are strange.	Adjust the screen option from the brightness settings.     Reset the screen wit the default screen settings.
I can see a dotted line on the edge of the scr een.	If the screen is the original size. by changing it to 16:9.
I can see lines (red. green. blue) on the screen.	This occurs due to a fault in the DATA SOURCE DRNER IC of the monitor. Contact Hanivha Vision Service Center to sohe the problem.
The screen is unstable and stops.	• Screen pauses may occur when the resolution is different from the reanimenced resolution. a when the signal is unstable. To so he this problem. charge the resolution of the external deite to th e recommended resolution.
The image is not displayed on the full screen.	Try adjusting the screen size option of the product or external de 'e
The product smells of plastic.	This is a normal smell. and will disappear over time.
The monitor is titted to the We.	Separate the stand from the axed and reassemble it.

Hanwha Vision cares for the environment at all product manufacturing stages, and is taking measures to provide customers with more environmentally friendly products.

The Eco mark represents Hanwha Vision's devotion to creating environmentally friendly products, and indicates that the product satisfies the EU RoHS Directive.

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This

product and its electronic accessories should not be mixed with other commercial wastes for disposal.

# Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.) This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



### **Documents / Resources**



Hanwha Techwin SMT-2212 Security Led Monitor [pdf] User Manual SMT-2212 Security Led Monitor, SMT-2212, Security Led Monitor, Led Monitor, Monitor

Manuals+.