



HANYOUNG NUX HY-1000 Analog Temperature Controller Instruction Manual

[Home](#) » [HANYOUNG NUX](#) » HANYOUNG NUX HY-1000 Analog Temperature Controller Instruction Manual 

Contents

- [1 HANYOUNG NUX HY-1000 Analog Temperature Controller](#)
- [2 Analog Temperature Controller HY-1000/2000](#)
- [3 Product Specifications](#)
- [4 Safety Information](#)
- [5 Product Usage Instructions](#)
- [6 Connection diagram](#)
- [7 Safety information](#)
- [8 Suffix code](#)
- [9 Function descriptions](#)
- [10 Specifications](#)
- [11 Dimension and Panel cutout](#)
- [12 Connection diagram](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

HANYOUNG nux

HANYOUNG NUX HY-1000 Analog Temperature Controller



Analog Temperature Controller HY-1000/2000

Thank you for purchasing Hanyoung Nux Analog Temperature Controller. Please read the instruction manual carefully before using this product, and use the product correctly. Also, please keep this instruction manual where you can view it any time.

Product Specifications

Power supply voltage	110 V a.c. / 220 V a.c. 60
Voltage variation rate	
Power consumption	Approx. 3 VA max
Input	Thermocouple, Resistive
Control method	Proportional control
Setting method	Analog Setting
Display method	Non-Display
Control output	Relay : 1 C, 277 V a.c. 6 A
Setting accuracy	Proportional band 3% of Max. Range (fixed)
Proportional cycle	
External input resistance	
Dielectric strength	2000 V a.c. 60 for 1 min
Relay life expectancy	Relay Output: Approx. 20 sec, Contact Point Output: Mechanical Life Span: above 10 million times (with no load), Electrical Life Span: 100 thousand times
Weight (g)	HY-1000: 72.0, HY-2000: 96.0

Safety Information

Please read the safety information carefully before the use and use the product correctly. The alerts declared in the manual are classified into Danger, Warning, and Caution according to their importance.

Danger	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
Warning	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
Caution	Indicates a potentially hazardous situation which, if not avoided, may result in minor injury or property damage.

Product Usage Instructions

The control method of this product operates in proportional control. Proportional Control is that an output capacity regarding a setting value (SV) is proportionally operated by a deviation. The width which the output is varied within 0 ~ 100 % is called Proportional Band (PB). Therefore, for Reverse Action, if $PT =$

Present (Process) Temperature:

- $PT < PB$ – Output capacity 100%
- $PT > PB$ – Output capacity 0%
- $PT = PB$ – Output capacity 50%

Connection diagram

See the manual for connection diagram instructions.

Analog Temperature Controller HY-1000/2000

Thank you for purchasing Hanyoung Nux products. Please read the instruction manual carefully before using this product, and use the product correctly. Also, please keep this instruction manual where you can view it any time.

HANYOUNGNUX CO.,LTD

28, Gilpa-ro 71beon-gil, Michuhol-gu, Incheon, Korea TEL : +82-32-876-4697

<http://www.hanyoungnux.com>

Safety information

Please read the safety information carefully before the use, and use the product correctly.

The alerts declared in the manual are classified into Danger, Warning and Caution according to their importance.

DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury
WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor injury or property damage

DANGER

- The input/output terminals are subject to electric shock risk. Never let the input/output terminals come in contact with your body or conductive substances.

WARNING

- If there is a concern about a serious accident caused by a malfunction or abnormality of this product, please install an external protection circuit and devise a scheme for preventing an accident.
- This product does not contain an electric switch or fuse, so the user needs to install a separate electric switch or fuse externally. (Fuse rating : 250 V a.c. 0.5 V a.c.)
- To prevent deflection or malfunction of this product, apply a proper power voltage in accordance with the rating.
- To prevent electric shock or malfunction of product, do not supply the power until the wiring is completed.
- Since this product is not designed with explosion protective structure, do not use it any place with flammable or explosive gas.
- Do not decompose, modify, revise or repair this product. This may be a cause of malfunction, electric shock or fire.
- Reassemble this product while the power is OFF. Otherwise, it may be a cause of malfunction or electric shock.

CAUTION

- The contents of this manual may be changed without prior notification.
- Before using the product you purchased, make sure that it is exactly what you ordered.
- Make sure that there is no damage or abnormality of the product during the delivery.
- Use this product within the range of the operating ambient temperature, 0 ~ 50 °C (When it is closely installed Max 40 °C) and ambient humidity, 35 ~ 85 % R.H (No condensation). Do not use this product at any place with occurring corrosive (especially noxious gas or ammonia) or flammable gas.
- Do not use this product at any place with direct vibration or impact.
- Do not use this product at any place with liquid, oil, medical substances, dust, salt or iron contents. (Use at Pollution level 1 or 2)
- Do not polish this product with substances such as alcohol or benzene. (Use neutral detergent.)
- Do not use this product at any place with a large inductive difficulty or occurring static electricity or magnetic noise.
- Do not use this product at any place with possible thermal accumulation due to direct sunlight or heat radiation.

- Install this product at place under 2,000 m in altitude.
- When the product gets wet, the inspection is essential because there is danger of an electric leakage or fire.
- In case of inputting thermocouple, use a compensating cable. (If using a normal wire, there is a possibility of occurring temperature error.)
- For R.T.D input, use a cable which is a lead wire has small resistance and resistances of three wires shall be the same. (If the three wires have different resistances then there will be a temperature error.)
- To avoid an effect of inductive noise to input signal cables, use the product after separating the input signal cables from power, output and load cables.
- Separate an input signal cable from an output signal cable. If separating is not possible, please use the input signal cable after shielding it.
- Use non-earth sensor with thermocouple. (In case of using earth sensor, there is a possibility of occurring malfunction caused by a short circuit.)
- If there is excessive noise from the power supply, using insulating transformer and noise filter is recommended. The noise filter must be attached to a panel which is already connected to a ground and the wire between the filter output side and power supply terminal must be short as possible.
- If twisting the power cables closely together then it is effective against noise.
- If the alarm functions are not properly set then it will not be output when the product is malfunctioning. Therefore, make sure its movements are properly working before the operation.
- Turn the power OFF when replacing a sensor.
- Use an auxiliary relay in case of high frequent operation such as proportional operation or etc. its life span will be shorter if nnecting a load without permissible rating of output relay. In this case, using SSR output type is recommended.
 - Using Electromagnetic Switch: Proportional Cycle set it above 20 sec.
 - Life Span of Contact Point Output: Mechanical Life Span: above 10 million times (with no load)
 - Electrical Life Span: 100 thousand times (250 Va.c.3A:with the rated load)
- Do not connect anything to the unused terminals.
- After checking the polarity of terminal, connect wires at the correct position.
- When this product is connected onto a panel, use a circuit breaker or switch approved with IEC60947-1 or IEC60947-3.
- Install a circuit breaker or switch at near place for convenient use.
- Write down on a label that if the circuit breaker or swite operating then the power will be disconnected since the circuit breaker or switch is installed. is
- For the continuous and safe use of this product, the periodical maintenance is recommended.
- Some parts of this product have limited life span, and others are changed by their usage.

Suffix code

Model	Code						Description
HY-	<input type="checkbox"/> -	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Analog temperature controller
Appearance	1000						72 mm x 72 mm
	2000						96 mm x 96 mm
input	K						TC K
	P						Pt 100
Control output	M						Relay contact output
Control operation	R						Reverse action (heating) control
Power	A						110 V a.c. / 220 V a.c.
Range code							See range code table


The control method of this product operates in proportional control.

Range code

Division	Code	Range (°C)
Thermocouple	04	0 ~ 400
	12	0 ~ 1200
RTD	02	0 ~ 200
	04	0 ~ 400

Function descriptions

Proportional control

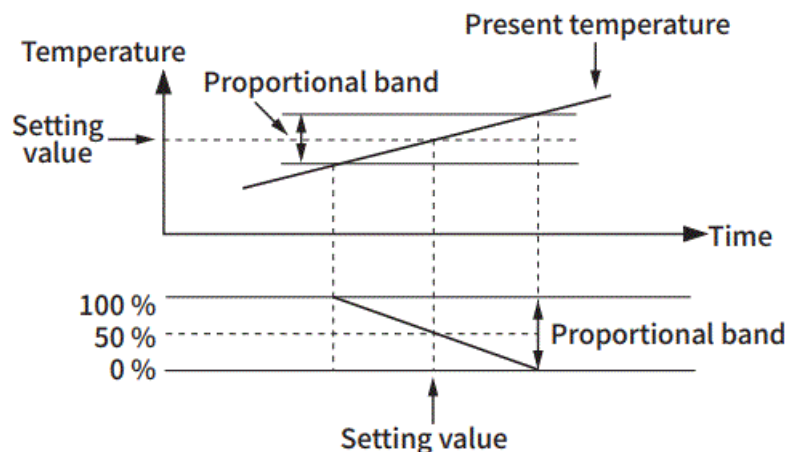




- Proportional Control is that an output capacity regarding a setting value (SV) is proportionally operated by a deviation.
- The width which the output is varied within 0 ~ 100 % is called Proportional Band (PB).
- Therefore, for Reverse Action, if PT = Present (Process) Temperature.
 - $PT < PB \rightarrow$ Output capacity 100 %
 - $PT > PB \rightarrow$ Output capacity 0 %
 - $PT = PB \rightarrow$ Output capacity 50 %

Specifications





Specifications	
Power supply voltage	110 V a.c. / 220 V a.c. 60
Voltage variation rate	Rated Voltage $\pm 10\%$
Power consumption	Approx. 3 VA max
Input	Thermocouple, Resistive
Control method	Proportional control
Setting method	Analog Setting
Display method	Non Display
Control output	Relay : 1 C, 277 V a.c. 6 A
Setting accuracy	Within $\pm 2.0\%$ of Max. Range
Proportional band	3 % of Max. Range (fixed)
Proportional cycle	RTelay Output : Approx. 20 sec hseirmvoecouplle w: Below 1010 WΩ
External input resistance	• Re sti : Be o 5 Ω Per ire (The resistance of each wire should be the same.)
Dielectric strength	2000 V a.c. 60 for 1 min Mechracnaical : iM.in.01 tmoillioanns tsimies.
Relay life expectancy Ambient temperature · humidity	• Elect i l : M n 1 0 h us d t mes. (277 V a.c. 6 A Resistive load) 0 ~ 50 °C, 35 ~ 85% R.H (Without condensation)
Weight (g)	• HY 1000 : 210 • HY 2000 : 270 ※ Including brackets

Dimension and Panel cutout


HY 1000

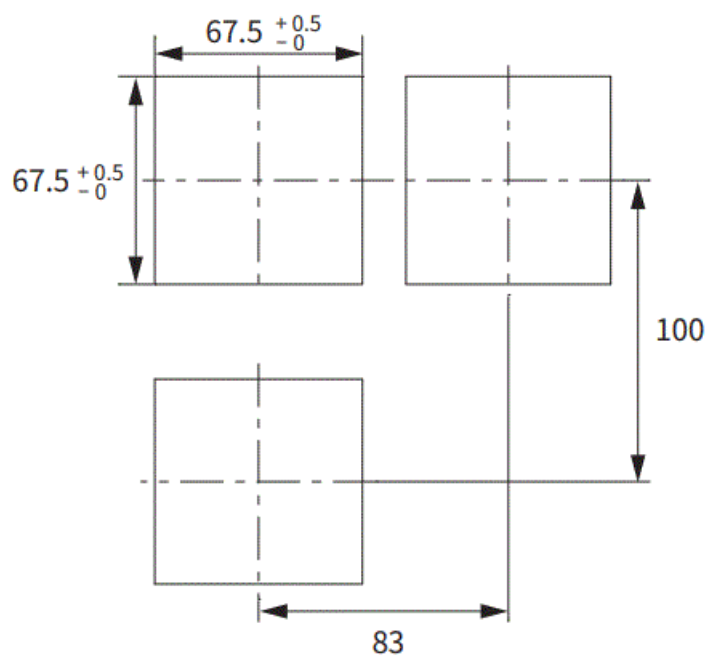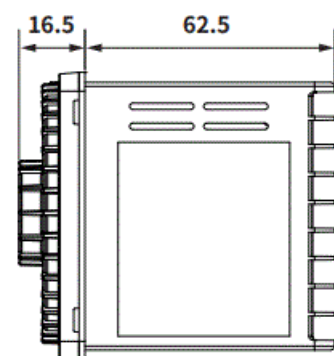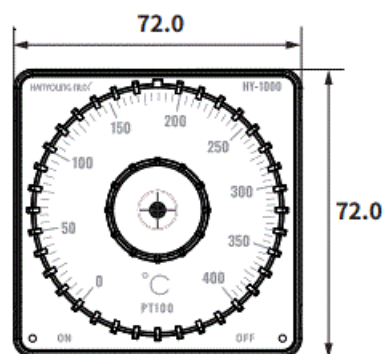

HY 2000

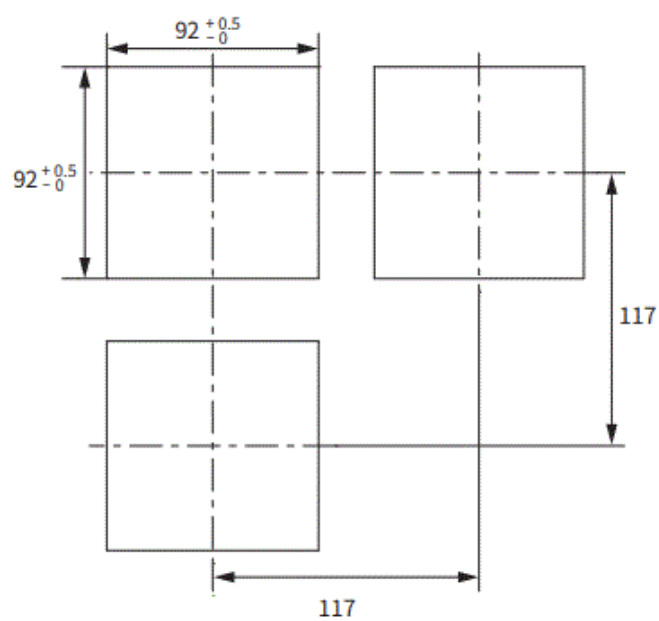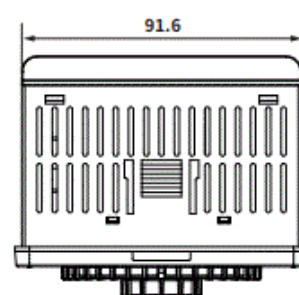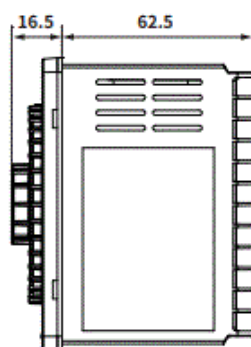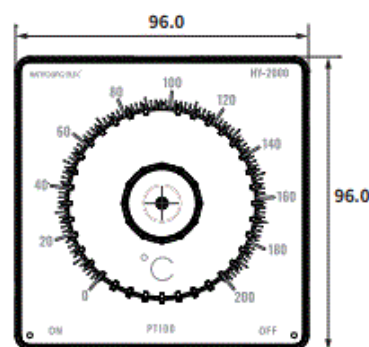

Connection diagram

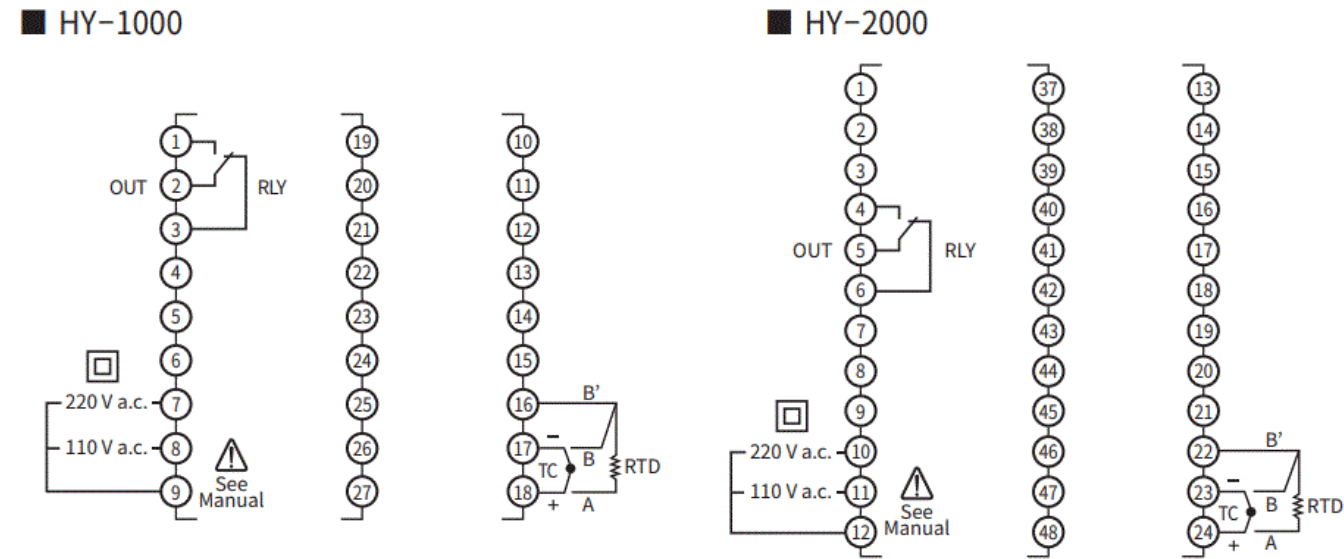

Documents / Resources

	<p>HANYOUNG NUX HY-1000 Analog Temperature Controller [pdf] Instruction Manual HY-1000 Analog Temperature Controller, HY-1000, Analog Temperature Controller, Temperatur e Controller, Controller</p>
--	---

References

- [H HANYOUNG NUX](#)