



HardHead 012654 Log Barrow Instruction Manual

[Home](#) » [HardHead](#) » HardHead 012654 Log Barrow Instruction Manual 

Hard Head

012654

Log Barrow
Instruction Manual



LOG BARROW

OPERATING INSTRUCTIONS

Important! Read the user instructions carefully before use. Save them for future reference. (Translation of the original instructions).


Jula reserves the right to make changes. For the latest version of operating instructions, see www.jula.com

MLA AB, BOX 363.5853224 VARA

2022-01-27

© Jula AB

①		M8X60	2PCS	④		2PCS
②		M6X35	4PCS	⑤		2PCS
③		M8X55	2PCS			

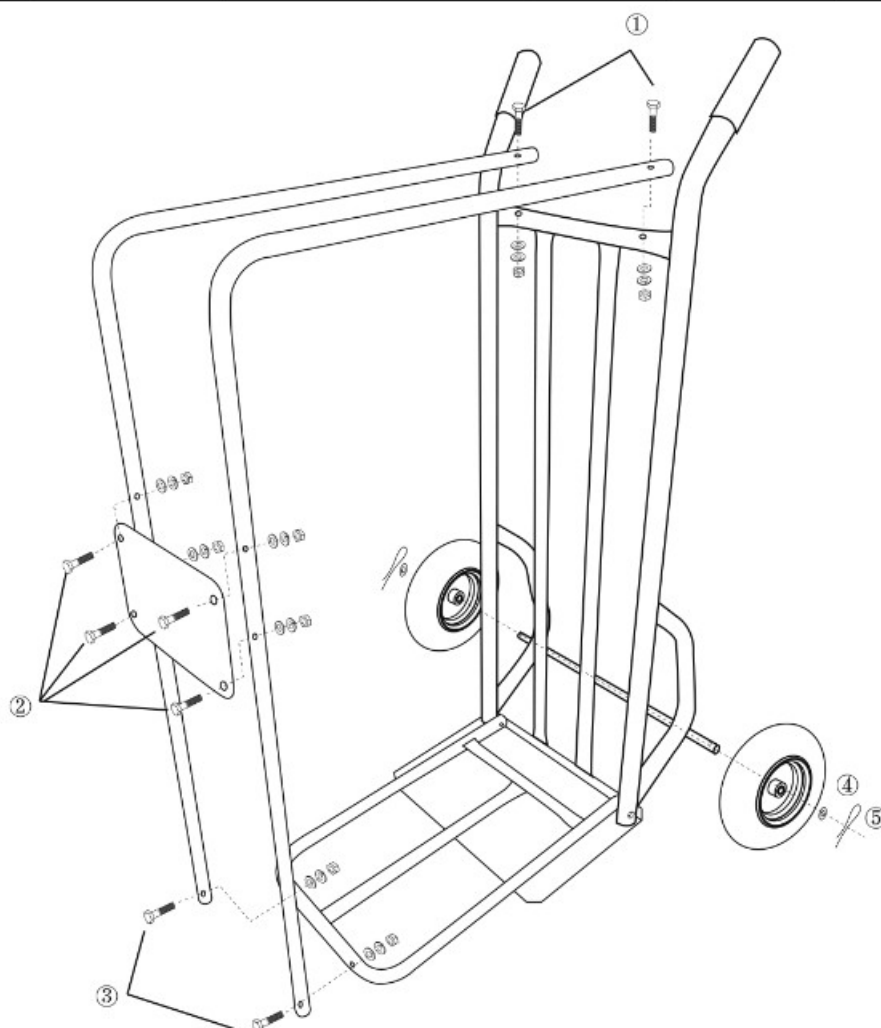

Maximum load: **150 Kg**

Contents

[1 Documents / Resources](#)

[2 Related Posts](#)

Documents / Resources

[illegible]

[HardHead 012654 Log Barrow](#) [pdf] Instruction Manual
012654, Log Barrow