



HARPER HSB-PG01 Table Blender Instruction Manual

[Home](#) » [HARPER](#) » HARPER HSB-PG01 Table Blender Instruction Manual 

Contents

- [1 HARPER HSB-PG01 Table Blender](#)
- [2 PURPOSE OF THE DEVICE](#)
- [3 EQUIPMENT](#)
- [4 PRODUCT DESCRIPTION](#)
- [5 HOW TO USE THE MIXING CUP](#)
- [6 CLEANING METHOD](#)
- [7 IMPORTANT SAFETY INSTRUCTIONS](#)
- [8 STORAGE CONDITIONS](#)
- [9 TECHNICAL SPECIFICATIONS](#)
- [10 SAFE DISPOSAL](#)
- [11 WARRANTY](#)
- [12 Manufacture](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)



HARPER HSB-PG01 Table Blender



Thank you for choosing HARPER products. Before using, read the operating instructions and save them in case you have any questions about the maintenance of the device.

 
PURPOSE OF THE DEVICE

The blender is designed for grinding, mixing, and whipping products. With it, you can prepare soups, mashed potatoes, smoothies, and cocktails.

EQUIPMENT


- Blender – 1 pc
- Instructions – 1 pc
- Warranty card – 1 p

PRODUCT DESCRIPTION

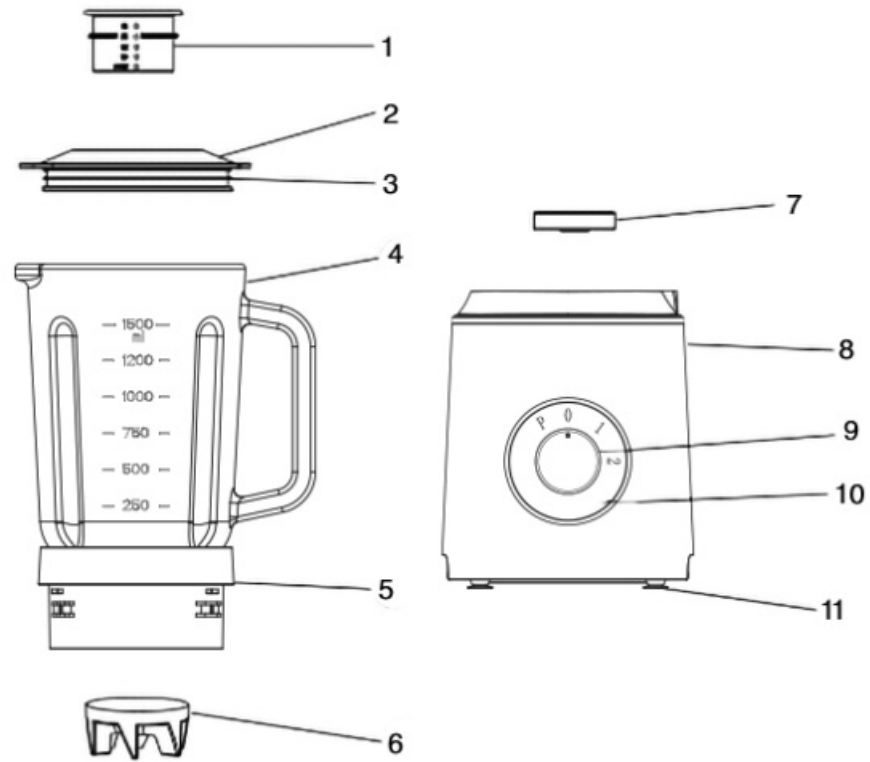


1. Measuring cup
2. Cover
3. Seal ring
4. Glass Jar 1.5L
5. Jar holder with blade
6. Upper clutch
7. Motor clutch
8. Product body
9. Switch knob
10. Switch panel
11. Rubber feet

 
HOW TO USE THE MIXING CUP

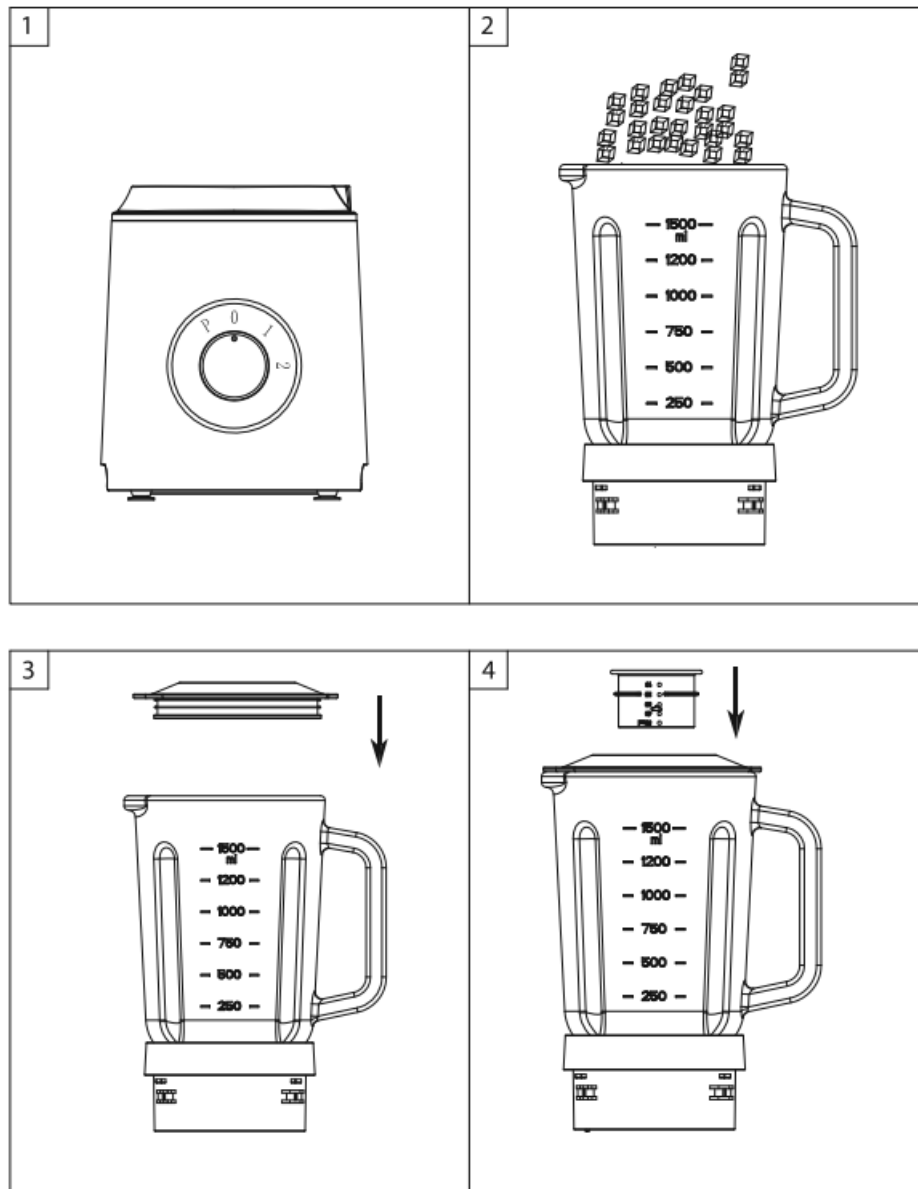

1. Place the main unit on a flat, dry workbench, make sure that the switch knob is set to “O” before turning on the power (see Figure 1), and plug in a power source that meets the requirements on the main unit’s nameplate.
2. Wash the mixing cup to ensure that there are no other debris in the mixing cup. Cut the vegetables or fruits to be processed into small pieces, put them into the cup (see Figure 2), add an appropriate amount of water, and then cover the cup lid and cup. Cap (see Figure 3/4). Note that the amount of water added must not exceed the maximum capacity of the beaker. (Food is $\frac{2}{5}$ of the cup capacity and water is $\frac{3}{5}$.
 - **Example:** 600 grams of carrots, 900 grams of water and stir for 3 minutes)

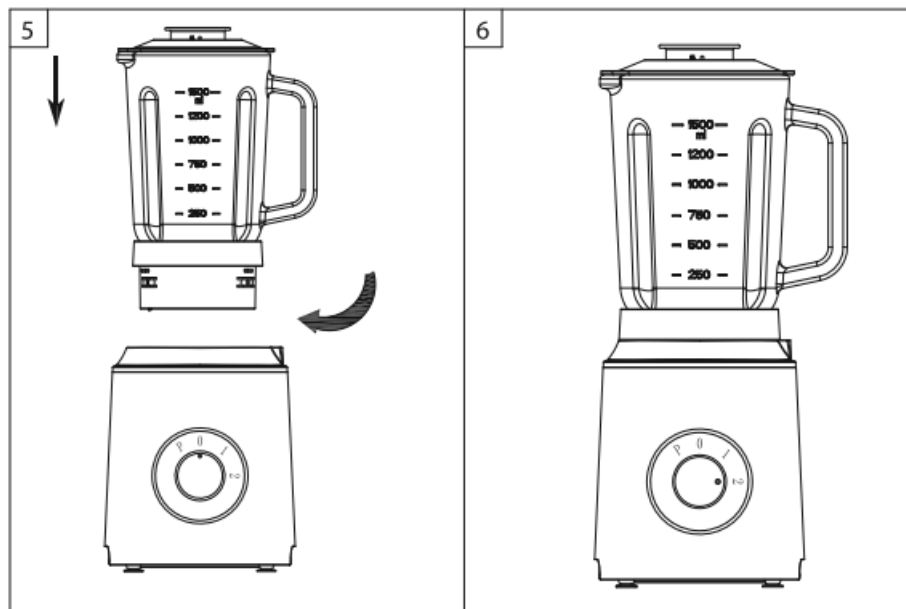 


3. After inserting the drive connector of the lower end of the mixing cup vertically aligned with the output shaft of the motor base, hold the handle of the cup to rotate the cup clockwise, and snap the cup into the lock on the main unit to confirm the installation When the stirring cup holder presses the safety ejector lever on the host, the safety switch in the host is touched) (see Figure 5).
4. When processing, first turn the knob counterclockwise to "P" for several times, and then turn the knob to the corresponding "Gear" to process. Position, if higher speed is needed, turn the switch knob to the "2nd gear" position. Figure 6.
5. Depending on the volume and variety of processed foods, users can choose 2 gears from low to high, that is, low gear with small capacity and easy processing; otherwise, high gear.
6. If you want to see the stirring effect halfway, you can rotate to open the small transparent cover, or you can add fruits, vegetables or water from the small halfway.

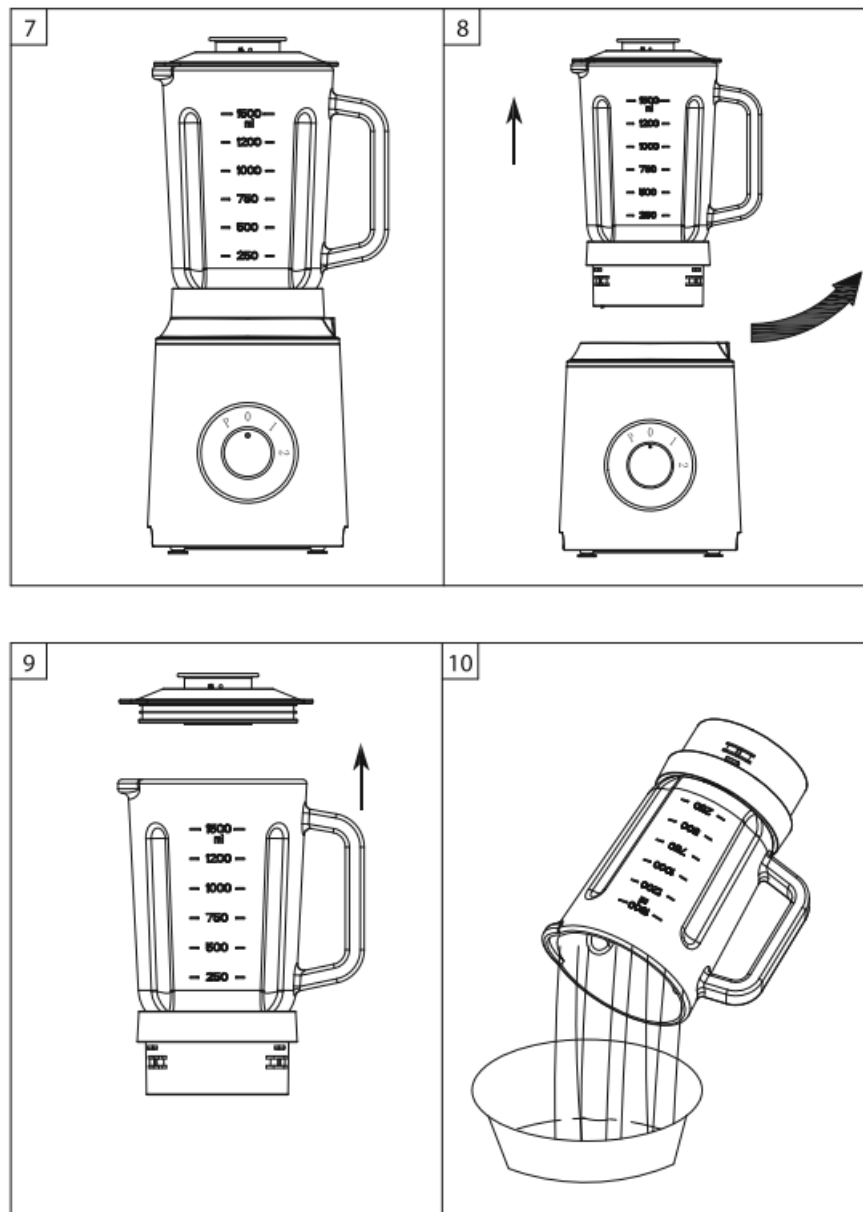 


7. After use, turn the switch knob to "0 stop" (as shown in Figure 7), unplug the power cord to stop the machine, turn the mixing cup counterclockwise by about 30 degrees, and then remove the cup (see figure 8) Pour the contents of the cup into the prepared utensil. (Figure 9/10)
8. Do not spray water or other liquids during use.

 CLEANING METHOD

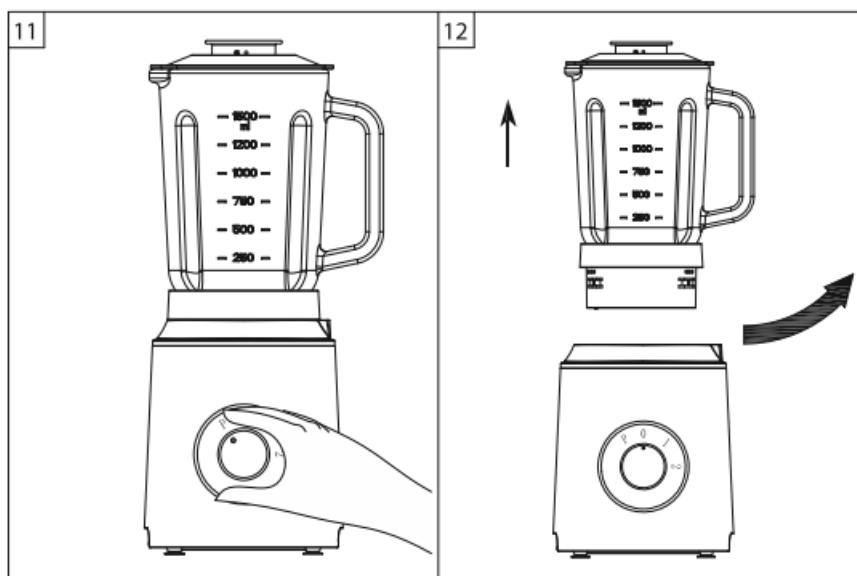

 1. Add the right amount of warm water and a small amount of food detergent when cleaning the mixing cup, cover the cup cover and turn the switch knob "P" to run for about 10 seconds (see Figure 11); you can also immerse the mixing cup in water Brush cleaning.
 2. After stirring, turn the switch knob to the "O" position, unplug the power cord and remove the mixing cup from the host (see Figure 12), then remove the cup cover assembly and pour out the water. Use a dry cloth towel Dry the blender.
- **(Note:** the mixing knife in the cup is very sharp, be careful to hurt your hands)

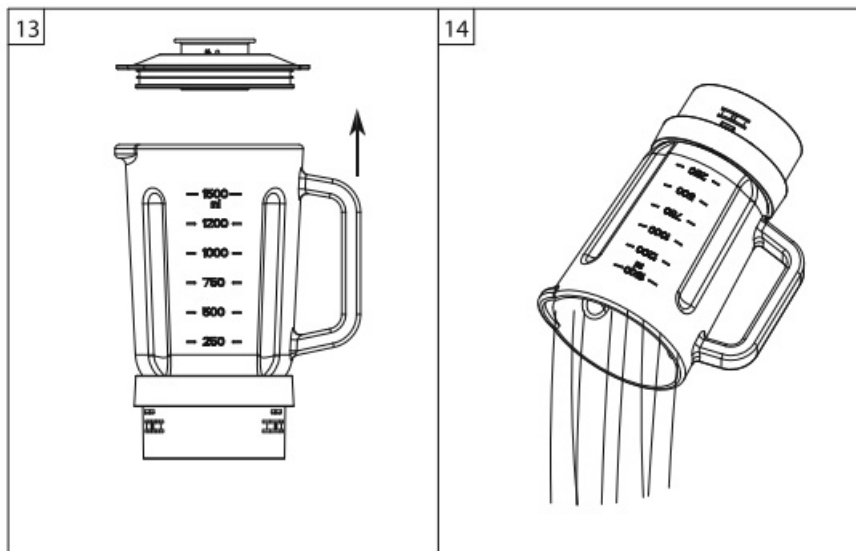

3. The main body should be wiped clean with a damp cloth. Do not rinse with water to avoid damaging the machine.

IMPORTANT SAFETY INSTRUCTIONS

Your safety is important to us. Please read the information below before using this appliance.

1. The device must be connected to a household power supply with a voltage of ~ 220-240 V and a frequency of 50 Hz.
2. Before using for the first time, carefully wash the detachable parts and all attachments and accessories.
3. Try to avoid touching the wire, plug and other parts of the device with wet hands.
4. In case of any problems, first of all disconnect the device from the power, then contact the service center.
5. Do not use the instrument for purposes other than its intended purpose, under heavy load conditions, or for professional purposes.
6. Use accessories purchased directly with this product.
7. Avoid contact with moving parts of the appliance: keep hands, clothing and hair, as well as kitchen utensils as far as possible.
8. Before starting, make sure that the appliance jar is securely closed and locked.
9. If the operation of the device is difficult or blocked due to not chopped ingredients, first disconnect it from the mains, then clean it and turn it back on.
10. Do not remove the cover until the moving parts have come to a complete stop.
11. When transporting, hold the device with both hands by the housing.
12. Do not grind hard foods (bones, extra hard nuts, ginger rhizomes, grains, etc.).
13. Do not leave the device unattended in the presence of children and/or disabled persons.
14. To avoid injury during installation, relocation, removal of attachments, cleaning the device and its parts, turn off

the device, including from the socket.

15. Do not use the device continuously for more than 2 minutes. Allow to cool for 15 minutes before switching on again.
16. This device is equipped with overheating protection. The device automatically shuts off when overheated. After switching off, let the device cool down to room temperature for 30 minutes. Then the device can be used again.
17. Do not touch the outer surface of the engine compartment after prolonged use of the device.
18. Be careful when handling hot ingredients.
19. The device is not intended for unattended use by persons (of any age) with reduced physical, sensory or mental capabilities, lack of knowledge and experience. Explain to the children that this appliance is not a subject of play.
20. Warn against possible injury due to improper use and handling.
21. Handle sharp cutting surfaces with extreme care.
22. The device is intended for grinding small amounts of ingredients: do not exceed their weight indicated in the instructions.
23. This appliance should not be used by children of preschool and primary school age. Keep the device and its power cord out of their reach.
24. Children over the age of 10 are only allowed to use the appliance under adult supervision.
25. Use the device only on level, stable surfaces.

STORAGE CONDITIONS

Before storing the appliance, make sure that it is disconnected from the power supply and completely cooled down. Complete all cleaning and maintenance requirements. Wind up the power cord. Store the appliance in a cool, dry place. It is most convenient to carry or transport the device in its original packaging, without placing heavy objects on top that can lead to the deformation of the packaging and damage to the device.

MALFUNCTIONS AND METHODS OF THEIR ELIMINATION

Signs of a problem	Possible causes	Method of elimination
The device doesn't work	There is no voltage in the household network	Wait for the power supply to resume
	The plug is not inserted into the outlet or the outlet is faulty	Make sure you have a connection
Increased noise during operation	The noise increases with increasing speed or overload	Reduce the load by reducing the number of components or taking a break from work
Unstable motor operation	Lubrication production/hardening of the lubricant at low temperatures / the motor is overloaded	Reduce the load on the device in the available ways or contact the service.
The motor is not working		

TECHNICAL SPECIFICATIONS

- **Model:** HARPER HSB-PG01
- **Bowl capacity:** 1.5 L
- **Number of blades:** 4
- **Power:** 220-240V 150 Hz
- **Power consumption:** up to 700 W
- **Power cable length:** 0.9 #0.1 m
- **Case Material Overall:** Plastic/Metal/Glass
- **dimensions:** 183 x 395 x 195 mm
- **Weight:** 3 kg

SAFE DISPOSAL

This marking indicates that this product should not be disposed of together with other household waste throughout the EU. To prevent possible harm to the environment or human health by uncontrolled disposal of waste, dispose

of it responsibly to promote the sustainable reuse of material resources. To return a used product, use the return and collection systems or contact the seller from whom the product was purchased. It can accept this product for environmentally safe disposal.

WARRANTY

The products passed all the assessment procedures established in the technical regulations of the Customs Union and the Eurasian Economic Union. The product complies with all necessary technical regulations of the Eurasian Community. Detailed information about product certification, technical regulations, certificate number and date, validity period, and issuing organization you can find on the website <http://harper.ru/certification> or by calling technical support at 8-800-600-7107


- **Life duration of product:** 36 months
- **Warranty period:** 12 months

Warranty service is provided on the base of warranty card that goes together with thy product. Warranty card and User manual are inevitable parts of the product. For additional information about the product and authorized service centers you may find at www.harper.ru or by telephone 8-800-600-7107.

Manufacture

- Harper International Trading Limited 1 SF, Radio City, 505 Hennessy Road, Causeway Bay, HongKong
- Made in PRC
- **Importer:** LLC «Progress-Plyus», App.11, floor 2, Build.SO, k.1, Udaltsova Str., Moscow, Russia, 119607,
- **tel:** +74951330210
- info@harper.ru

Documents / Resources

 <p>The image shows the cover of the instruction manual for the Harper HSB-PG01 Table Blender. It features the Harper logo at the top, a small image of the blender, and text in multiple languages including Russian and English. The English text reads: 'TABLE BLENDER', 'ENGLISH INSTRUCTION MANUAL', 'YETIEN KUPENIYU', and 'HSB-PG01'.</p>	<p>HARPER HSB-PG01 Table Blender [pdf] Instruction Manual HSB-PG01 Table Blender, HSB-PG01, Table Blender, Blender</p>
---	--