 


## HARVEST AVR2 Media Encoder User Guide

[Home](#) » [Harvest](#) » HARVEST AVR2 Media Encoder User Guide 

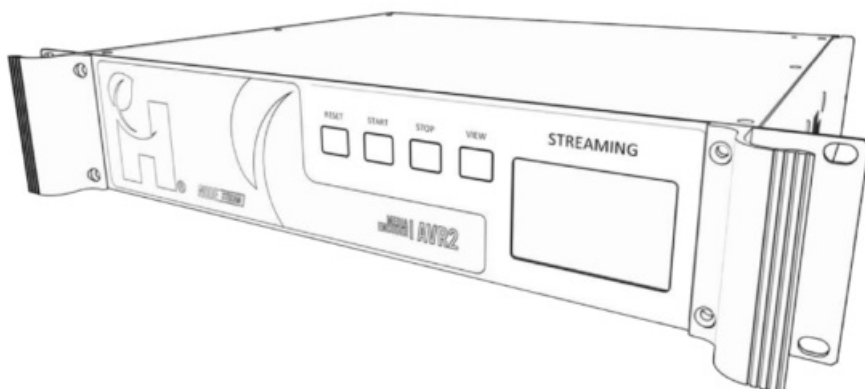

**MEDIA ENCODER AVR2**  
**Quick Start Guide**



## Contents

 
- [1 Overview](#)
- [2 In the Box](#)
- [3 Overview](#)
- [4 Installation](#)
- [5 Start-Up](#)
- [6 Troubleshooting](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

## Overview


### Welcome to the Nodestream AVR2

Please read these instructions carefully before using this product and save this quick start guide for future reference. See the User Manual for full details via the QR code on the back page.

### Multi-cast streaming solution

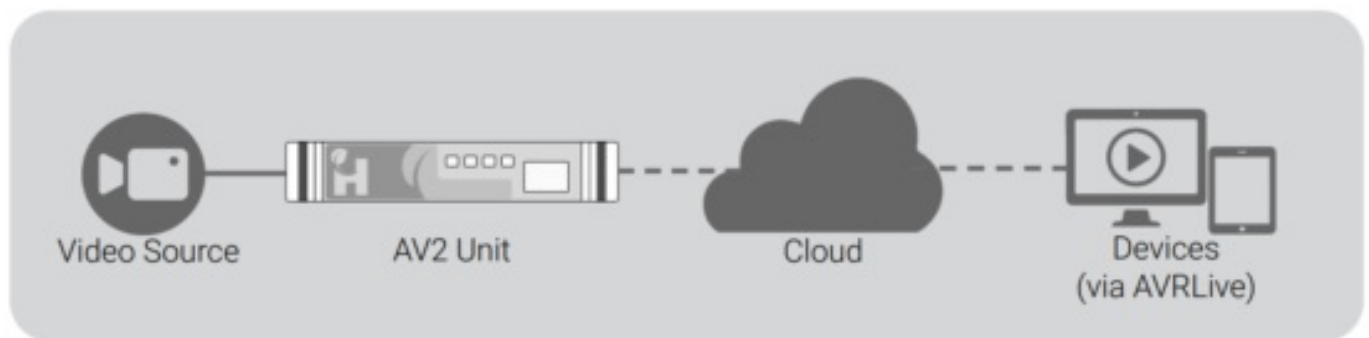

## In the Box

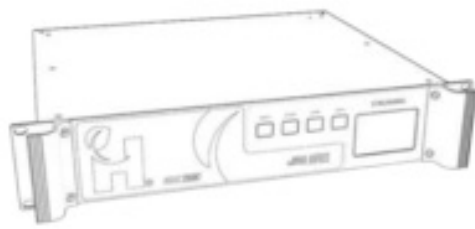 

AVR2™



D9 null modem



D9 gender changer



1 x power cable  
(region specific)




1 x HDMI cable



1 x Ethernet cable

## Overview
 
### Rear Connections

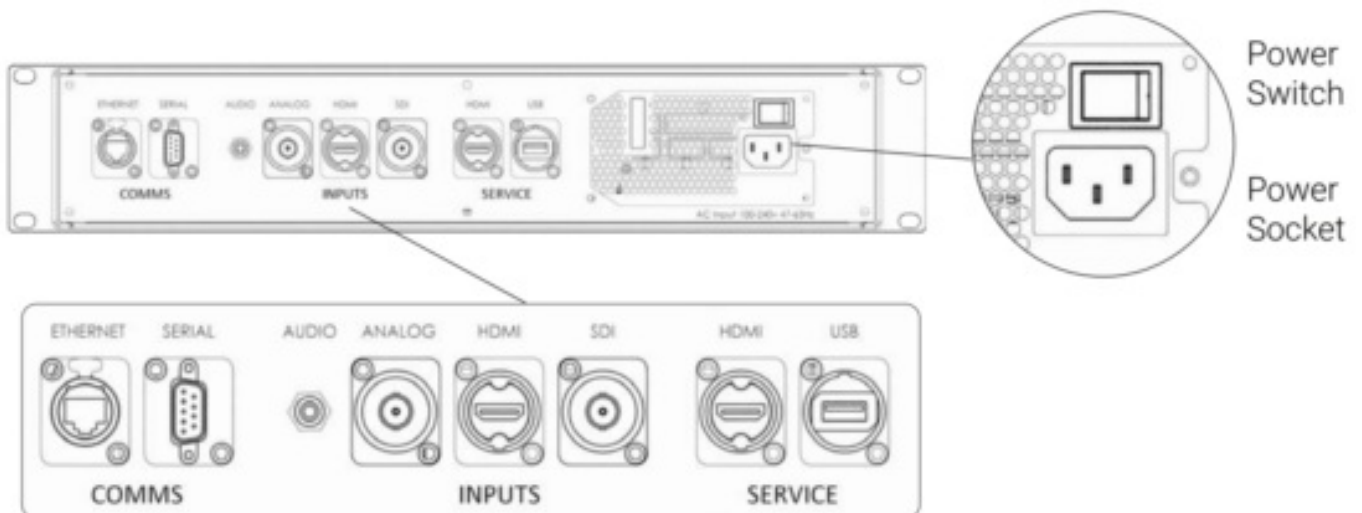


**IMPORTANT:** 100-240VAC 47/63HZ only (UPS Recommended)




For further information on connections, refer to AVR2 User Manual.

### Front Interface

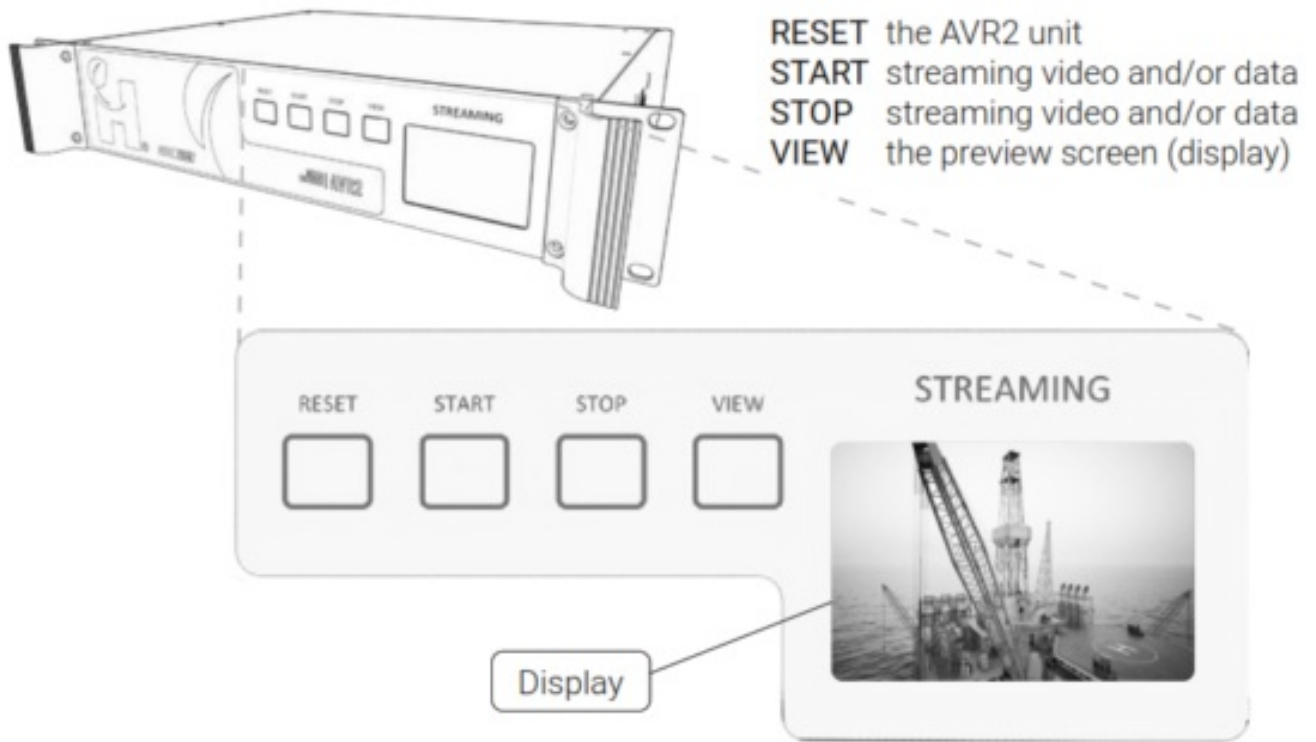 


## Installation

 The AVR2 is designed to be mounted in a standard 19" rack and occupies 2U of space

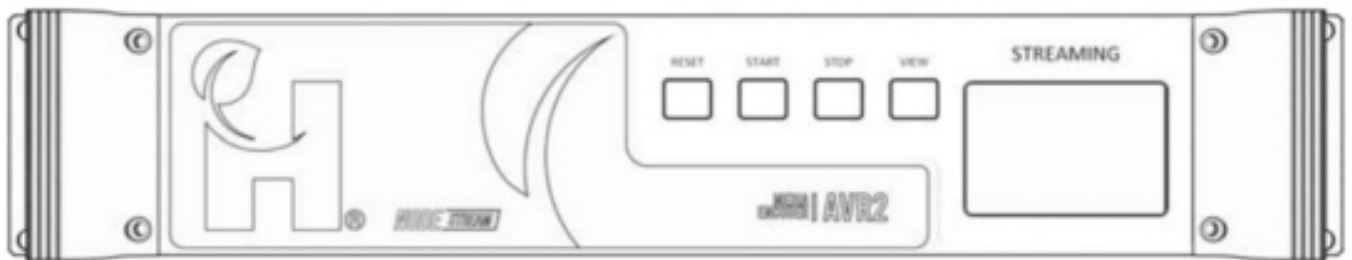


Ensure there is adequate spacing around the AVR2 device for cooling. The cool air travels in the direction shown by the arrows.  
No vertical loading on the AVR2 device.

 1. Install at all 4 mount points

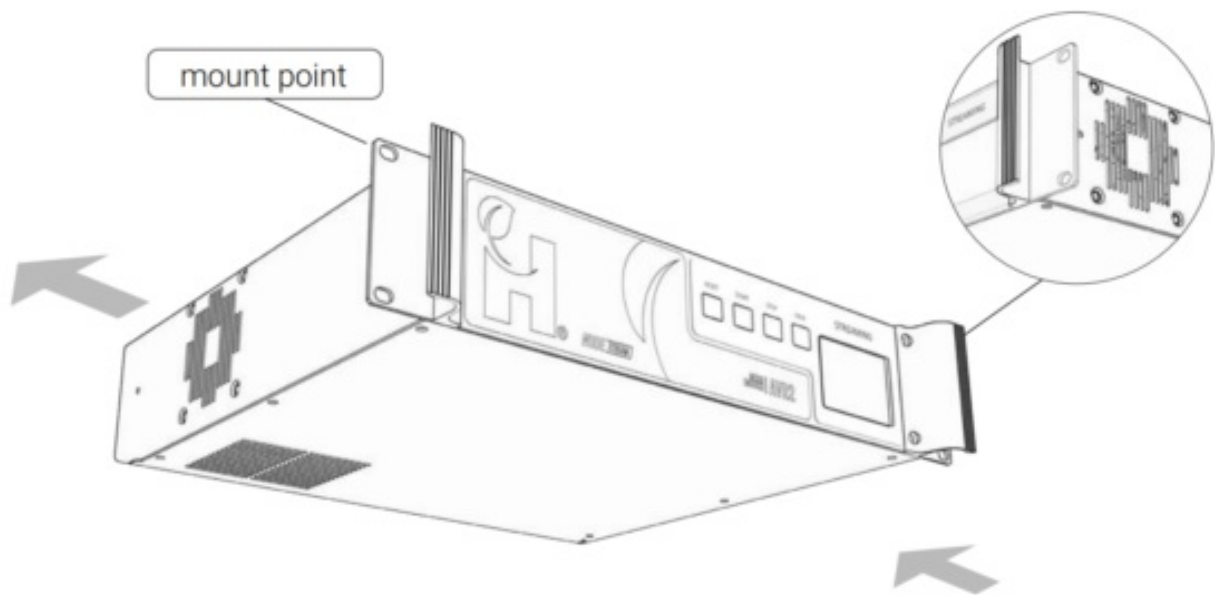

 
2. Connect Ethernet, video source input, and power cable

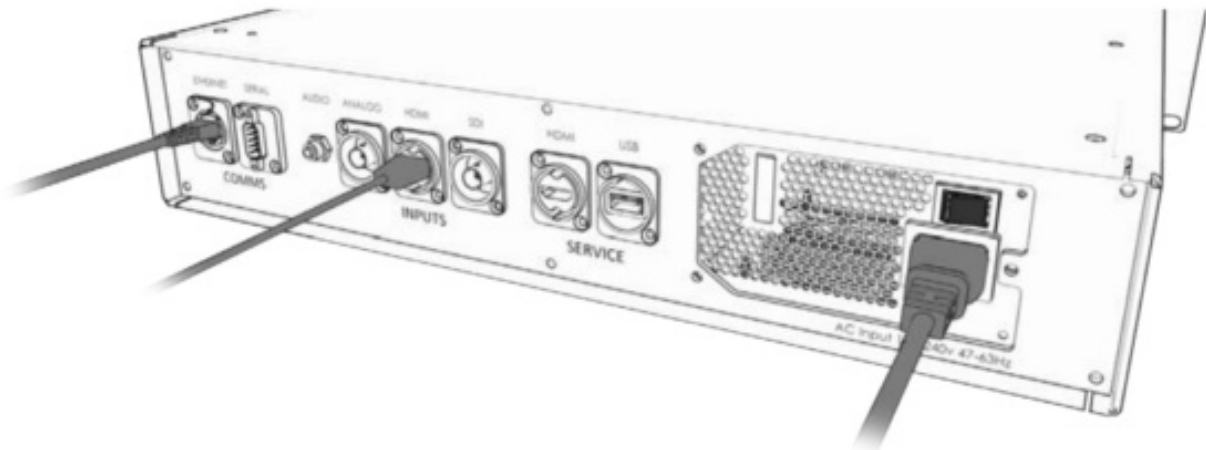

The AVR2 device requires an open Internet connection, refer to the User Manual for information on advanced network configuration.

## Start-Up

 
1. Switch on the power (on the rear of the AVR2 unit)

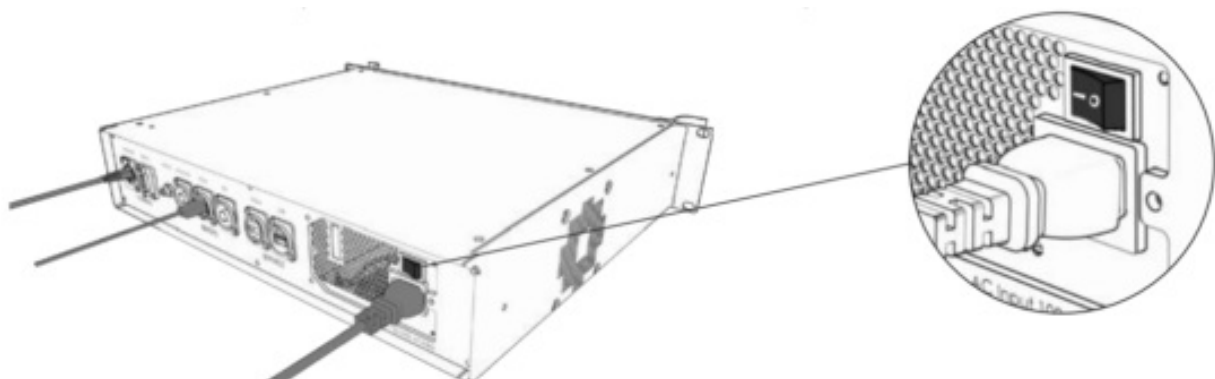




The device is configured to auto-start when AC power is applied.

 2. The LEDs on the interface panel turn on and the display turns on

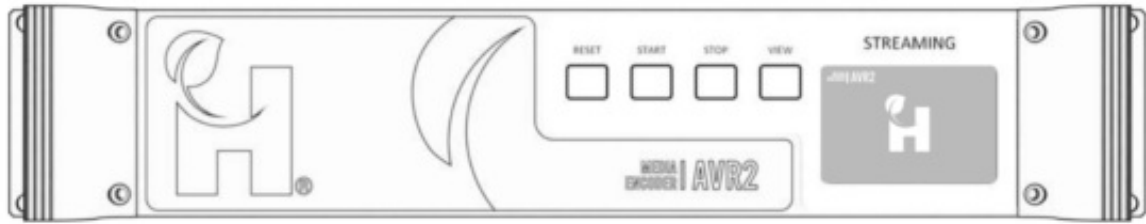

 3. Once the unit has powered up, the status is indicated by the STREAMING LED

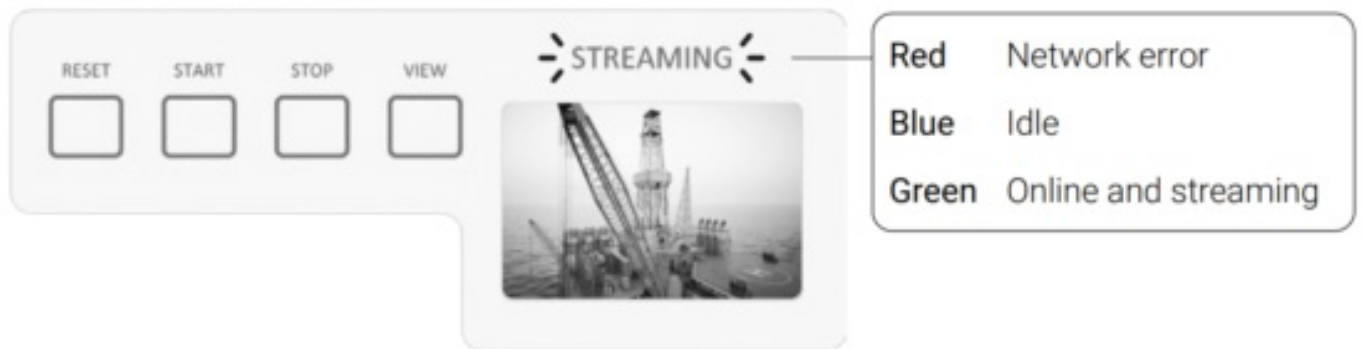

The display automatically turns off after 5 minutes. Press **View** to wake the display.



User Resources

<https://qrco.de/bcfxAB>



Contact and Support  
[support@harvest-tech.com.au](mailto:support@harvest-tech.com.au)

## Troubleshooting

Issue	Cause	Resolution
Device not powering	PSU switch set to off position AC not connected	Confirm AC is connected and switch is in the on position
'No signal' displayed on a screen	Video source not connected or powered Damaged cable	Test the video source with an alternate display Change out the cable
No network -Streaming LED solid Red	No connection to the server	Check Ethernet cable is plugged in Ensure required firewall ports are unblocked (see User Manual) Check network settings, and contact your network administrator to diagnose network issues.



#### AVR Live Web Access

AVR2™ Dashboard access: <http://avrlive.com/>




Harvest Technology Pty Ltd  
7 Turner Ave, Technology Park Bentley WA 6102, Australia  
[www.harvest.technology](http://www.harvest.technology)

All rights reserved. This document is the property of Harvest Technology Pty Ltd. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, photocopy, recording, or otherwise without the written consent of the Managing Director of Harvest Technology Pty Ltd.

HTG-TEC-GUI-005\_2

## Documents / Resources

	<p><a href="#">HARVEST AVR2 Media Encoder</a> [pdf] User Guide AVR2 Media Encoder, AVR2, Media Encoder</p>
---	--

## References

- [🌐 Welcome to AVR | Dashboard](#)
- [🌐 Turner Rooms for Rent](#)

Manuals+.