



HAVIT Lightning HV3277T-BLK-12V Virsma Step Light Instruction Manual

[Home](#) » [HAVIT LIGHTNING](#) » HAVIT Lightning HV3277T-BLK-12V Virsma Step Light Instruction Manual 



 
 
Lightning HV3277T-BLK-12V Virsma Step Light Instruction Manual

Contents

- [1 Virsma Step Light Installation Instructions](#)
- [2 Important Safety Issues:](#)
- [3 Steps for Installation:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Virsma Step Light Installation Instructions

Model No.	HV3277T-BLK-12V		HV3277T-WHT-12V
Name		Visma	
Material		Aluminum	
Colour	Black		White
IP Rating		IP54	
Input Voltage		12v DC	
Lamp Base		Built-in LED	
Lamp Wattage		1x 4w	
Colour Temp		TRI Colour – 3000k, 4000k, 5500k	
Lumens		110lm, 1151m, 1201m	
CRI		> 80	
Wiring		Parallel	
Dimmable		No	
Warranty		2 Years Replacement	

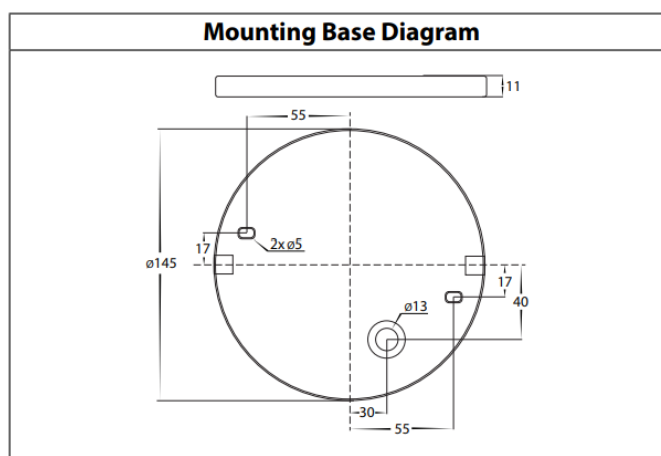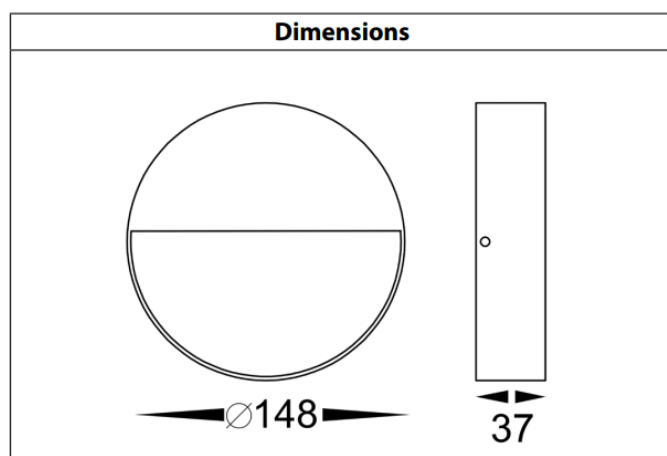

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Do not exceed maximum wattage restrictions for globes: 240V GU10 = 35w / 12V MR16 = 20w
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- When installing low voltage fittings, Voltage to fitting must be within +or- 5% of voltage required and cannot be installed more than 25m from LED Driver, if not within this allowance warranty will be voided.
- Aluminum and 304SS fittings must not be installed within 2km of any saltwater environments.

- When installing copper fittings, gloves must be worn to avoid any oils transferring to the fitting.
- All 316 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on the fitting. (Warranty does not cover Tea Staining)
- All o-rings and seals must be in place correctly to maintain the warranty.
- These instructions may be updated at any time due to product improvements, Please visit the website for the most current installation instructions.




Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Loosen Allen screws on side of the fitting and remove the face and set it aside.
3. Install base plate to the wall in the desired location
4. Using an appropriate 12v DC LED Driver – DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V
5. Connect the cable – If more than one fitting is installed, wiring must be done in parallel.
6. Fitting is preset to 3000k, to change the slide switch to desired color temperature
7. Reattach face to base plate making sure Allen screws are tight to avoid water penetration
8. Apply silicon around the edge of the fitting to prevent any water from getting inside to electrical connections.
9. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician


Contact Details:

143 Beauchamp Road Matraville NSW 2036 Australia	Tel: 02 93818300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au
---	---

Warranty Terms & Conditions*	Additional Information	
	 HV3277T-WHT-12V	 HV3277T-BLK-12V
https://havit.com.au/pages/warranty-terms-and-conditions	https://havit.com.au/collections/all/products/hv3277t-blk-virsma-black-round-led-step-lights	https://havit.com.au/collections/all/products/hv3277t-wht-virsma-white-round-led-step-lights



 Documents / Resources

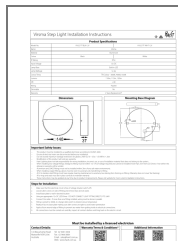

[HAVIT Lightning HV3277T-BLK-12V Virsma Step Light](#) [pdf] Instruction Manual
HV3277T-BLK-12V, HV3277T-WHT-12V, HV3277T-BLK-12V Virsma Step Light, HV3277T-BLK-12V, Virsma Step Light, Step Light, Light

References

- [HAVIT Lighting](#)

[Manuals+.](#)