

[Skip to content](#)

[Manuals+](#)

User Manuals Simplified.



HCS OVU810018 Sentinel Reader Instructions

April 3, 2022 April 3, 2022

[Home](#) » [HCS](#) » [HCS OVU810018 Sentinel Reader Instructions](#) 

Contents [hide](#)

[1 HCS OVU810018 Sentinel Reader Instructions](#)

[2 Instruction](#)

[3 Documents / Resources](#)

[3.1 References](#)

[3.2 Related Manuals / Resources](#)



HCS OVU810018 Sentinel Reader Instructions



Instruction



The Sentinel App for Windows is required for operating the Sentinel solution. The complete suite should be implemented in consultation with Omni's official installers. For detailed operating instructions, visit <https://sway.office.com/zuBpbc4BcQsoEvA7>

- **Nature of supply voltage:** 4.5V-5.5V
- **Rated voltage:** 5V
- **Rated power:** 5W

Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Do not throw away this product with the regular household or office waste at the end of its life, but hand it over to an official collection point for recycling, if available in your country. Correct disposal helps prevent negative consequences for the environment and for human health. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Documents / Resources



[HCS OVU810018 Sentinel Reader \[pdf\] Instructions](#)

OVU8100A, 2AGOF OVU8100A, OVU810018 Sentinel Reader, OVU810018, Sentinel Reader

References

- [Welcome to Sentinel](#)

Related Manuals / Resources

[HCS TRX2001 Sentinel Shield Instructions](#)

HCS TRX2001 Sentinel Shield OVERVIEW Highest specified charging temperature: 45°C Lowest specified charging

temperature: 0°CMaximum specified charging current: 400mA...



[HCS TRX2101 Sentinel Scanner Instructions](#)



HCS TRX2101 Sentinel Scanner OVERVIEW Indicator Status A Constant Powered on B Fast Blinking Searching for Reader B...

[uni SD Reader Troubleshooting Instructions](#)



uni SD Reader Troubleshooting Instructions SD Reader Troubleshooting 1. Can't Read My Cards: a. Check if the otg...

[Smartos 39998L1 SMARTENTRY Encoder Reader Instructions](#)



SMART ENTRY Encoder Reader Using Instruction INSTALL APP 1.1 iPhone Open the App Store on your Click on...

[Manuals+,](#)

- [home](#)
- [privacy](#)