

# **HDMI EXTENDER 14.99 KVM Point Point Extender User Manual**

Home » HDMI EXTENDER » HDMI EXTENDER 14.99 KVM Point Point Extender User Manual





**User Manual KVM Point to Point Extender** 14.99.3042



#### **Contents**

- 1 Important Safety Notice
- 2 Features
- 3 Package Contents
- **4 Installation Requirements**
- **5 Interfaces**
- **6 Installation Procedures**
- 7 Q: There is no output on screen when all connections are correct?
- 8 Specification
- 9 Documents / Resources
  - 9.1 References


# **Important Safety Notice**

- 1. Please distinguish the transmitter and receiver before installation.
- 2. Do not disassemble the machine to repair the product during the working process to avoid electric shock.
- 3. Please cut off the power before installation. Live installation may damage the equipment.
- 4. Do not expose the devices to rain, moisture and liquid.
- 5. Use a 5V/1A DC adapter only. Make sure the specification matched if using 3rd party DC adapters.

#### **Features**

- 1. Zero latency.
- 2. Support up to 1080p@60Hz resolution.
- 3. Supports Cat6/6A/7 network cables, the transmission distance is up to 70 meters.
- 4. Support KVM remote control and management.
- 5. Support 1080p HDR10, YUV4:4:4.
- 6. Support EDID pass-through.
- 7. Transmitter supports HDMI loop-out.
- 8. Receiver supports 3.5mm stereo audio output.
- 9. Audio formats supported: PCM, LPCM, DTSHD, DTSAudio
- 10. Automatically adjusts parameters to match different network cables and achieve the best display performance.
- 11. Lightning Protection, Surge Protection, ESD Protection.

# **Package Contents**

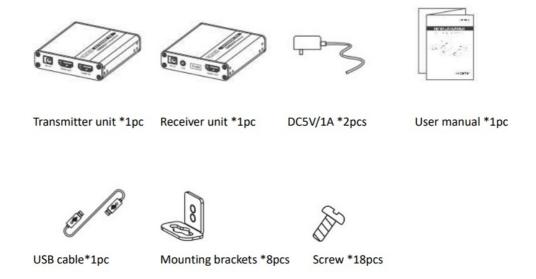


# **Installation Requirements**

- 1. HDMI source device (compute graphics card, DVD, PS4, HD monitoring equipment etc.)
- 2. HDMI display device like SDTV, HDTV, projector with HDMI port.
- 3. UTP/STP Cat6/6A/7 cable, follow standard IEEE-568B, It is recommended to select a network cable with less loss and crosstalk.


# **Interfaces**

1. Transmitter (TX)

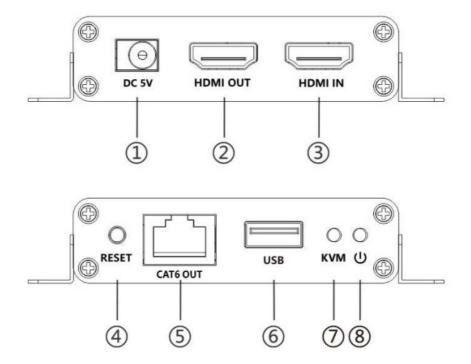

1	DCSV input	Connect to the 5V1A DC power adapter.		
2	HDMI output	Connect to a local HDMI display device.		
3	HDMI input	Connect to a HDMI source device.		
4	Reset button	Press the button to restart the device.		
5	R.145 signal output	Output modulated HDMI signal.		
6	USB-A port	Connect to the computer.		
7	KVM indicator	a)The indicator lights off when computer is not connected. b)The indicator stays on when computer is connected. c)The indicator flashes when the mouse and keyboard work normally with a sign al transmission.		
8	Power/Signal indicator	<ul><li>a) The indicator flashes when the device is powered but has no HDMI signal tran smission.</li><li>a) The indicator stays on when there is an HDMI signal transmission.</li></ul>		


# 2. Receiver (RX)

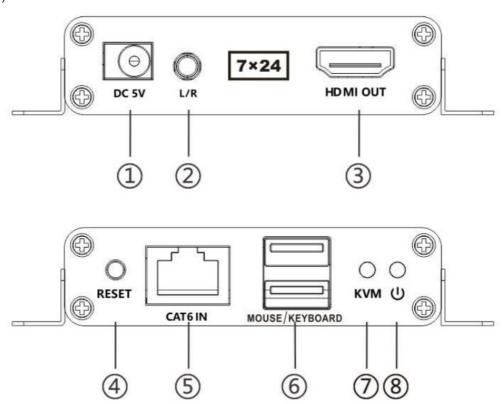

1	DCSV input	Connect to the 5V1A DC power adapter.	
2	3.5mm L/R out	Connect headphones or power amplifiers to output stereo audio.	
3	HDMI output	Connect to a HDMI display device.	
4	Reset button	Press the button to restart the device.	
5	Rj45 signal input	Input modulated HDMI signal.	
6	USB-A port	Connect mouse and keyboard.	
7	KVM indicator	a)The indicator lights off when computer is not connected b)The indicator stays on when the mouse and keyboard is connected c)The indicator flashes when the mouse and keyboard work normally with a signa I transmission	
8	Power/Signal indicat or	b) The indicator flashes when the device is powered but has no HDMI signal tran smission b) The indicator stays on when there is an HDMI signal transmission	

# **Installation Procedures**

#### 1. Connection

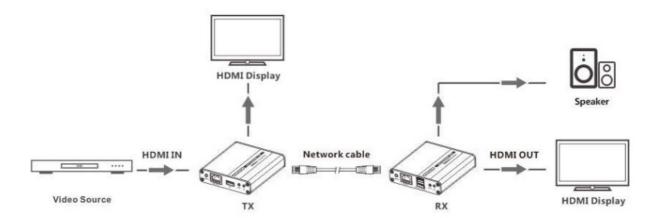

**Note:** When using the 3.5mm stereo audio jack, please switch the audio output format of the signal source to PCM format.

The network cable should follow the standard of IEEE-568B. It is recommended to select a network cable with less loss and crosstalk.

2.

1-Orange/white	2-Orange	3-Green/white	4-Blue
5-Blue/white	6-Green	7-Brown/white	8-Brown



# 3. Connection instruction

1) Connect the source device to the HDMI in port of the transmitter with an HDMI cable, and connect the HDMI

out port of the receiver to the display device with another HDMI cable.

- 2) Connect the CAT out port of the transmitter and the CAT in port of the receiver via a network cable (Cat6/6A/7).
- 3) If using HDMI loop out, connect the display device to the HDMI OUT port of the transmitter.
- 4) Plug the power supply into the device to get started.

**NOTE:** It is recommended to use a length range within 2~70m network cable. If the cable is too short, there may be no display output because the signal is too strong. If the cable is too long, the output may be with poor quality.

#### Q: There is no output on screen when all connections are correct?

- A: 1) Please make sure the HDMI cables support the resolution of the output signal from the source device. 2) Please check and make sure the network cable inserts to the RJ45 port well. 3) Restart the transmitter or receiver by pressing the reset button.
- Q: Black screen happened on the display/monitor?
- A: 1) Check if the length of the cable is within the specified range. 2) Reset the transmitter to re-built the connection.
- Q: The display shows unusual color or no sound?
- A: 1) Reset the transmitter or receiver to re-built the connection. 2) Check if the HDMI cables are connected well. 3) Reconnect the network cable.

# **Specification**

	Items	Specification
Power supply	Voltage/Current	DC 5V/1A
1 Ower suppry	Power consumption	TX<2.5W RX<2.5W
	HDMI compliance	HDMI 1.3
	HDCP compliance	HDCP 1.4
HDMI Performance And Interface	HDMI resolution	800×600, 1024×768, 1280×720, 1280×960, 1366×768, 1440×900, 1680×1050, 1920×1080, 480i@60Hz, 480p@60Hz, 576i@50Hz, 576p@50Hz, 72 0p@50/60Hz, 1080i@50/60Hz, 1080p@ 24/25/30/50/60 Hz
7 tria interiace	Supports audio formats	PCM, LPCM, DTSHD, DTSAudio
	Input and output TMDS signal	0.7-1.2Vp-p(TMDS)
	Input and output DDC signal	5Vp-p(TTL)
	Input cable length	58m(AWG24)

	Output cable length	58m(AWG24)
Transmission Dist ance	Cat6/6A/7	570m
Protection Level	Electrostatic protection of the whole machine	Implementation of the standard: IEC61000-4-2 la Contact dis charge level 4 (8KV)  Ib Air discharge level 4 (15KV)
	Working temperature	-2060°C
Operating Environ ment	Storage temperature	-3070°C
	Humidity (no condensation)	0 —90%RH
	Dimension	75.0(L) x 85.0(W) x 20.0(H)mm
	Material	Aluminum alloy material + crystal panel
Body properties	Treatment process	Grit blast
	Color	Black
	Weight	TX: 180g RX:180g

#### **Disclaimer**

The product name and brand name may be registered trademark of related manufactures. ™ and ® may be omitted on the user manual. The pictures in this user manual are just for reference. The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. We reserve the rights to make changes without further notice to a product or system described herein to improve reliability, function, or design.

#### **Documents / Resources**



HDMI EXTENDER 14.99 KVM Point Point Extender [pdf] User Manual 14.99 KVM Point Point Extender, 14.99, KVM Point Extender, Point Extender, Extender

#### References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.