

HDMI HDES200KVM KVM 200 extender User Manual

Home » HDMI » HDMI HDES200KVM KVM 200 extender User Manual

Contents

- 1 HDES200KVM KVM 200 extender
 - 1.1 USER MANUAL
 - 1.2 HDMI 200M KVM IP EXTENDER
 - 1.3 Enjoy the vivid world
 - 1.4 Introduction
 - 1.5 Features
 - 1.6 Specifications
 - 1.7 Physical interface diagram HDMI

Transmitter

- 1.8 Application diagrams
- 1.9 Connection and operation
- 1.10 The Package contents:
- 2 Documents / Resources
- **3 Related Posts**

HDES200KVM KVM 200 extender

HDMI®

HIGH-DEFINITION MULTIMEDIA INTERFACE

USER MANUAL

HDMI 200M KVM IP EXTENDER

Enjoy the vivid world

Introduction

HDMI 200M Extender over IP is based on TCP/IP standard. It transmits your HD display with the high resolution up to 200 meters away from your DVD or computer source by using one CAT5e/6 cable. At the same time, it's convenient to transmit HDMI audio and video source by point-to point mode, one point-to-many mode and cascade connection mode.



Features


- * Support point-to-point mode, one point-to-multi point mode and cascade connection mode.
- * 802.3 Ethernet standard.
- * Support IR remote control
- * Support USB mouse and keyboard extension.
- * The design of pure hardware, plug and play, no need for additional software.

Specifications

Resolutions.. 480p,720p, 1080p Audio..... Sample rate:32kHz,44.1kHz and 48kHz code IR remote control 38 KHz (NEC) Power adapter.. DC:5VMA


The Max Power consumption...HDMI sender:2.5W HDMI receiver:2W Size(L-W-H 163*87*24mm Weight...474g x2 Operating Temperature/Humidity. 0C-45 C/10%-80%RH(no condensation) Storage Temperature/Humidity. 10 C-70 C/5%-90%RH(no condensation)

Physical interface diagram HDMI Transmitter

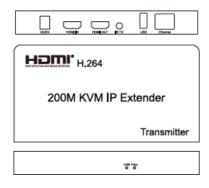

Port Description


DC/5V 5V power supply for the Transmitter
HDMI-IN —HDMI input ,connect HDMI signal source
HDMI – OUT HDMI output, connect HDMI display device
IR-TX Connect IR transmitter
USB USB output, connect computer
Ethernet Network interface by cat5e/6

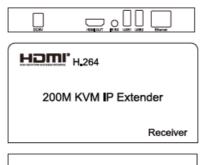


Port Description

DC/5V 5V power supply for the receiver HDMI -OUT HDMI output, connect HDMI signal device IR-RX Connect IR receiver USB1-2 USB input, mouse/keyboard input Ethernet Network interface by cat5e/6

Application 1:

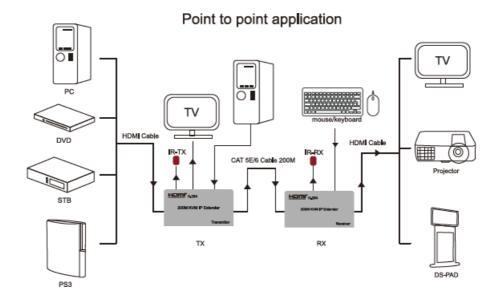

Application 2:

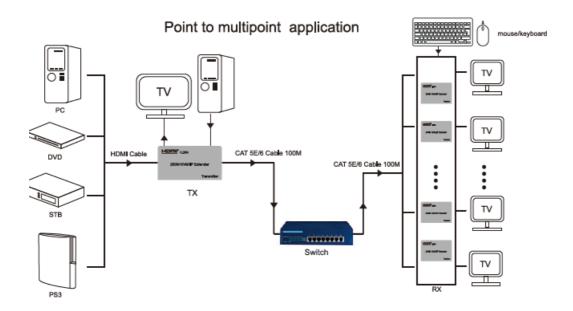

Application diagrams HDMI 200M extender over IP is used in audio-visual conference, command and control center, ticketing platform, home theater, multi-media teaching, conference system and so on.







audio-visual conference

command and control center

home theater

Connection and operation

- 1. Connect the HDMI source (such as DVD, PS3, STB) to the "HDMI IN of transmitter by HDMI cable.
- 2. Connect the "HDMI out of Receiver to HDTV display by HDMI cable.
- 3. Connect the Transmitter and Receiver with one cat5e/6 cable (recommend).the furthest distance is 200M.
- 4. Connect the "IR receiver "into "IR-RX" port on receiver, and "IR transmitter" into the "IR-TX" on transmitter,


and make sure the IR transmitter aim at IR port of the source.

- 5. Plug the mouse and keyboard into the USB port of the receiver, and connect the USB port of the transmitter with the computer if you need the KVM control function.
- 6. Connect two pieces of 5V power supply to the transmitter and receiver, and power on the HDTV display and HDMI source.

The Package contents:

- 1. Transmitter 1PCS
- 2. Receiver 1PCS
- 3. 5V/1A Power adapter 2PCS
- 4. IR cable 1Pair
- 5. User's Manual 1PCS

Documents / Resources

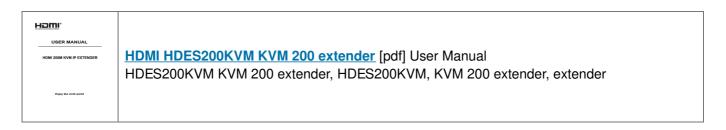

Manuals+,