



HDWR Global HD640 QR Code And Barcode Scanner Automatic User Manual

[Home](#) » [HDWR Global](#) » HDWR Global HD640 QR Code And Barcode Scanner Automatic User Manual 



User Manual

AZTEC QR code and barcode scanner automatic
HD640

Contents

- 1 Specifications:
- 2 Key features:
- 3 Set contents:
- 4 System Settings
- 5 Scan mode settings
- 6 Bitrate settings
- 7 Setting trailing characters (suffix)
- 8 Beep settings
- 9 Data format settings
- 10 Barcode reading settings
- 11 Documents / Resources
 - 11.1 References

Specifications:

- **Warranty:** 2 years
- **Color:** Gray-yellow
- **Processor:** ARM 32-bit
- **Sensor Type:** CMOS
- **Scanning method:** manual (on the button) / automatically (after bringing the code closer)
- **Scan Acknowledgement:** Light and Sound Signal

- **Scan Speed:** 100 scans/second
- **Reading distance:** 50 cm
- **Print Contrast:** $\geq 25\%$
- **Cable length:** 180 cm
- **Interface:** USB
- **Power Supply:** DC 5V
- **Working Current:** 250mA
- **Odczytywane kody 1D:** UPC-A, UPC-E EAN-8 EAN-13, Code 128, GS1-128, Code 39 Code 32, Code 93, Code 11, Interleaved 2 of 5 Matrix 2 of 5 Industrial 2 of 5 (Straight 2 of 5) Codabar (NW-7) GS1 Databar (Omnidirectional, Limited, Expanded) itp.
- **Odczytywane kody 2D:** QR Code, Micro QR Code, Data Matrix, PDF417, Micro PDF 417, Aztec
- **Device dimensions:** 17.5 x 7 x 8.5 cm
- **Package dimensions:** 20 x 11 x 8 cm
- **Device weight:** 300 g
- **Weight with packaging:** 500 g

Key features:

- Scan QR, Aztec and barcodes quickly and precisely.
Including the ability to scan the Aztec code found on the vehicle registration certificate
- Automatically reads barcodes both printed and displayed on LCD screens
- Ergonomic design
- Robust construction

Set contents:

- Barcode Scanner
- USB cable
- Manual

System Settings

	
Restoring settings Factory	Software version

Scan mode settings

	
Manual mode (scanning per button) – default	Automatic mode (scanning when code is detected)

Bitrate settings

	
9600 (default)	115200

Setting trailing characters (suffix)

	
Add CR (default)	Dodanie CR + LF
	
Adding a TAB	No end sign

Beep settings

	
Beep On (Default)	Beep off

Data format settings

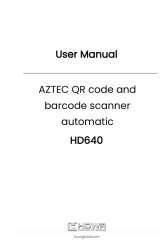
	
GB2312	Unicode (UTF-8)

Barcode reading settings

	
Scan all codes on	Scanning all 1D codes enabled
	
Scanning all 2D codes on	Normal and reverse code reading enabled

hdwrglobal.com

Documents / Resources

	HDWR Global HD640 QR Code And Barcode Scanner Automatic [pdf] User Manual HD640 QR Code And Barcode Scanner Automatic, HD640, QR Code And Barcode Scanner Automatic, And Barcode Scanner Automatic, Barcode Scanner Automatic, Scanner Automatic, Automatic
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.